



IMPORTANT!

**When installing this Prisma II™ bdr™ product,
do not use Prisma II Chassis slots 1 through 4.**

When operating Prisma II bdr Processors, slots 1 through 4 of the Prisma II Chassis are reserved exclusively for the Prisma II Power Supplies.

If any Prisma II bdr 2:1 or 4:1 Transmit or Receive Processor is installed in a Prisma II Chassis, then no module other than a power supply may be installed in slots 1 through 4 of that Chassis.

A Power Supply Blank Must Be Installed

If only one power supply is installed in the Prisma II Chassis, **you must install a Prisma II Power Supply Blank**, part number 716308, in the unused power supply slot.

If you have questions about this issue
call Cisco Services for assistance.
Follow the menu options to speak with a service engineer.

Cisco Systems, Inc.
5030 Sugarloaf Parkway, Box 465447
Lawrenceville, GA 30042

678 277-1120
800 722-2009
www.cisco.com

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: www.cisco.com/go/trademarks.

Third party trademarks mentioned are the property of their respective owners.

The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

Product and service availability are subject to change without notice.

© 2001, 2008, 2013 Cisco and/or its affiliates. All rights reserved.

January 2013 Printed in USA

Part Number 78-748839-01 Rev C