



SAN Devices, Release 12.2.2

# Table of Contents

New and Changed Information	1
Storage Devices	2
Storage Overview	2
Summary	3
SAN Insights	5
Event Analytics	5
Congestion Analysis	6
Zoning	6
Optics	6
FDMI	6
RDP	6
Device	6
Storage Providers	7
Adding SMI-S Provider	8
Hosts	10
Summary	11
SAN Insights	13
Event Analytics	14
Congestion Analysis	14
Zoning	14
Optics	15
DIRL	15
FDMI	15
RDP	15
VMs	15
Devices	17
Enclosures	19
Inventory	19
Inventory - Host Enclosures	19
Inventory - Storage Enclosures	20
Performance	22
Performance - Host Enclosures	22
Performance - Storage Enclosures	22
Enclosure Members	22
Copyright	24

# New and Changed Information

The following table provides an overview of the significant changes up to this current release. The table does not provide an exhaustive list of all changes or of the new features up to this release.

Release Version	Feature	Description
NDFC 12.2.2 release	Added a <b>Perf. Graph</b> button to the <b>Topology</b> view for displaying performance data with colors based on Rx and Tx utilization percentages	<p>Beginning with NDFC 12.2.2, you can view performance data for the Inter-Switch Links (ISLs) and the connected storage or host devices by clicking on the <b>Perf. Graph</b> button within the <b>Topology</b> view. When you click on the <b>Perf. Graph</b> button within the <b>Topology</b> view, you can see colors in the legend in the <b>Topology</b> view based on the latest Receive (RX) and Transmit (Tx) utilization percentages.</p> <p>For more information, see the following sections:</p> <ul style="list-style-type: none"><li>• Storage Overview &gt; <a href="#">Summary</a> and <a href="#">SAN Insights</a></li><li>• Hosts &gt; <a href="#">Summary</a> and <a href="#">SAN Insights</a></li></ul>
NDFC 12.2.2 release	Support added for visualizing performance data with moving dotted lines between the connected storage or host devices.	<p>With this feature, after clicking the <b>Perf. Graph</b> button within the <b>Topology</b> view, you can visualize performance data displayed with moving dotted lines between the connected storage or host devices. NDFC displays the performance data in the legend of the <b>Topology</b> view with a color based on the latest Receive (Rx) and Transmit (Tx) utilization percentages. If no data is available, the links display in gray.</p> <p>For more information, see the following sections:</p> <ul style="list-style-type: none"><li>• Storage Overview &gt; <a href="#">Summary</a> and <a href="#">SAN Insights</a></li><li>• Hosts &gt; <a href="#">Summary</a> and <a href="#">SAN Insights</a></li></ul>
NDFC 12.2.2 release	VM utilization information	<p>Receive (Rx) and Transmit (Tx) Utilization percentages of the bandwidth of the Fiber Channel links for the host are available, which helps to deliver a visual indication of which VM is utilized more than others over the storage networks. This is useful information when trying to find which VM is potentially causing issues on a server. For more information, see Hosts &gt; <a href="#">VMs</a>.</p>

# Storage Devices

1. In Nexus Dashboard Fabric Controller, navigate to **Manage > Inventory > Storage Devices**.

The **Storage Devices** page displays information about storage devices.

2. To view all the storage devices or only the devices with failed links, toggle the setting between **Show All Storages** and **Show Only Storage Devices with Down Paths**.

Additionally, you can filter the enclosures based on a search criterion that you specify in the **Filter by attributes** field.

The following table describes the fields that appear on the **Storage Devices** page.

Field	Description
<b>Enclosure Name</b>	Specifies the storage name. The icon suffixed to the host name indicates the type of discovery. It displays a brown icon with fcD if the enclosure is discovered using FC discovery, or a green icon with SD if discovered using SMI-S discovery.  Click on the enclosure name to view the Storage Enclosure details.
<b>Up/Total Paths</b>	Displays the total available paths versus the used paths for all the devices in the enclosure.
<b>Type</b>	Indicates if the storage device is discovered through FC discovery or SMI-S discovery.
<b>Peak Tx(%)</b>	Displays the transmitting speed in percentage.
<b>Peak Rx(%)</b>	Displays the receiving speed in percentage.
<b>CRC</b>	Displays the Cyclic Redundancy Check (CRC) errors.
<b>Corrected FEC</b>	Displays the number of corrected Forward Error Correction (FEC) errors.
<b>Uncorrected FEC</b>	Displays the number of FEC errors that are not corrected.
<b>ITW</b>	Displays the number of Invalid Transmission Words (ITW) detected by the device.
<b>Last Update Time</b>	Specifies the date and time at which the storage device was last updated.
<b>IP Address</b>	Displays the IP address of the storage device.
<b>Protocol</b>	Specifies if the storage device is streaming SCSI protocol traffic or NVMe protocol traffic. This column displays data only for the devices for which data is streamed to NDFC using SAN Insights.

## Storage Overview

1. In Cisco Nexus Dashboard Fabric Controller, go to **Manage > Inventory > Storage Devices**.
2. On the **Storage Devices** tab, double-click on any **Enclosure Name** item to open the **Storage Overview** page which provides detailed information about each storage device.

The details of a storage device depend on the type of device discovered, and the provider's adherence to the SMI-S standards.


The tabs and their fields in the **Storage Overview** screen are explained in the following sections.

- o [Summary](#)
- o [SAN Insights](#)
- o [Event Analytics](#)
- o [Congestion Analysis](#)
- o [Zoning](#)
- o [Optics](#)
- o [FDMI](#)
- o [RDP](#)
- o [Device](#)

## Summary

The **Summary** tab of the **Storage Overview** page displays information about the selected storage device, its status and path information between various storage enclosures.

<b>Storage Information</b>	
<b>Name</b>	Name of the storage device.
<b>MAC Address</b>	Displays the MAC address of the storage device.
<b>WWNs</b>	Specifies the number of WorldWideNames (WWNs).
<b>IP Address</b>	Displays the IP address of the storage device.
<b>Protocol</b>	Specifies if the transmission protocol is SCSI or NVMe.
<b>OS Version</b>	Specifies the operating system of the storage device.
<b>FCIDs</b>	Specifies the associated FCID.
<b>Storage Status</b>	
<b>Up/Total Paths</b>	Displays the total available paths versus the used path details for all the devices in the enclosure.
<b>Paths</b>	
<b>Device Alias</b>	Specifies the device alias for the storage device.
<b>Status</b>	Specifies the status of the storage device.
<b>Fabric</b>	Displays the name of the fabric associated with the storage device.
<b>Switch Interface</b>	Specifies the interface on the switch that is connected with the storage device.
<b>Rx (Mbps)</b>	Displays the average and the maximum speed in bytes/seconds while receiving data.
<b>Tx (Mbps)</b>	Displays the average and the maximum speed while transmitting data.
<b>PWWN</b>	Specifies the assigned port WWN for the storage device.

<b>Updated Time</b>	Specifies the date and time at which the storage device was last updated.
<b>Topology</b>	<p>Provides an end-to-end topology layout and path information between host enclosures and storage enclosures. You can hover on the device icons to see a tool tip that displays details about the device. Click on the green circle icon on the sides of the switch to display the <b>Interface Details</b> for the interface. It displays details about the interface.</p> <p>Beginning with NDFC 12.2.2, you can view performance data for the Inter-Switch Links (ISLs) and the connected storage enclosures by navigating to the <b>Storage Overview &gt; Summary</b> page and clicking on the <b>Perf. Graph</b> button within the <b>Topology</b> view at the bottom of the page. When you click on the <b>Perf. Graph</b> button, you can see colors and percentages in the legend based on the latest record of Receive (Rx) and Transmit (Tx) usage.</p> <p>You can visualize performance data displayed with moving dotted lines between the connected storage enclosures. NDFC displays the performance data in the legend of the <b>Topology</b> view with a color based on the latest Rx and Tx utilization percentages. If no data is available, the links display in gray.</p> <p>Beginning with NDFC 12.2.2, you can view a <b>Health Graph</b> button that displays the default topology. The <b>Table</b> button displays the data flow path from the host to the storage device. The <b>Table</b> button displays a tabular view of what is shown in the topology diagram.</p> <div style="display: flex; align-items: center; margin-top: 10px;">  <p>The <b>Health Graph</b> and the <b>Table Graph</b> buttons do not display for SAN Insights.</p> </div>
<b>Custom Graphing</b>	<p>Displays metrics on ECT/DAL/read/write times, active I/Os, aborts, failures etc. You can view the metrics based on two protocols, SCSI and NVMe. By default, the SCSI protocol is selected. The data is displayed for a maximum of 7 days. The refresh interval for <b>Custom Graphing</b> page is 5 minutes. Click on the <b>Play</b> icon to refresh every 5 minutes automatically.</p> <p>The Custom Graphing area has two tabs - <b>Graph</b> and <b>Table</b>. This is a freestyle dashboard where you can select multiple metrics and real-time data for the selected metrics is displayed in a multiline graph format and the data table displays the corresponding raw data. The data is configured to refresh every 5 minutes.</p> <p>You can also add multiple graphs for comparison by clicking on the <b>Add Graph</b> the top right. You can add a maximum of 3 graphs at a time. The <b>Auto Refresh</b> option is disabled by default. You must click the <b>Play</b> icon to enable the auto refresh.</p> <p>Click the <b>Download</b> button to download the table in .csv format. The download option is enabled only if the selected device has SAN insights feature enabled. Hover the mouse on the information (i)icon on the <b>Initiator</b> column. Click the icon that displays <b>Show Flow VMs</b> to open the <b>Flow VMs</b> window. You can view the VM names and IP addresses for the selected device.</p>

## SAN Insights

The **SAN Insights** tab of the **Storage Overview** page displays the Initiator-Target (IT) pairs, topology, average and total ECT/DAL/IOPS/throughput/read/write times, VM details and the switch interface for the selected host. You can view total read/write IOPS/throughput value for the selected enclosure.

Field	Description
<b>Initiator Target Pairs</b>	This table lists all the initiator-target pairs for the selected storage device. The flow table displays details of all the metrics on ECT/DAL/ IOPS/ Throughput/read/write times, Source Alias, SID, Destination Alias, DID, and the fabric along with their 1-hour average and baseline information.
<b>Topology</b>	<p>Provides an end-to-end topology layout and path information between the host enclosures.</p> <p>Beginning with NDFC 12.2.2, you can view performance data for the Inter-Switch Links (ISLs) and the connected storage enclosures by clicking on the <b>Perf. Graph</b> button within the <b>Topology</b> view. When you click on the <b>Perf. Graph</b> button, you can see colors and percentages in the legend based on the latest record of Receive (Rx) and Transmit (Tx) usage.</p> <p>You can also visualize performance data displayed with moving dotted lines between the connected storage enclosures. NDFC displays the performance data in the legend of the <b>Topology</b> view with a color based on the latest Rx and Tx utilization percentages. If no data is available, the links display in gray.</p> <p>On the <b>View</b> card, from the <b>Select Layout</b> drop-down list, you can choose one of the following layouts:</p> <ul style="list-style-type: none"> <li>• <b>Hierarchical</b></li> <li>• <b>Hierarchical Left-Right</b> (default view)</li> <li>• <b>Circular</b></li> <li>• <b>Random</b></li> </ul>
<b>FROM: TO:</b>	Displays details of all the metrics on ECT/DAL/read/write times, active I/Os, IOPs and throughput along with their 1-hour average and baseline information.
-	The middle table in the bottom row displays VM name and IP address for the IT pair selected in the <b>Initiator Target Pairs</b> table.
<b>Switch Interface</b>	Click on the topology to view the associated switch interface and the 1-hour average information.

## Event Analytics

The **Event Analytics** tab displays all the alarms that are raised and cleared and also the events that are generated for the host devices. For more information, see [Event Analytics](#).

## Congestion Analysis

Congestion Analysis enables you to view slow drain statistics for the storage devices. You can monitor the slow drain issue within any duration. You can view the data in a chart format and export the data for analysis. You can also view the topology that provides a high-level view of Tx wait, drops, credit loss recovery, over utilization, and port monitoring events.

## Zoning

Displays the zones under which the storage device is present. Use the Show Topology icon to the left of the zone name to view the zone topology. It displays hosts and storage devices pertaining to the zone and connected to a switch.

## Optics

Displays temperature, current, receiving/transmitting power and voltage data for the optics connected to the storage device.

## FDMI

Fabric-Device Management Interface (FDMI) retrieves management information about the attached Fiber Channel Host Bus Adapters (HBAs) and host operating systems. The FDMI table displays details about the link status, vendor, serial number, model, firmware version, and driver version of the storage device.

## RDP

Read Diagnostics Parameters (RDP) displays diagnostic data from the storage devices which can be used in analyzing and troubleshooting link issues. This page displays data from the ***show rdp fcid [fcid\_id] vsan [vsan\_id]*** command. To view sensor related information for a particular enclosure, click the link available under the **Sensors** column in the table.



Not all switches support the RDP command. The switch can poll for diagnostic information from the end devices using a polling interval.

## Device

This tab is available only for storage devices discovered through SMI-S discovery.

The following tabs on the **Device** tab provides information about the selected device.

<b>Summary</b>	Provides information about the storage provider. Storage array serial number, storage type and number of physical disks in the array are also displayed.
<b>Components</b>	Lists all the components in the storage device. Click on the component Name to view total storage capacity, usage details, and physical disks details.
<b>Pools</b>	Lists all the pools, their status and Raw capacity. Double-click the <b>POOL Name</b> to view the pool details.



<b>LUNs</b>	<p>Lists all the Logical Unit Numbers (LUN) in the storage array. It provides LUN ID, WWN, Status, and Capacity details for each LUN. Click on LUN Name to view further details about each LUN. Double-click a <b>LUN Name</b> to access the <b>LUN Detail</b> page.</p> <p><b>Host Interface</b>, <b>Zoning</b>, and <b>Storage Interface</b> values in <b>Host LUN Access</b> table is displayed only if the host accessing this LUN is part of the NDFC discovered fabric.</p>
<b>Host</b>	<p>Lists all the hosts in the selected storage. It provides the <b>Host Name</b>, <b>Node WWN</b>, and <b>WWN</b> details for each host in the Storage array. Click on a <b>Host Name</b> to view details about the host. You can view the relevant details on the <b>LUNs</b> tab and <b>Ports</b> tab within the <b>Host Detail</b> view.</p> <p><b>Fabric</b> and <b>Host Interface</b> values in <b>Host Ports</b> table is displayed only if <b>Host Port WWN</b> is part of the NDFC discovered fabric.</p>
<b>Processors</b>	<p>Lists all the processors and their status. It also displays the number of adapters for each processor. Double-click a <b>Processor Name</b> to open the <b>Processor Detail</b> page.</p>
<b>Ports</b>	<p>Lists all the ports in the storage device. Click the <b>Port Name</b> to view details about a port.</p>

## Storage Providers

The **Storage Providers** page displays the status of the Storage Management Initiative Specification (SMI-S) storage providers. An SMI-S provider can manage more than one array. Each array appears as a separate storage enclosure in the **Storage Providers** tab. These enclosure names are suffixed with a green icon with a Secure Digital (SD) label indicating that the device is discovered using SMI-S discovery.

In Cisco Nexus Dashboard Fabric Controller, go to the **Admin > Integrations > Storage Providers** tab.

The following table describes the fields that appear on the **Storage Providers** tab.

Field	Description
<b>Vendor</b>	<p>Specifies the vendor. Cisco NDFC supports the following vendors:</p> <ul style="list-style-type: none"> <li>▪ EMC</li> <li>▪ NetApp</li> <li>▪ IBM</li> <li>▪ HDS</li> <li>▪ PureStorage</li> <li>▪ HP</li> <li>▪ Other</li> </ul>
<b>Provider URL</b>	Specifies the SMI-S provider URL.
<b>Name Space</b>	Specifies the name space.

<b>Interop Name Space</b>	Specifies the interop name space.
<b>Port</b>	Specifies the port.
<b>Status</b>	Specifies the status.
<b>Secure</b>	Specifies if it is a secure connection.
<b>Discovery Status</b>	Specifies the discovery status.
<b>Last Updated Time</b>	Specifies the last updated time.

The following table describes the action items, in the **Actions** drop-down list, that appear on the **Admin > Integrations > Storage Providers** page.

<b>Action</b>	<b>Description</b>
<b>Add Provider</b>	Adds an SMI-S provider. For instructions, refer to <a href="#">Adding SMI-S Provider</a> .
<b>Edit Provider</b>	Allows you to edit an SMI-S provider. To edit, select a provider from the table and choose <b>Edit Provider</b> .
<b>Delete Provider</b>	Allows you to delete a provider from the list. To delete, select a provider from the table and choose <b>Delete Provider</b> .
<b>Rediscover Provider</b>	Allows you to rediscover a provider. Select a provider from the table and choose <b>Rediscover Provider</b> to scan for any changes. This triggers the discovery cycle outside its normal periodic polling.
<b>Purge Provider</b>	Allows you to purge the provider information. To purge, select a provider from the table and choose <b>Purge Provider</b> . This removes elements that are no longer available through discovery.

## Adding SMI-S Provider

To add an SMI-S provider from the Cisco Nexus Dashboard Fabric Controller, perform the following steps:

1. Choose the **Admin > Integrations > Storage Providers** tab.
2. Choose **Actions > Add Provider**.

The **Add SMI-S** page displays.

3. In the **Vendor** drop-down list, choose a vendor name.

All the supported vendors are available in the drop-down list. More SMI-S storage vendors are discovered through a 'best effort' handler using the **Other** vendor option in the drop-down list.



A minimum of one valid Nexus Dashboard Fabric Controller license must be provisioned before adding the data sources for SMI-S storage discovery.

4. Specify the **SMI-S Server IP**, **User Name**, and **Password**.
5. Specify the **Name Space** and **Interop Name Space**.
6. By default, the **Port** number is prepopulated.

If you select the **Secure** check box, then the default secure port number is populated.

When using the **Secure** mode with EMC, the default setting is mutual authentication. For more information, see the EMC documentation about adding an SSL certificate to their trust store. Also, you can set the **SSLClientAuthentication** value to **None** in the **Security\_Settings.xml** configuration file and restart the ECOM service.

7. Click **Add**.

The credentials are validated and the storage discovery starts if the credential is valid. If the credentials check fails, you will be prompted to enter valid credentials.

# Hosts

To view a list of SAN hosts and their relevant details from the SAN Controller Web UI, perform the following steps:

1. In Nexus Dashboard Fabric Controller, navigate to **Manage > Inventory > Hosts**.

The **Hosts** page displays a list of available host devices, their network attributes and the associated Virtual Machines (VMs).

To view all the hosts or only the hosts with failed links, toggle the setting between **Show All Hosts** and **Show Only Hosts with Down Paths**. Additionally, you can filter the enclosures based on a search criteria that you specify in the **Filter by attributes** field.

The following table describes the fields that appear on the **Hosts** page.

Field	Description
<b>Enclosure Name</b>	Displays the name of the host device. The icon next to the host name displays the type of discovery. It displays if the enclosure is from a vCenter or storage or FC discovery.
<b>Up/Total Paths</b>	Displays the total available paths versus the used path details for all the devices in the selected enclosure.
<b>Type</b>	Indicates if a host or storage is discovered through fabric discovery or vCenter discovery.
<b>Total VMs</b>	Displays the total number of VMs.
<b>Peak Tx(%)</b>	Displays the maximum transmitting speed in percentage.
<b>Peak Rx(%)</b>	Displays the maximum receiving speed in percentage.
<b>CRC</b>	Specifies Cyclic Redundancy Check (CRC) errors.
<b>Corrected FEC</b>	Displays the number of corrected Forward Error Correction (FEC) errors.
<b>Uncorrected FEC</b>	Displays the number of FEC errors that are not corrected.
<b>ITW</b>	Displays the number of Invalid Transmission Words (ITW) detected by the port.
<b>Last Update Time</b>	Specifies the date and time at which the host device was last updated.
<b>IP Address</b>	Displays the IP address of the device.
<b>Protocol</b>	Specifies if the host is streaming SCSI protocol traffic or NVMe protocol traffic. This column displays data only for the Hosts for which data is streamed to NDFC using SAN Insights.

2. Click on a host name displayed under the **Enclosure Name** column.

The Host enclosure slide-out pane appears.

3. Click the **Launch** icon to view detailed information related to that particular host.


The **Host Overview** page appears. The tabs and their fields in the screen are explained in the following sections.

- [Summary](#)
- [SAN Insights](#)
- [Event Analytics](#)
- [Congestion Analysis](#)
- [Zoning](#)
- [Optics](#)
- [DIRL](#)
- [FDMI](#)
- [RDP](#)
- [VMs](#)

## Summary

The **Summary** tab of the **Host Overview** page displays information about the selected host device, its status and path information between various hosts enclosures.

<b>Host Information</b>	
<b>Name</b>	Name of the host device.
<b>MAC Address</b>	Displays the MAC address of the host device.
<b>WWNs</b>	Specifies the number of WorldWideNames (WWNs).
<b>IP Address</b>	Displays the IP address of the host device.
<b>Protocol</b>	Specifies if the transmission protocol is SCSI or NVMe.
<b>OS Version</b>	Specifies the operating system of the host device.
<b>FCIDs</b>	Specifies the associated FCID.
<b>Host Status</b>	
<b>Up/Total Paths</b>	Displays the total number of paths available versus the number of paths used by the host devices.
<b>Alarms</b>	Displays the number of alarms generated, if any.
<b>VM Usage</b>	Displays the number of VMs in use.
<b>Events</b>	Displays the number of events that are generated for the host device.
<b>Paths</b>	
<b>Device Alias</b>	Specifies the device alias for the host device.
<b>Status</b>	Specifies the status of the host device.
<b>Fabric</b>	Displays the name of the SAN fabric.
<b>Switch Interface</b>	Specifies the interface on the switch that is connected with the end device.
<b>Rx (Mbps)</b>	Displays the average and the maximum speed in bytes/sec while receiving data.
<b>Tx (Mbps)</b>	Displays the average and the maximum speed while transmitting data/

<b>PWWN</b>	Specifies the assigned port WWN for the host.
<b>Updated Time</b>	Specifies the date and time at which the host device was last updated.
<b>Topology</b>	<p>Provides an end-to-end topology layout and path information between host enclosures and storage enclosures. You can hover on the device icons to see a tool tip that displays details about the device. Click on the green circle icon on the sides of the switch to display the <b>Interface Details</b> for the interface. It displays details about the interface.</p> <p>Beginning with NDFC 12.2.2, you can view performance data for the Inter-Switch Links (ISLs) and the connected host enclosures by navigating to the <b>Host Overview &gt; Summary</b> page and clicking on the <b>Perf. Graph</b> button within the <b>Topology</b> view at the bottom of the page. When you click on the <b>Perf. Graph</b> button, you can see colors and percentages in the legend based on the latest record of Receive (Rx) and Transmit (Tx) usage.</p> <p>You can also visualize performance data displayed with moving dotted lines between the connected host enclosures. NDFC displays the performance data in the legend of the <b>Topology</b> view with a color based on the latest Rx and Tx utilization percentages. If no data is available, the links display in gray.</p> <p>Beginning with NDFC 12.2.2, you can view a <b>Health Graph</b> button that displays the default topology. The <b>Table</b> button displays the data flow path from the host to the storage device. The <b>Table</b> button displays a tabular view of what is shown in the topology diagram.</p> <div style="display: flex; align-items: center; margin-top: 10px;">  <p>The <b>Health Graph</b> and the <b>Table Graph</b> buttons do not display for SAN Insights.</p> </div>

<b>Custom Graphing</b>	<p>Displays metrics on ECT/DAL/read/write times, active I/Os, aborts, failures etc. You can view the metrics based on two protocols, SCSI and NVMe. By default, the SCSI protocol is selected. The data is displayed for a maximum of 7 days. The refresh interval for the <b>Custom Graphing</b> page is 5 minutes. Click on the <b>Play</b> icon to refresh every 5 minutes automatically.</p> <p>The <b>Custom Graphing</b> area has two tabs - <b>Graph</b> and <b>Table</b>. This is a freestyle dashboard where you can select multiple metrics and real-time data for the selected metrics is displayed in a multiline graph format and the data table displays the corresponding raw data. The data is configured to refresh every 5 minutes.</p> <p>You can also add multiple graphs for comparison by clicking on <b>Add Graph</b> on the top right. You can add up to 3 graphs at a time. The <b>Auto Refresh</b> option is disabled by default. You must click the <b>Play</b> icon to enable the auto refresh.</p> <p>Click the <b>Download</b> button to download the table in .csv format. The download option is enabled only if the selected host has SAN insights feature enabled. Hover the mouse on the information (i)icon on the <b>Initiator</b> column. Click the icon that displays <b>Show Flow VMs</b> to open the <b>Flow VMs</b> window. You can view the VM names and IP addresses for the selected host.</p>
------------------------	---

## SAN Insights

The **SAN Insights** tab of the **Host Overview** page displays the Initiator-Target (IT) pairs, topology, average and total ECT/DAL/IOPS/throughput/read/write times, VM details and the switch interface for the selected host. You can view total read/write IOPS/throughput value for the selected host enclosure.

Field	Description
<b>Initiator Target Pairs</b>	This table lists all the initiator-target pairs for the selected host. The flow table shows the details of all the metrics on ECT/DAL/ IOPS/ Throughput/read/write times, Source Alias, SID, Destination Alias, DID, and the fabric along with their 1-hour average and baseline information.

Field	Description
<b>Topology</b>	<p>Provides an end-to-end topology layout and path information between the host enclosures.</p> <p>Beginning with NDFC 12.2.2, you can view performance data for the Inter-Switch Links (ISLs) and the connected storage enclosures by clicking on the <b>Perf. Graph</b> button within the <b>Topology</b> view. When you click on the <b>Perf. Graph</b> button, you can see colors and percentages in the legend based on the latest record of Receive (Rx) and Transmit (Tx) usage.</p> <p>You can also visualize performance data displayed with moving dotted lines between the connected host enclosures. NDFC displays the performance data in the legend of the <b>Topology</b> view with a color based on the latest Rx and Tx utilization percentages. If no data is available, the links display in gray.</p> <p>On the <b>View</b> card, from the <b>Select Layout</b> drop-down list, you can choose one of the following layouts:</p> <ul style="list-style-type: none"> <li>• <b>Hierarchical</b></li> <li>• <b>Hierarchical Left-Right</b> (default view)</li> <li>• <b>Circular</b></li> <li>• <b>Random</b></li> </ul>
<b>FROM: TO:</b>	Displays details of all the metrics on ECT/DAL/read/write times, active I/Os, IOPs and throughput along with their 1-hour average and baseline information.
-	The middle table in the bottom row displays VM name and IP address for the IT pair selected in the <b>Initiator Target Pairs</b> table.
<b>Switch Interface</b>	Click on the interface icon (green circle) on the topology view to view details for the selected interface on the host device.

## Event Analytics

The **Event Analytics** tab displays all the alarms that are raised and cleared and also the events that are generated for the host devices.

## Congestion Analysis

Congestion Analysis enables you to view slow drain statistics for the hosts. You can monitor the slow drain issue within any duration. You can view the data in a chart format and export the data for analysis. You can also view the topology that provides a high-level view of Tx wait, drops, credit loss recovery, over utilization, and port monitoring events.

## Zoning

Displays the zones under which the host device is present. Use the Show Topology icon to the left of the zone name to view the zone topology. It displays hosts and storage devices pertaining to the zone



and connected to a switch.

## Optics

Displays temperature, current, receiving/transmitting power and voltage data for the optics connected to the switch.

## DIRL

Displays the data collected from Dynamic Ingress Rate Limiting (DIRL) analysis for all the interfaces in the current fabric. You can view the latest DIRL data for all the configured fabrics. To get the latest DIRL data for a given fabric, select the fabric from the **Fabric** drop-down list and click **Get latest DIRL data**.

## FDMI

Fabric-Device Management Interface (FDMI) retrieves management information about the attached Fibre Channel Host Bus Adapters (HBAs) and host operating systems. The FDMI table displays details about the link status, vendor, serial number, model, firmware version, and driver version.

## RDP

Read Diagnostics Parameters (RDP) displays diagnostic data from the switch and the connected end devices which can be used in analyzing and troubleshooting link issues. Displays data from the `show rdp fcid [fcid_id] vsan [vsan_id]` command. To view sensor related information for a particular enclosure, click the link available under the **Sensors** column in the table.



Not all switches support the RDP command. The switch can poll for diagnostic information from the end devices using a polling interval.

## VMs

Displays details about the virtual machines that are configured on the host device.

The following table describes the information available in the **VMs** tab.

<b>Name</b>	Displays the name of the VM.
<b>OS</b>	Displays the version of the OS that the VM is running on.
<b>IP</b>	Displays the IP address for the VM.
<b>MAC Address(es)</b>	Displays the MAC addresses for the VMs.
<b>#CPU</b>	Displays the number of CPUs associated with the VM.
<b>Memory</b>	Displays the amount of memory associated with the VM.

<b>Rx Utilization %</b>	Introduced in NDFC release 12.2.2. Displays the Receive (Rx) and Transmit (Tx) Utilization percentage of the bandwidth of the links for the host: <ul style="list-style-type: none"> <li>▪ <b>Green:</b> 0-40%</li> <li>▪ <b>Yellow:</b> 40-60%</li> <li>▪ <b>Orange:</b> 60-80%</li> <li>▪ <b>Red:</b> Above 80%</li> </ul>
<b>Tx Utilization %</b>	
<b>Read</b>	Displays the read information for the VM.
<b>Write</b>	Displays the write information for the VM.
<b>Status</b>	Displays the status information for the VM.
<b>Data Store</b>	Displays the data store information for the VM.

Select a VM from the table, and beneath the table, graphs are available that display VM charts for CPU & Memory, Disk I/O, and VM Flows for the selected virtual machine.

# Devices

Choose **Manage > Inventory > End Devices > Devices** tab to display the list of host and storage devices.

The following table describes the fields that appear on **Manage > Inventory > End Devices > Devices**.

Use the **Show last day** menu drop-down list to filter the view by **Day, Week, Month, and Year**.

Use the **Show Host Ports** menu drop-down list to filter the view by **Host Ports** and **Storage Ports**.

Field	Description
<b>Fabric</b>	Specifies the fabric name. Click the fabric name to display the fabric status on the right-side of the page. Click the Launch icon on the top-right side of the pane to see Fabric Overview. For information on the <b>Fabric Overview</b> , see the section "Fabric Overview" in <a href="#">About Fabric Overview for SAN Operational Mode Setups</a> .
<b>Enclosure Name</b>	Specifies the enclosure name.
<b>Device Alias</b>	Specifies the device alias. Click the chart icon in the <b>Device Alias</b> column to view a graph of the traffic on that device according to the selected timeline. You can filter the data using the <b>Day, Week, Month, and Year</b> options.
<b>FCID</b>	Specifies the associated FCID.
<b>Switch interface</b>	Specifies the switch interface.
<b>Rx/Tx</b>	
<b>Avg</b>	Specifies the average receiving or transmitting speed.
<b>Avg %</b>	Specifies the average percentage of receiving or transmitting speed.
<b>Peak</b>	Specifies the peak utilization of the receiving or transmitting speed.
<b>Peak %</b>	Specifies the peak utilization percentage of the receiving or transmitting speed.
<b>Errors/Discards</b>	
<b>In Avg</b>	Specifies the average of incoming errors or discards.
<b>Out Avg</b>	Specifies the average of outgoing errors or discards.
<b>In Peak</b>	Specifies the peak of incoming errors or discards.

<b>Out Peak</b>	Specifies the peak of outgoing errors or discards.
-----------------	--

# Enclosures

Choose **Manage > Inventory > End Devices > Enclosures** tab to display the host and storage enclosures.

Cisco Nexus Dashboard Fabric Controller extends the fabric visibility up to the server and allows you to discover and search the end devices, SAN Storage Enclosures, and Storage Systems that are attached to the network.

Click an enclosure name in the table to view more information about the enclosure.

## Inventory

Choose **Manage > Inventory > End Devices > Enclosures> Inventory > Host Enclosures** tab to display the host and storage inventory enclosures.

### Inventory - Host Enclosures

The following table describes the fields that appear on **Manage > Inventory > End Devices > Enclosures> Inventory > Host Enclosures**.

Field	Description
Enclosure	Specifies the enclosure name. Click the enclosure name for more information.
OS	Specifies the OS details.
IP Address	Specifies the IP address of the switch.
WWNs	Specifies the number of World Wide Names (WWNs).

The following table describes the action items, in the **Actions** menu drop-down list, that appear on **Manage > Inventory > End Devices > Enclosures> Inventory > Host Enclosures**.

Action Item	Description
Edit	Select an enclosure from the table and choose <b>Edit</b> to update the enclosure information.
Change to Storage Enclosure	Select an enclosure from the table and choose <b>Change to Storage Enclosure</b> to change the selected enclosure to storage enclosure.
Import	Allows you to import enclosures data.
Export	Allows you to export host and storage enclosures data in your inventory to your local directory in <b>.txt</b> file format.

### Importing or Exporting Inventory Enclosures Data

From Release 12.1.2e, you can import and export enclosures data to a .txt file. This feature allows you to edit the exported file, and import the data to NDFC. You can either choose to export **All** or

**Only Host Enclosures** or **Only Storage Enclosures** data. You can also choose one Fabric or All fabrics' data while exporting.

To export Inventory Enclosures data, perform the following steps:

1. On either **Host Enclosures** or **Storage Enclosures** tab, from the Actions drop-down list, select **Export**.
2. Select the enclosures to export data. You can choose **All** or **Only Host Enclosures** or **Only Storage Enclosures**.
3. In the Exported File Name field, provide the name of the exported file.



The export file is of **.txt** format only.

4. From **Fabric scope** drop-down list, choose **All Fabrics** or specific Fabric from which you must export enclosures data.
5. Click **Export** to download the enclosures data.

Save the exported file to a local directory.

To import Inventory Enclosures data, perform the following steps:

1. On either **Host Enclosures** or **Storage Enclosures** tab, from the Actions drop-down list, select **Import**.
2. Upload the data file from your local directory. You can either drag and drop the file, or browse to upload the data file.



You can import data from **.txt** file format only.

The uploaded file appears in the Import Enclosures area.

3. Click **OK** to import the enclosures data. Click **Cancel** the discard.

## Inventory - Storage Enclosures

The following table describes the fields that appear on **Manage > Inventory > End Devices > Enclosures > Inventory > Storage Enclosures**.

Field	Description
Enclosure	Specifies the enclosure name. Click the enclosure name for more information.
IP Address	Specifies the IP address of the switch.
WWNs	Specifies the number of World Wide Names (WWNs).

The following table describes the action items, in the **Actions** menu drop-down list, that appear on **Manage > Inventory > End Devices > Enclosures > Inventory > Storage Enclosures**.

Action Item	Description
-------------	-------------

Edit	Select an enclosure from the table and choose <b>Edit</b> to update the enclosure information.
Change to Host Enclosure	Select an enclosure from the table and choose <b>Change to Host Enclosure</b> to change the selected enclosure to host enclosure.
Import	Allows you to import enclosures data.
Export	Allows you to export host and storage enclosures data in your inventory to your local directory in <b>.txt</b> file format.

### Importing or Exporting Inventory Enclosures data

From Release 12.1.2e, you can import and export enclosures data to a .txt file. This feature allows you to edit the exported file, and import the data to NDFC. You can either choose to export **All** or **Only Host Enclosures** or **Only Storage Enclosures** data. You can also choose one Fabric or All fabrics' data while exporting.

To export Inventory Enclosures data, perform the following steps:

1. On either **Host Enclosures** or **Storage Enclosures** tab, from the Actions drop-down list, select **Export**.
2. Select the enclosures to export data. You can choose **All** or **Only Host Enclosures** or **Only Storage Enclosures**.
3. In the Exported File Name field, provide the name of the exported file.



The export file is of **.txt** format only.

4. From **Fabric scope** drop-down list, choose **All Fabrics** or specific Fabric from which you must export enclosures data.
5. Click **Export** to download the enclosures data.

Save the exported file to a local directory.

To import Inventory Enclosures data, perform the following steps:

1. On either **Host Enclosures** or **Storage Enclosures** tab, from the Actions drop-down list, select **Import**.
2. Upload the data file from your local directory. You can either drag and drop the file, or browse to upload the data file.



You can import data from **.txt** file format only.

The uploaded file appears in the Import Enclosures area.

3. Click **OK** to import the enclosures data. Click **Cancel** the discard.

# Performance

Choose **Manage > Inventory > End Devices > Enclosures > Performance > Host Enclosures** tab to display the host and storage performance enclosures.

## Performance - Host Enclosures

The following table describes the fields that appear on **Manage > Inventory > End Devices > Enclosures > Performance > Host Enclosures**. Use the **Show last day** menu drop-down list to filter the view by **Day, Week, Month, and Year**.

Field	Description
Enclosure Name	Specifies the enclosure name. Click the enclosure name to view more information. Click the chart icon to view a graph of the traffic on that device according to the selected timeline. You can filter the data using the <b>Day, Week, Month, and Year</b> options.
Rx/Tx/Errors/Discards	
Avg	Specifies the average receiving, transmitting, errors, or discards speed.
Peak	Specifies the peak utilization of the receiving, transmitting, errors, or discards speed.
Rx + Tx	Specifies the sum of receiving and transmitting speeds.
Last Updated	Specifies the last updated time.

## Performance - Storage Enclosures

The following table describes the fields that appear on **Manage > Inventory > End Devices > Enclosures > Inventory > Storage Enclosures**.

Field	Description
Enclosure Name	Specifies the enclosure name.
Rx/Tx/Errors/Discards	
Avg	Specifies the average receiving, transmitting, errors, or discards speed.
Peak	Specifies the peak utilization of the receiving, transmitting, errors, or discards speed.
Last Updated	Specifies the last updated time.

Use the **Show last day** menu drop-down list to filter the view by Day, Week, Month, and Year.

## Enclosure Members

The following table describes the fields that appear on **Manage > Inventory > End Devices >**



**Enclosures > Performance.** Enclosure members can be viewed for Host and Storage performance enclosures. Use the **Show last day** menu drop-down list to filter the view by **Day, Week, Month,** and **Year.**

Field	Description
Fabric	Specifies the fabric name. Click the name to view information about fabric health on the right-side of the page.
Device	Specifies the device name.
Speed	Specifies the device speed.
Rx/Tx	
Avg	Specifies the average receiving or transmitting speed.
Avg %	Specifies the average percentage of receiving or transmitting speed.
Peak	Specifies the peak utilization of the receiving, or transmitting speed.
Peak %	Specifies the peak utilization percentage of the receiving or transmitting speed.
Errors/Discards	
Avg	Specifies the average errors or discards speed.
Peak	Specifies the peak utilization of the errors or discards speed.
Last Updated	Specifies the last updated time.

# Copyright

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

The documentation set for this product strives to use bias-free language. For the purposes of this documentation set, bias-free is defined as language that does not imply discrimination based on age, disability, gender, racial identity, ethnic identity, sexual orientation, socioeconomic status, and intersectionality. Exceptions may be present in the documentation due to language that is hardcoded in the user interfaces of the product software, language used based on RFP documentation, or language that is used by a referenced third-party product.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <http://www.cisco.com/go/trademarks>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

© 2017–2024 Cisco Systems, Inc. All rights reserved.