

# Implementing IPv6 VPN over MPLS

### Last Updated: August 1, 2012

The Border Gateway Protocol over Multiprotocol Label Switching VPN feature is an implementation of the provider edge (PE)-based VPN model. In principle, there is no difference between IPv4 and IPv6 VPNs. In both IPv4 and IPv6, multiprotocol Border Gateway Protocol (BGP) is the center of the Multiprotocol Label Switching (MPLS) VPN for IPv6 (VPNv6) architecture. It is used to distribute IPv6 routes over the service provider backbone, using the same procedures to work with overlapping addresses, redistribution policies, and scalability issues.

- Finding Feature Information, page 1
- Prerequisites for Implementing IPv6 VPN over MPLS, page 1
- Restrictions for Implementing IPv6 VPN over MPLS, page 2
- Information About Implementing IPv6 VPN over MPLS, page 2
- How to Implement IPv6 VPN over MPLS, page 8
- Configuration Examples for Implementing IPv6 VPN over MPLS, page 61
- Additional References, page 61
- Feature Information for Implementing IPv6 VPN over MPLS, page 63
- Glossary, page 64

## **Finding Feature Information**

Your software release may not support all the features documented in this module. For the latest caveats and feature information, see Bug Search Tool and the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the feature information table at the end of this module.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to <a href="https://www.cisco.com/go/cfn">www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.

# Prerequisites for Implementing IPv6 VPN over MPLS

Your network must be running the following Cisco IOS services before you configure IPv6 VPN operation:

· MPLS in provider backbone routers



- MPLS with VPN code in provider routers with VPN PE routers
- BGP in all routers providing a VPN service
- Cisco Express Forwarding switching in every MPLS-enabled router
- Class of Service (CoS) feature

# **Restrictions for Implementing IPv6 VPN over MPLS**

6VPE supports an MPLS IPv4-signaled core. An MPLS IPv6-signaled core is not supported.

# Information About Implementing IPv6 VPN over MPLS

- IPv6 VPN over MPLS Overview, page 2
- Addressing Considerations for IPv6 VPN over MPLS, page 2
- Basic IPv6 VPN over MPLS Functionality, page 3
- Advanced IPv6 MPLS VPN Functionality, page 6
- BGP IPv6 PIC Edge for IP MPLS, page 8

### IPv6 VPN over MPLS Overview

Multiprotocol BGP is the center of the MPLS IPv6 VPN architecture in both IPv4 and IPv6. It is used to distribute IPv6 routes over the service provider backbone, using the same procedures to work with overlapping addresses, redistribution policies, and scalability issues.

Although IPv6 should not have overlapping address space, IPv6 addresses are prepended with a route distinguisher (RD). A network layer reachability information (NLRI) 3-tuple format (which contains length, IPv6 prefix, and label) is defined to distribute these routes using multiprotocol BGP. The extended community attribute (for example., the route target) is used to control redistribution of routing information by tagging exported routes and filtering imported ones.

For scalability, route reflectors can be used to concentrate routing paths and avoid a full PE mesh. BGP features in IPv6, such as route refresh, automatic route filtering, and outbound route filtering, help reduce the number of routes held in each PE. This document focuses on the following differences between IPv6 and IPv4:

- Creation of a new multiprotocol BGP IPv6 VPN address family and specification of a IPv6 VPN address format
- Specification of a new IPv6 VPN NLRI
- Specification of BGP next-hop encoding when the device has an IPv4-based MPLS core

Some IPv6 VPN features, such as interprovider and Carrier Supporting Carrier (CSC) topologies, are specific to BGP-MPLS IPv6 VPN. Others, such as the link between Autonomous System Boundary Routers (ASBRs), might support IPv4 only, IPv6 only, or both, regardless of the address family being transported.

## Addressing Considerations for IPv6 VPN over MPLS

Regardless of the VPN model deployed, an addressing plan must be defined for the VPN that allows hosts to communicate with other sites using one site within one VPN, as well as with public resources.

VPN IPv4 sites often use private addressing for their addressing plan. These addresses do not need to be registered, and they are not routable on the public network. Whenever a host within a private site needs to access a public domain, it goes through a device that finds a public address on its behalf. With IPv4, this can be a network address translator or an application proxy.

Given the larger address space available with IPv6, the easiest approach to IPv6 addressing is to use IPv6 global addresses for the private addressing plan. Another approach is to use unique local addresses (ULAs). ULAs are easy to filter at site boundaries based on their scope. ULAs are also Internet service provider (ISP)-independent and can be used for communications inside a site without any permanent or intermittent Internet connectivity.

In 6VPE, ULAs are treated as regular global addresses. The device configuration filters ULA prefixes to prevent them from appearing in the public domain. Link-local addresses on the peer will not be announced by BGP (IPv6 or IPv6 VPN) speakers.

A host within a private site that needs to access a public domain can do so through an IPv6 application proxy (such as a web proxy for accessing web pages), which accesses the public resource on the host's behalf with a global routable address, or the host can use a public address of its own. In the latter case, if ULAs have been deployed, the IPv6 host also is configured with a routable global address. A source address selection algorithm is used to select one or the other, based on the destination address.

## **Basic IPv6 VPN over MPLS Functionality**


IPv6 VPN takes advantage of the coexistence between IPv6 and IPv4 by leveraging an existent MPLS IPv4 core network:

- IPv6 VPN Architecture Overview, page 3
- IPv6 VPN Next Hop, page 4
- MPLS Forwarding, page 4
- VRF Concepts, page 5
- IPv6 VPN Scalability, page 5

### IPv6 VPN Architecture Overview

The figure below illustrates the important aspects of the IPv6 VPN architecture.

Figure 1 Simple IPv6 VPN Architecture

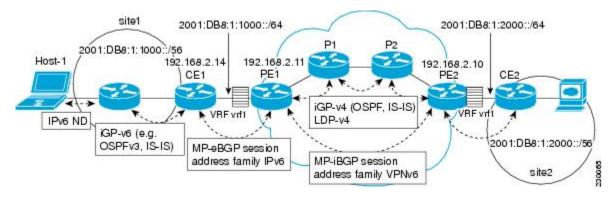

The CE devices are connected to the provider's backbone using PE devices. The PE devices are connected using provider (P1 and P2 in the figure above) devices. The provider (P) devices are unaware of VPN

routes, and, in the case of 6VPE, might support only IPv4. Only PE devices perform VPN-specific tasks. For 6VPE, the PE devices are dual-stack (IPv4 and IPv6) devices.

The routing component of the VPN operation is divided into core routing and edge routing. Core routing, which involves PE devices and P devices, typically is performed by an IPv4 Interior Gateway Protocol (IGP) such as Open Shortest Path First (OSPF) or Intermediate System-to-Intermediate System (IS-IS). In the figure above, the IGP distributes only routes internal to the provider's autonomous system. The core routing enables connectivity among P and PE devices.

Edge routing takes place in two directions: routing between PE pairs and routing between a PE and a CE. Routing between PE pairs is achieved using multiprotocol internal BGP (iBGP) using the IPv6 VPN address family. This method distributes routes learned from CEs through PE-CE routing, using appropriate route export policies at the ingress PE device and appropriate route import policies at the egress PE device.

Routing between the CE and its PE is achieved using a routing protocol that is VPN routing and forwarding (VRF) aware. Static routes, external BGP (eBGP), and Enhanced Interior Gateway Routing Protocol (EIGRP) are VRF-instance aware. In the figure above, eBGP is used between the CE (CE1) and the PE (PE1). At the same time, the CE runs an IPv6 IGP within the VPN site (site1 in the figure above). The CE redistributes IGP routes into multiprotocol-eBGP address family IPv6. At the PE, these routes are installed in the VRF named vrf1, and forwarded to the remote PEs (PE2 in the figure above), according to export policies defined for this VRF.

### **IPv6 VPN Next Hop**

When the device announces a prefix using the MP\_REACH\_NLRI attribute, the MP-BGP running on one PE inserts a BGP next hop in the update message sent to a remote PE. This next hop is either propagated from the received update (for instance, if the PE is a route reflector), or it is the address of the PE sending the update message (the egress PE).

For the IPv6 VPN address family, the next hop must be an IPv6 VPN address, regardless of the nature of the network between the PE speakers. Because the RD has no significance (the address is not part of any VPN), it is set to 0. If the provider network is a native IPv6 network, the remaining part of the next hop is the IPv6 address of the egress PE. Otherwise, it is an IPv4 address used as an IPv6-mapped address (for example, ::FFFF:IPv4-address).

## **MPLS Forwarding**

When it receives IPv6 traffic from one customer site, the ingress PE device uses MPLS to tunnel IPv6 VPN packets over the backbone toward the egress PE device identified as the BGP next hop. The ingress PE device prepends the IPv6 packets with the outer and inner labels before putting the packet on the egress interface.

Under normal operation, a P device along the forwarding path does not look inside the frame beyond the first label. The P device either swaps the incoming label with an outgoing one or removes the incoming label if the next device is a PE device. Removing the incoming label is called penultimate hop popping. The remaining label (BGP label) is used to identify the egress PE interface toward the customer site. The label also hides the protocol version (IPv6) from the last P device, which it would otherwise need to forward an IPv6 packet.

A P device is ignorant of the IPv6 VPN routes. The IPv6 header remains hidden under one or more MPLS labels. When the P device receives an MPLS-encapsulated IPv6 packet that cannot be delivered, it has two options. If the P device is IPv6 aware, it exposes the IPv6 header, builds an Internet Control Message Protocol (ICMP) for IPv6 message, and sends the message, which is MPLS encapsulated, to the source of the original packet. If the P device is not IPv6 aware, it drops the packet.

• 6VPE over GRE Tunnels, page 5

#### **6VPE over GRE Tunnels**

In some Cisco software releases, the ingress PE device uses IPv4 generic routing encapsulation (GRE) tunnels combined with 6VPE over MPLS to tunnel IPv6 VPN packets over the backbone toward the egress PE device identified as the BGP next hop.

### **VRF Concepts**

A virtual routing and forwarding (VRF) entity works with a private customer-specific Routing Information Base (RIB) and Forwarding Information Base (FIB). Although IPv4 and IPv6 routing tables are distinct, it is convenient for the two protocols to share the same VRF for a specific customer.

IPv6 VPN customers are likely to be existing VPNv4 customers that are either deploying dual-stack hosts and devices or shadowing some of their IPv4 infrastructure with IPv6 nodes. Several deployment models are possible. Some customers use separate logical interfaces for IPv4 and IPv6 and define separate VRFs on each. Although this approach provides flexibility to configure separate policies for IPv4 and IPv6, it prevents sharing the same policy. Another approach, the multiprotocol VRF, keeps a single VRF on the PECE interface, and enables it for IPv4, IPv6, or both. It is then possible to define common or separate policies for each IP version. With this approach, a VRF is better defined as the set of tables, interfaces, and policies found at the PE, and is used by sites of a particular VPN connected to this PE.

The figure below illustrates the multiprotocol VRF, in which the VRF named vrf1is enabled for both IPv4 and IPv6 and is associated with two interfaces (IF1, IF2), two sets of tables (IPv4 RIB and FIB and IPv6 RIB and FIB), and a set of common or distinct policies.

vrf vrf1 Tables RIBv4, FIBv4 I/F list IF1, IF2 Specific Route map CE policies Route targets IPv4 Protocols Tables RIBv6, FIBv6 Route map Common Specific Poute targets Site A policies Route targets IF1 CE IF2 Site B

Figure 2 Multiprotocol VRF

## **IPv6 VPN Scalability**

PE-based VPNs such as BGP-MPLS IPv6 VPN scale better than CE-based VPNs. A network designer must consider scaling when designing the network. The following points need to be considered:

- Routing table size, which includes the size of VRF tables and BGP tables
- Number of BGP sessions, which grows as a square number of PEs

Routing table size concerns occur with PEs that handle many customer sites. Not only do these PEs have one RIB and FIB per connected customer, but also the PEs' BGP tables, which total all entries from

individual VRFs, grow accordingly. Another scalability problem occurs when the number of PEs in the provider network grows beyond a certain level. Assuming that a significant number of sites belonging to the same VPN are spread over many PEs, the number of multiprotocol BGP sessions may rapidly become prohibitive:  $(n-1) \times n/2$ , where n is the number of PEs.

The following features are included in IPv6 VPN over MPLS:

- Route refresh and automatic route filtering--Limits the size of routing tables, because only routes
  imported into a VRF are kept locally. When the import policy changes, a route refresh can be sent to
  query a retransmission of routing updates.
- Outbound route filtering (ORF)--Allows the ingress PE to advertise filters to the egress PE so that updates are not sent unnecessarily over the network.
- Route reflectors--Route reflectors (RRs) are iBGP peers that propagate iBGP routes learned from other iBGP peers. RRs are used to concentrate iBGP sessions.

## **Advanced IPv6 MPLS VPN Functionality**

Advanced MPLS features such as accessing the Internet from a VPN for IPv4, multiautonomous-system backbones, and CSCs are generally the same for IPv6 as for IPv4. However, there are differences in addressing and in the way 6VPE operates over an IPv4 backbone.

The following sections describe concepts for advanced IPv6 MPLS VPN functionality:


- Internet Access, page 6
- Multiautonomous-System Backbones, page 7
- Carrier Supporting Carriers, page 8

#### Internet Access

Most VPN sites require access to the Internet. RFC 4364 describes a set of models for enabling IPv4 and IPv6 VPN access to the Internet. In one model, one interface is used by the CE to connect to the Internet and a different one to connect to the VRF. Another model is in which all Internet routes are redistributed into the VRF; however, this approach has the disadvantage of requiring the Internet routes be replicated in each VRF.

In one scenario, a static route is inserted into the VRF table, with a next hop that points to the Internet gateway found in the IPv6 default table. The figure below illustrates this scenario, in which Internet access is provided to the customer in the VRF named vrf1.

Figure 3 Internet Access Topology

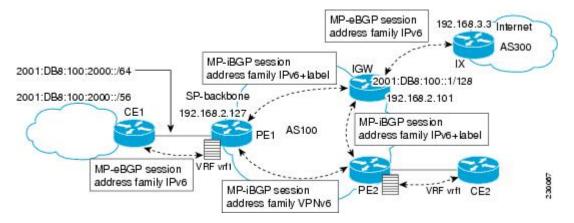

A customer site that has access public resources over the Internet must be known by a public prefix. Unlike IPv4, IPv6 does not offer a Network Address Translation (NAT) mechanism that translates private addresses into public addresses when leaving the site boundaries. This implies that hosts within the site speak with public addresses and appear in the public domain.

For outbound traffic, the default route configured in the VRF table at ingress PE (PE1) directs traffic for destinations outside the VPN to the Internet gateway.


For inbound traffic, a route must exist at the Internet gateway to direct the traffic for a customer site via its PE of attachment (PE1 in the figure above). This route can be distributed by the ingress PE (PE1) using multiprotocol iBGP (with the IPv6 address family configuration), so no specific configuration is needed on a per-VPN PE basis at the Internet gateway. Nevertheless, for inbound traffic at PE1, a route must exist in the default table for the customer site global prefix pointing to the VRF of the site.

### **Multiautonomous-System Backbones**

The problem of interprovider VPNs is similar for IPv6 and IPv4, assuming that IPv6 was deployed everywhere IPv4 was deployed.

In IPv6 deployments that cross autonomous system boundaries, providers may have to obtain a peering model, or work with the peering model put in place for VPNv4.

The figure below illustrates interprovider scenarios in IPv6 VPN.

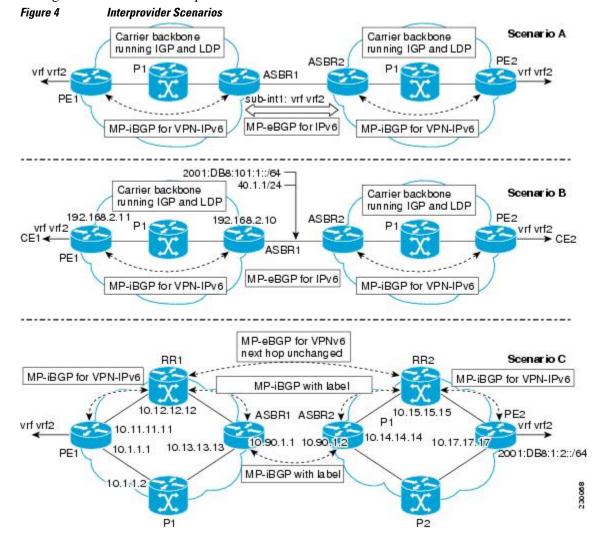

Depending on the network protocol used between ASBRs, the three scenarios shown in the figure above can have several implementation options. For instance, scenario B, which suggests a multiprotocol eBGP IPv6 VPN peering between ASBRs, could use either an IPv6 or an IPv4 link.


In scenario C, multihop multiprotocol eBGP redistributes IPv6 VPN routes across route reflectors in different autonomous systems. Labeled IPv4 routes to the PEs (in the 6VPE case) need to be advertised across ASBRs so that a complete labeled switch path is set up end to end.

### **Carrier Supporting Carriers**

The CSC feature provides VPN access to a customer service provider, so this service needs to exchange routes and send traffic over the ISP MPLS backbone. The only difference from a regular PE is that it provides MPLS-to-MPLS forwarding on the CSC-CE to CSC-PE interface, rather than IP-to-MPLS forwarding.

The figure below highlights the two ISPs' interface.

Figure 5 CSC 6VPE Configuration Example

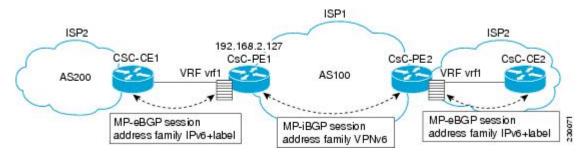

## **BGP IPv6 PIC Edge for IP MPLS**

The BGP IPv6 PIC Edge for IP MPLS feature improves convergence for both core and edge failures after a network failure. The BGP IPv6 prefix-independent convergence (PIC) edge for IP MPLS feature creates and stores a backup or alternate path in the RIB, FIB, and in Cisco Express Forwarding, so that the backup or alternate path can immediately take over wherever a failure is detected, thus enabling fast failover.

# **How to Implement IPv6 VPN over MPLS**

- Configuring a Virtual Routing and Forwarding Instance for IPv6, page 9
- Binding a VRF to an Interface, page 11
- Configuring a Static Route for PE-to-CE Routing, page 13
- Configuring eBGP PE-to-CE Routing Sessions, page 13
- Configuring the IPv6 VPN Address Family for iBGP, page 15
- Configuring Route Reflectors for Improved Scalability, page 16
- Configuring Internet Access, page 24
- Configuring a Multiautonomous-System Backbone for IPv6 VPN, page 32
- Configuring CSC for IPv6 VPN, page 52
- Configuring BGP IPv6 PIC Edge for IP MPLS, page 53
- Verifying and Troubleshooting IPv6 VPN, page 55

## Configuring a Virtual Routing and Forwarding Instance for IPv6

A VRF is an address family-independent object that can be enabled and configured for each of the supported address families. Configuring a VRF consists of the following three steps:

- · Configuring the address-family-independent part of the VRF
- Enabling and configuring IPv4 for the VRF
- Enabling and configuring IPv6 for the VRF

A VRF is given a name and an RD. The RD is configured outside the context of the address family, although the RD is used to distinguish overlapping addresses within the context of a particular BGP address family. Having separate RDs for IPv4 VPN addresses and IPv6 VPN addresses does not matter. On Cisco devices, the RDs are the same to simplify configuration and VPN management.

Users can configure policies in common between IPv4 and IPv6 when not using an address family context. This feature is shared route targets (import and export), and it is useful in a migration scenario, where IPv4 policies already are configured and IPv6 policies should be the same as the IPv4 policies.

The IPv4 and IPv6 address family can each be enabled and configured separately. Note that the route-target policies entered at this level override global policies that might have been specified during address family-independent configuration.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. mls ipv6 vrf
- 4. vrf definition vrf-name
- **5. rd** *route-distinguisher*
- **6.** route-target {import| export| both} route-target-ext-community
- 7. exit
- 8. address-family ipv4 [mdt | multicast | tunnel | unicast [vrf vrf-name] | vrf vrf-name]
- **9.** route-target {import | export | both} route-target-ext-community
- 10. exit
- 11. address-family ipv6 [vrf vrf-name] [unicast | multicast]
- **12. route-target** {import | export | both } route-target-ext-community

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Device> enable	

	Command or Action	Purpose
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	mls ipv6 vrf	Enables IPv6 globally in a VRF.
	Example:	
	Device(config)# mls ipv6 vrf	
Step 4	vrf definition vrf-name	Configures a VPN VRF routing table and enters VRF configuration mode.
		The Companies most
	Example:	
	Device(config)# vrf definition vrf1	
Step 5	rd route-distinguisher	Specifies the RD for a VRF.
	Example:	
	Device(config-vrf)# rd 100:1	
Step 6	route-target {import  export  both} route-target-ext-community	Specifies the route target VPN extended communities for both IPv4 and IPv6.
	Example:	
	Device(config-vrf)# route target import 100:10	
Step 7	exit	Exits VRF configuration mode.
	Example:	
	Device(config-vrf)# exit	
Step 8	address-family ipv4 [mdt   multicast   tunnel   unicast [vrf vrf-name]   vrf vrf-name]	Enters address family configuration mode to configure a routing session using standard IPv4 address prefixes.
	Example:	
	Device(config)# address-family ipv4	
		·

	Command or Action	Purpose
Step 9	route-target {import   export   both} route-target-ext-community	Specifies the route target VPN extended communities specific to IPv4.
	Example:	
	Device(config-vrf-af)# route target import 100:11	
Step 10	exit	Exits address family configuration mode on this VRF.
	Example:	
	Device(config-vrf-af)# exit	
Step 11	address-family ipv6 [vrf vrf-name] [unicast   multicast]	Enters address family configuration mode for configuring routing sessions such as BGP that use standard IPv6 address prefixes.
	Example:	standard if vo address prefixes.
	Device(config-vrf)# address-family ipv6	
Step 12	route-target {import  export  both} route-target-ext-community	Specifies the route target VPN extended communities specific to IPv6.
	Example:	
	Device(config-vrf-af)# route target import 100:12	

## **Binding a VRF to an Interface**

To specify which interface belongs to which VRF, use the **vrf forwarding** command for both IPv4 and IPv6. An interface cannot belong to more than one VRF. When the interface is bound to a VRF, previously configured addresses (IPv4 and IPv6) are removed, and they must be reconfigured.

### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3. interface** *type number*
- **4. vrf forwarding** *vrf-name*
- **5. ip address** *ip-address mask* [**secondary**]
- **6. ipv6 address** { *ipv6-address | prefix-length | prefix-name sub-bits | prefix-length*}

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	interface type number	Specifies an interface type and number, and places the device in interface configuration mode.
	Example:	
	Device(config)# interface Ethernet 0/0	
Step 4	vrf forwarding vrf-name	Associates a VPN VRF with an interface or subinterface.
	Example:	Any address, IPv4 or IPv6, that was configured prior to entering this command will be removed.
	Device(config-if)# vrf forwarding vrf1	
Step 5	ip address ip-address mask [secondary]	Configures an IPv4 address on the interface.
	Example:	
	Device(config-if)# ip address 10.10.10.1 255.255.255.0	
Step 6	<pre>ipv6 address { ipv6-address / prefix-length   prefix-name sub- bits / prefix-length}</pre>	Configures an IPv6 address on the interface.
	Example:	
	Device(config-if)# ipv6 address 2001:DB8:100:1::1/64	

## **Configuring a Static Route for PE-to-CE Routing**

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3. ipv6 route** [**vrf** vrf-name] ipv6-prefix | prefix-length {ipv6-address | interface-type interface-number [ipv6-address]} [**nexthop-vrf** [vrf-name1 | **default**]] [administrative-distance] [administrative-multicast-distance | **unicast** | **multicast**] [next-hop-address] [**tag** tag]

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	ipv6 route [vrf vrf-name] ipv6-prefix   prefix-length {ipv6-address   interface-type interface-number [ipv6-address]} [nexthop-vrf [vrf-name1   default]] [administrative-distance] [administrative-multicast-distance   unicast   multicast] [next-hop-address] [tag tag]	Installs the specified IPv6 static route using the specified next hop.
	Example:	
	Device(config)# ipv6 route vrf vrf1 ::/0 2001:DB8:200::1 nexthop-vrf default	

## **Configuring eBGP PE-to-CE Routing Sessions**

### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3. router bgp** *autonomous-system-number*
- 4. address-family ipv6 [vrf vrf-name] [unicast | multicast]
- **5. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **remote-as** *as-number*
- **6. neighbor** { *p-address* | *peer-group-name* | ipv6-address} **activate**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	router bgp autonomous-system-number	Configures the BGP routing process.
	Example:	
	Device(config)# router bgp 100	
Step 4	address-family ipv6 [vrf vrf-name] [unicast   multicast]	Enters address family configuration mode.
	Example:	
	Device(config-router)# address-family ipv6 vrf vrf1	
Step 5	<b>neighbor</b> {ip-address   ipv6-address   peer-group-name} <b>remote-as</b> as- number	Adds an entry to the multiprotocol BGP neighbor table.
	Example:	
	Device(config-router-af)# neighbor 2001:DB8:100:1::2 remote-as 200	
Step 6	neighbor { p-address   peer-group-name   ipv6-address} activate	Enables the exchange of information for this address family with the specified BGP
	Example:	neighbor.
	Device(config-router-af)# neighbor 2001:DB8:100:1::2 activate	

## **Configuring the IPv6 VPN Address Family for iBGP**

### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3. router bgp** *autonomous-system-number*
- **4. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **remote-as** *as-number*
- **5. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **update-source** *interface-type interface-number*
- 6. address-family vpnv6 [unicast]
- **7. neighbor** {*ip-address* | *peer-group-name* | *ipv6-address*} **activate**
- **8. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **send-community** [**both** | **standard** | **extended**]
- 9. exit

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	router bgp autonomous-system-number	Configures the BGP routing process.
	Example:	
	Device(config)# router bgp 100	
Step 4	<b>neighbor</b> {ip-address   ipv6-address   peer-group-name} <b>remote-as</b> as-number	Adds an entry to the multiprotocol BGP neighbor table.
	<pre>Example: Device(config-router)# neighbor 192.168.2.11 remote-as</pre>	In IPv6 VPN, the peer address typically is an IPv4 address, in order to enable the BGP session to be transported over the IPv4-based core network.
	100	

	Command or Action	Purpose
Step 5	<b>neighbor</b> {ip-address   ipv6-address   peer-group-name} <b>update-source</b> interface-type interface-number	Enables the BGP session to use a source address on the specified interface.
	Example:	
	Device(config-router)# neighbor 192.168.2.11 update- source Loopback 0	
Step 6	address-family vpnv6 [unicast]	Places the device in address family configuration mode for configuring routing sessions.
	Example:	
	Device(config-router)# address-family vpnv6	
Step 7	neighbor {ip-address   peer-group-name   ipv6-address} activate	Enables the exchange of information for this address family with the specified BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.11 activate	
Step 8	neighbor {ip-address   ipv6-address   peer-group-name} send- community [both   standard   extended]	Specifies that a communities attribute should be sent to the BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.11 send-community extended	
Step 9	exit	Exits address family configuration mode.
	Example:	
	Device(config-router-af)# exit	

## **Configuring Route Reflectors for Improved Scalability**

In this task, two RRs are configured for redundancy reasons. Deploying RRs improves scalability by drastically reducing the number of BGP sessions. One RR usually peers with many iBGP speakers, preventing a full mesh of BGP sessions.

In an MPLS-based core, RRs are not part of the label switch paths and can be located anywhere in the network. For example, in a flat RR design, RRs can be deployed at Level 1 points of presence (POPs) and peer together in a full-mesh topology. In a hierarchical RR design, RRs could be deployed at Level 1 and Level 2 POPs, with Level 1 POPs peering together and with Level 2 RRs.

In a typical case where 6VPE is deployed in a preexisting MPLS network (for example, providing VPNv4 services), it is likely that some RR design is already in place, and a similar RR infrastructure for IPv6 VPN

services can be deployed. The figure below illustrates the main peering points between the RR in the ISP POP and the set of its RR clients.

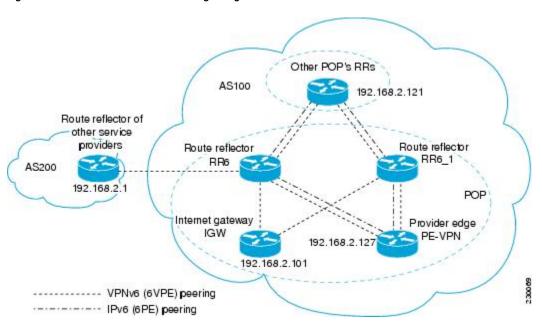


Figure 6 Route Reflector Peering Design

The following list of BGP RR clients must be configured at each IPv6 RR (RR6 and RR6\_1 in the figure above) device, at each POP:

- PE devices (PE-VPN) of the POP providing IPv6 VPN access to the ISP customers. This includes both IPv6 VPN (6VPE) peering for interconnecting customer sites and IPv6 peering (6PE) for providing Internet access to VPN customers (see the Configuring Internet Access, page 24).
- Internet gateway (IGW) located in the POP in order to provide PE customers with access to the IPv6 Internet (see the Configuring Internet Access, page 24).
- RRs from other service providers. This feature is used to provide interautonomous-system connectivity, and it includes both IPv6 and IPv6 VPN peering. This service is described in the Configuring a Multiautonomous-System Backbone for IPv6 VPN, page 32 section.
- RRs in other POPs. All RRs peer together, with both IPv6 and IPv6 VPN address families enabled.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3.** router bgp autonomous-system-number
- **4. neighbor** {ip-address | ipv6-address | peer-group-name} **remote-as** as-number
- **5. neighbor** {ip-address | ipv6-address | peer-group-name} **update-source** interface-type interface-number
- **6. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **remote-as** *as-number*
- **7. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **update-source** *interface-type interface-number*
- **8. neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **remote-as** *as-number*
- **9. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **update-source** *interface-type interface-number*
- **10. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **remote-as** *as-number*
- **11.neighbor** {ip-address | ipv6-address | peer-group-name} **update-source** interface-type interface-number
- **12. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **ebgp-multihop** [*ttl*]
- 13. address-family ipv6
- **14. neighbor** { ip-address | peer-group-name | ipv6-address } activate
- **15. neighbor** { *ip-address* | *ipv6-address* | *peer-group-name*} **send-label**
- **16. neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **route-reflector-client**
- **17. neighbor** { *ip-address* | *peer-group-name* | *ipv6-address*} **activate**
- **18. neighbor** { *ip-address* | *ipv6-address* | *peer-group-name*} **send-label**
- **19. neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **route-reflector-client**
- **20. neighbor** {*ip-address* | *peer-group-name* | *ipv6-address*} **activate**
- **21. neighbor** { *ip-address* | *ipv6-address* | *peer-group-name*} **send-label**
- **22. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **route-reflector-client**
- 23. exit
- **24.** address-family vpnv6 [unicast]
- **25**. **neighbor** { *ip-address* | *peer-group-name* | *ipv6-address*} **activate**
- **26.** neighbor {ip-address | ipv6-address | peer-group-name} send-community [both | standard | extended]
- **27. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **route-reflector-client**
- **28.** neighbor {ip-address | peer-group-name | ipv6-address} activate
- **29**. **neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **send-community** [**both** | **standard** | **extended**]
- **30.** neighbor {ip-address | ipv6-address | peer-group-name} route-reflector-client
- **31. neighbor** { *ip-address* | *peer-group-name* | *ipv6-address*} **activate**
- **32.** neighbor {ip-address | ipv6-address | peer-group-name} send-community [both | standard | extended]
- **33**. **neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **route-reflector-client**
- **34. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **next-hop-unchanged** [**allpaths**]

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	router bgp autonomous-system-number	Configures the BGP routing process.
	Example:	
	Device(config)# router bgp 100	
Step 4	<b>neighbor</b> {ip-address   ipv6-address   peer-group-name} <b>remote-as</b> as-number	Adds an entry to the multiprotocol BGP neighbor table, and provides peering with the Internet gateway in order to provide Internet access.
	Example:	access.
	Device(config-router)# neighbor 192.168.2.101 remote-as 100	
Step 5	neighbor {ip-address   ipv6-address   peer-group-name} update- source interface-type interface-number	Enables the BGP session to use a source address on the specified interface.
	Example:	
	Device(config-router)# neighbor 192.168.2.101 update- source Loopback 0	
Step 6	<b>neighbor</b> {ip-address   ipv6-address   peer-group-name} <b>remote-as</b> as-number	Adds an entry to the multiprotocol BGP neighbor table, and provides peering with the other POP's RR.
	Example:	
	Device(config-router)# neighbor 192.168.2.121 remote-as 100	

	Command or Action	Purpose
Step 7	neighbor {ip-address   ipv6-address   peer-group-name} update- source interface-type interface-number	Enables the BGP session to use a source address on the specified interface.
	Example:	
	Device(config-router)# neighbor 192.168.2.121 update- source Loopback 0	
Step 8	<b>neighbor</b> {ip-address   ipv6-address   peer-group-name} <b>remote-as</b> as-number	Adds an entry to the multiprotocol BGP neighbor table.
	Example:	
	Device(config-router)# neighbor 192.168.2.127 remote-as 100	
Step 9	neighbor {ip-address   ipv6-address   peer-group-name} update- source interface-type interface-number	Enables the BGP session to use a source address on the specified interface.
	Example:	
	Device(config-router)# neighbor 192.168.2.127 update- source Loopback 0	
Step 10	neighbor {ip-address   ipv6-address   peer-group-name} remote-as as-number	(Optional) Adds an entry to the multiprotocol BGP neighbor table, and provides peering with the RR of the peer ISP in order to provide inter-VPN service.
	Example:	
	Device(config-router)# neighbor 192.168.2.1 remote-as 200	
Step 11	neighbor {ip-address   ipv6-address   peer-group-name} update- source interface-type interface-number	(Optional) Enables the BGP session to use a source address on the specified interface.
	Example:	
	Device(config-router)# neighbor 192.168.2.1 update-source Loopback 0	
Step 12	neighbor {ip-address   ipv6-address   peer-group-name} ebgp-multihop [ttl]	(Optional) Accepts and attempts BGP connections to external peers residing on networks that are not directly connected.
	Example:	
	Device(config-router)# neighbor 192.168.2.1 ebgp-multihop	
	·	

	Command or Action	Purpose
Step 13	address-family ipv6	(Optional) Enters address family configuration mode in order to provide Internet access service.
	Example:	
	Device(config-router)# address-family ipv6	
Step 14	$\textbf{neighbor} \; \{\textit{ip-address} \mid \textit{peer-group-name} \mid \textit{ipv6-address}\} \; \textbf{activate}$	(Optional) Enables the exchange of information for this address family with the specified neighbor.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.101 activate	
Step 15	$\textbf{neighbor} \; \{ \; \textit{ip-address} \;   \; \textit{ipv6-address} \;   \; \textit{peer-group-name} \} \; \textbf{send-label}$	(Optional) Enables a BGP device to send MPLS labels with BGP routes to a neighboring BGP device.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.101 send-label	
Step 16	$\begin{tabular}{l} \textbf{neighbor} \ \{\textit{ip-address} \mid \textit{ipv6-address} \mid \textit{peer-group-name}\} \ \textbf{route-reflector-client} \\ \end{tabular}$	(Optional) Configures the device as a BGP route reflector and configures the specified neighbor as its client.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.101 route-reflector-client	
Step 17	neighbor {ip-address   peer-group-name   ipv6-address} activate	(Optional) Enables the exchange of information for this address family with the specified BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.121 activate	
Step 18	$\textbf{neighbor} \; \{ \; \textit{ip-address} \;   \; \textit{ipv6-address} \;   \; \textit{peer-group-name} \} \; \textbf{send-label}$	(Optional) Enables a BGP device to send MPLS labels with BGP routes to a neighboring BGP
	Example:	device.
	Device(config-router-af)# neighbor 192.168.2.121 send-label	
Step 19	neighbor {ip-address   ipv6-address   peer-group-name} route-reflector-client	(Optional) Configures the specified neighbor as a route reflector client.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.121 route- reflector-client	

	Command or Action	Purpose
Step 20	neighbor {ip-address   peer-group-name   ipv6-address} activate	(Optional) Enables the exchange of information for this address family with the specified BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.127 activate	
Step 21	neighbor { ip-address   ipv6-address   peer-group-name} send-label	(Optional) Enables a BGP device to send MPLS labels with BGP routes to a neighboring BGP device.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.127 send-label	
Step 22	neighbor {ip-address   ipv6-address   peer-group-name} route-reflector-client	(Optional) Configures the specified neighbor as a route reflector client.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.127 route-reflector-client	
Step 23	exit	(Optional) Exits address family configuration mode.
	Example:	
	Device(config-router-af)# exit	
Step 24	address-family vpnv6 [unicast]	Places the device in address family configuration mode for configuring routing sessions.
	Example:	
	Device(config-router)# address-family vpnv6	
Step 25	neighbor {ip-address   peer-group-name   ipv6-address} activate	Enables the exchange of information for this address family with the specified BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.121 activate	
Step 26	neighbor {ip-address   ipv6-address   peer-group-name} send- community [both   standard   extended]	Specifies that a communities attribute should be sent to the BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.21 send-community extended	

	Command or Action	Purpose
Step 27	neighbor {ip-address   ipv6-address   peer-group-name} route-reflector-client	Configures the specified neighbor as a route reflector client.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.121 routereflector-client	
Step 28	neighbor {ip-address   peer-group-name   ipv6-address} activate	Enables the exchange of information for this address family with the specified BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.127 activate	
Step 29	<b>neighbor</b> {ip-address   ipv6-address   peer-group-name} <b>send-community</b> [both   standard   extended]	Specifies that a communities attribute should be sent to the BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.127 send-community extended	
Step 30	neighbor {ip-address   ipv6-address   peer-group-name} route-reflector-client	Configures the specified neighbor as a route reflector client.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.127 route-reflector-client	
Step 31	neighbor {ip-address   peer-group-name   ipv6-address} activate	Enables the exchange of information for this address family with the specified BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.1 activate	
Step 32	neighbor {ip-address   ipv6-address   peer-group-name} send- community [both   standard   extended]	Specifies that a communities attribute should be sent to the BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.1 send-community extended	

	Command or Action	Purpose
Step 33	neighbor {ip-address   ipv6-address   peer-group-name} route-reflector-client	Configures the specified neighbor as a route reflector client.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.1 routereflector-client	
Step 34	neighbor {ip-address   ipv6-address   peer-group-name} next-hop-unchanged [allpaths ]	Enables an EBGP multihop peer to propagate to the next hop unchanged for paths.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.1 next-hop-unchanged allpaths	

## **Configuring Internet Access**

Customers with IPv6 VPN access need to have access to the Internet through IPv6. The design of this service is similar to a global Internet access service. 6VPE devices located in a Level 1 POP (colocated with an IGW device) can access the IGW natively, whereas 6VPE devices located in Level 2 and Level 3 POPs with no direct access to the IGW can access the IGW in their closest Level 1 POP over 6PE.

Configuring VPN Internet access in such a 6VPE device involves configuring BGP peering with the IGW (in most cases through the IPv6 RR, as described in the Configuring Route Reflectors for Improved Scalability section). Then the user must configure cross-table routing to enable communication between the private domain (the VRF) and the public domain (the Internet).

The figure above illustrates the following configuration tasks:

- Configuring the Internet Gateway, page 24
- Configuring the IPv6 VPN PE, page 29

## **Configuring the Internet Gateway**

- Configuring iBGP 6PE Peering to the VPN PE, page 24
- Configuring the Internet Gateway as the Gateway to the Public Domain, page 26
- Configuring eBGP Peering to the Internet, page 27

### Configuring iBGP 6PE Peering to the VPN PE

### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3.** router bgp autonomous-system-number
- **4. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **remote-as** *as-number*
- **5. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **update-source** *interface-type interface-number*
- 6. address-family ipv6
- 7. **neighbor** {*ip-address* | *peer-group-name* | *ipv6-address*} **activate**
- **8.** neighbor {  $ip\text{-}address \mid pv6\text{-}address \mid peer\text{-}group\text{-}name$ } send-label

	Command or Action	Purpose	
Step 1	enable	Enables privileged EXEC mode.	
		Enter your password if prompted.	
	Example:		
	Device> enable		
Step 2	configure terminal	Enters global configuration mode.	
	Example:		
	Device# configure terminal		
Step 3	router bgp autonomous-system-number	Configures the BGP routing process.	
	Example:		
	Device(config)# router bgp 100		
Step 4	neighbor {ip-address   ipv6-address   peer-group-name} remote-	Adds an entry to the multiprotocol BGP neighbor	
	as as-number	table to provide peering with the VPN PE.	
	Example:		
	Example.		
	<pre>Device(config-router)# neighbor 192.168.2.127 remote-as 100</pre>		

	Command or Action	Purpose
Step 5	<b>neighbor</b> {ip-address   ipv6-address   peer-group-name} <b>update-source</b> interface-type interface-number	Enables the BGP session to use a source address on the specified interface.
	Example:	
	Device(config-router)# neighbor 192.168.2.127 update- source Loopback 0	
Step 6	address-family ipv6	Enters address family configuration mode in order to exchange global table reachability.
	Example:	
	Device(config-router)# address-family ipv6	
Step 7	neighbor {ip-address   peer-group-name   ipv6-address} activate	Enables the exchange of information for this address family with the specified BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.127 activate	
Step 8	neighbor { ip-address   ipv6-address   peer-group-name} send- label	Enables a BGP device to send MPLS labels with BGP routes to a neighboring BGP device, and allows the PE VPN to reach the Internet gateway over MPLS.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.127 send-label	

### Configuring the Internet Gateway as the Gateway to the Public Domain

Use the 6PE peering configuration established in the Configuring iBGP 6PE Peering to the VPN PE, page 24 to perform this task.

### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3.** router bgp autonomous-system-number
- 4. address-family ipv6
- **5. network** *ipv6-address* / *prefix-length*

### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	router bgp autonomous-system-number	Configures the BGP routing process.
	Example:	
	Device(config)# router bgp 100	
Step 4	address-family ipv6	Enters address family configuration mode in order to exchange global table reachability.
	Example:	
	Device(config-router)# address-family ipv6	
Step 5	network ipv6-address / prefix-length	Configures the network source of the next hop to be used by the PE VPN.
	Example:	
	Device(config-router-af)# network 2001:DB8:100::1/128	

### **Configuring eBGP Peering to the Internet**

### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3.** router bgp autonomous-system-number
- **4. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **remote-as** *as-number*
- 5. address-family ipv6
- **6. neighbor** { *ip-address* | *peer-group-name* | *ipv6-address*} **activate**
- 7. aggregate-address address mask [as-set] [summary-only] [suppress-map map-name] [advertise-map map-name] [attribute-map map-name]

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	router bgp autonomous-system-number	Configures the BGP routing process.
	Example:	
	Device(config)# router bgp 100	
Step 4	$\begin{array}{l} \textbf{neighbor} \; \{\textit{ip-address} \mid \textit{ipv6-address} \mid \textit{peer-group-name}\} \; \textbf{remote-as} \\ \textit{as-number} \end{array}$	Adds an entry to the multiprotocol BGP neighbor table, and provides peering with PE (PE-VPN).
		The peering is done over link-local addresses.
	Example:	
	Device(config-router)# neighbor FE80::300::1 Ethernet0/0 remote-as 300	
Step 5	address-family ipv6	Enters address family configuration mode in order to exchange global table reachability.
	Example:	
	Device(config-router)# address-family ipv6	
Step 6	neighbor {ip-address   peer-group-name   ipv6-address} activate	Enables the exchange of information for this address family with the specified BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor FE80::300::1 Ethernet0/0 activate	

	Command or Action	Purpose
Step 7	aggregate-address address mask [as-set] [summary-only] [suppress-map map-name] [advertise-map map-name] [attribute-map map-name]	Creates an aggregate prefix before advertising it to the Internet.
	Example:	
	Device(config-router-af)# aggregate-address 2001:DB8::/32 summary-only	

### **Configuring the IPv6 VPN PE**

- Configuring a Default Static Route from the VRF to the Internet Gateway, page 29
- Configuring a Static Route from the Default Table to the VRF, page 30
- Configuring iBGP 6PE Peering to the Internet Gateway, page 31

### Configuring a Default Static Route from the VRF to the Internet Gateway

### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3. ipv6 route** [**vrf** *vrf*-*name*] *ipv6*-*prefix/prefix-length* {*ipv6*-*address* | *interface-type interface-number* [*ipv6*-*address*]} [**nexthop-vrf** [*vrf*-*name1* | **default**]] [*administrative-distance*] [*administrative-multicast-distance* | **unicast** | **multicast**] [*next-hop-address*] [**tag** *tag*]

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	

	Command or Action	Purpose
Step 3	ipv6 route [vrf vrf-name] ipv6-prefix/prefix-length {ipv6-address   interface-type interface-number [ipv6-address]} [nexthop-vrf [vrf-name1   default]] [administrative-distance] [administrative-multicast-distance   unicast   multicast] [next-hop-address] [tag tag]	Configures a default static route from the VRF to the Internet gateway to allow outbound traffic to leave the VRF.
	Example:	
	Device(config)# ipv6 route vrf vrfl ::/0 2001:DB8:100::1 nexthop-vrf default	

### Configuring a Static Route from the Default Table to the VRF

### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3. ipv6 route** [**vrf** vrf-name] ipv6-prefix/prefix-length {ipv6-address | interface-type interface-number [ipv6-address]} [**nexthop-vrf** [vrf-name1 | **default**]] [administrative-distance] [administrative-multicast-distance | **unicast** | **multicast**] [next-hop-address] [**tag** tag]

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	ipv6 route [vrf vrf-name] ipv6-prefix/prefix-length {ipv6-address   interface-type interface-number [ipv6-address]} [nexthop-vrf [vrf-name1   default]] [administrative-distance] [administrative-multicast-distance   unicast   multicast] [next-hop-address] [tag tag]	Configures a static route from the default table to the VRF to allow inbound traffic to reach the VRF.
	Example:	
	Device(config)# ipv6 route 2001:DB8:100:2000::/64 nexthop-vrf vrf1	

### **Configuring iBGP 6PE Peering to the Internet Gateway**

### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3.** router bgp autonomous-system-number
- **4. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **remote-as** *as-number*
- **5. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **update-source** *interface-type interface-number*
- **6.** address-family ipv6 [vrf vrf-name] [unicast | multicast]
- **7. neighbor** {*ip-address* | *peer-group-name* | *ipv6-address*} **activate**
- **8. neighbor** { *ip-address* | *ipv6-address* | *peer-group-name*} **send-label**
- **9. network** *ipv6-address | prefix-length*

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	router bgp autonomous-system-number	Configures the BGP routing process.
	Example:	
	Device(config)# router bgp 100	
Step 4	<b>neighbor</b> {ip-address   ipv6-address   peer-group-name} <b>remote-as</b> asnumber	Adds an entry to the multiprotocol BGP neighbor table for peering with the Internet gateway.
	Example:	
	Device(config-router)# neighbor 192.168.2.101 remote-as 100	

	Command or Action	Purpose
Step 5	<b>neighbor</b> {ip-address   ipv6-address   peer-group-name} <b>update-source</b> interface-type interface-number	Enables the BGP session to use a source address on the specified interface.
	Example:	
	Device(config-router)# neighbor 192.168.2.101 update-source Loopback 0	
Step 6	address-family ipv6 [vrf vrf-name] [unicast   multicast]	Enters address family configuration mode to exchange global table reachability.
	Example:	
	Device(config-router)# address-family ipv6	
Step 7	neighbor {ip-address   peer-group-name   ipv6-address} activate	Enables the exchange of information for this address family with the specified BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.101 activate	
Step 8	neighbor { ip-address   ipv6-address   peer-group-name} send-label	Enables label exchange for this address family to this neighbor to enable the VPN PE to reach the Internet gateway over MPLS.
	Example:	the internet gateway over Mi Es.
	Device(config-router-af)# neighbor 192.168.2.101 send-label	
Step 9	network ipv6-address / prefix-length	Provides the VRF prefix to the Internet gateway.
	Example:	
	Device(config-router-af)# network 2001:DB8:100:2000::/64	

## Configuring a Multiautonomous-System Backbone for IPv6 VPN

Two VPN sites may be connected to different autonomous systems because the sites are connected to different service providers. The PE devices attached to that VPN is then unable to maintain iBGP connections with each other or with a common route reflector. In this situation, there must be some way to use eBGP to distribute VPN-IPv6 addresses.

The following configuration example illustrates two scenarios, one in which a multiprotocol eBGP-IPv6 VPN peering between ASBRs uses an IPv4 link, and the same scenario using an IPv6 link. If the peering between ASBRs is performed over an IPv4 link, the BGP configuration on ASBR1 is as follows:

```
router bgp 1001
no bgp default ipv4-unicast
no bgp default route-target filter
neighbor 192.1.1.1 remote-as 1002
neighbor 192.168.2.11 remote-as 1001
neighbor 192.168.2.11 update-source Loopback1
```

```
! address-family vpnv6 !Peering to ASBR2 over an IPv4 link neighbor 192.1.1.1 activate neighbor 192.1.1.1 send-community extended !Peering to PE1 over an IPv4 link neighbor 192.168.2.11 activate neighbor 192.168.2.11 next-hop-self neighbor 192.168.2.11 send-community extended
```

If the peering between ASBRs is performed over an IPv6 link, the BGP configuration on ASBR1 is as follows:

```
router bgp 1001
neighbor 2001:DB8:101::72d remote-as 1002
!
address-family vpnv6
!Peering to ASBR2 over an IPv6 link
neighbor 2001:DB8:101::72d activate
neighbor 2001:DB8:101::72d send-community extended
```

The next several tasks describe how to configure the PE VPN for a multiautonomous-system backbone using multihop multiprotocol eBGP to redistribute VPN routes across RRs in different autonomous systems. Labeled IPv4 routes to the PEs are advertised across ASBRs so that a complete label switch path (LSP) is set up end to end.

In this scenario, the ASBRs are not VPN aware; only the RRs are VPN aware. The following configuration should be available and understood:

- The ASBRs are providing the PEs' loopback addresses to service providers they peer with. That
  includes:
  - The VPN PE's IPv4 loopback address (/32) for enabling next-hop resolution at the remote service provider location.
  - The VPN RR's IPv4 loopback address (/32) for enabling interprovider (inter-RR) eBGP peering.
- For the VPN PE's IPv4 loopback address, the address providing is performed over multiprotocol BGP, with the label, up to the remote PEs, so that the label establishes an end-to-end LSP. Therefore, the following MP-BGP peering was set up for VPNv4:
  - VPN PEs are iBGP peering with VPN RRs.
  - ASBRs are iBGP peering with VPN RRs.
  - ASBRs are eBGP peering with the remote service provider ASBR.
- The VPN RRs of each service provider are peering together over eBGP and exchanging VPN routes. The next hop is forwarded unchanged, so that the end-to-end LSP is not via RRs.

To enable IPv6 VPN interautonomous-system access in this scenario, the ISP needs to modify the configurations at the PE VPN and at the RR. The same RRs are set up to provide a similar service for VPNv4. In that context, because the peering between the RR and the ASBR and between ASBRs is solely to exchange labels for IPv4 next hops used by both IPv4 VPN and IPv6 VPN, the ASBRs remain completely IPv6 unaware, and no configuration change is required there.

The figure below shows the BGP peering points required to enable IPv6 interprovider connectivity from the PE-VPN device (providing IPv6 VPN access) to the xxCom network.

AS100 AS200 L1-POP xx Com Route Reflector 192,168,2,1 RR1 Route Reflector RR2 92.168.2.115 192.168.3.1 Autonomous System Boundary Router Autonomous System ASBR<sub>2</sub> Boundary Router ASBR1 192.168.2.127

Figure 7 BGP Peering Points for Enabling Interautonomous System Scenario C

The following additional BGP peerings are necessary to enable interautonomous-system communication from the IPv6 VPN PE located in the Level 2 POP:

- IPv4 with label peering from the PE VPN to the route reflector named RR1 (which is already configured if VPNv4 interautonomous system is deployed on the same nodes, using the same LSP).
- IPv4 with label peering from RR1 to ASBR1.
- IPv4 with label peering between ASBR1 and ASBR2.

VPNv6 (6VPE) peering
 IPv4 + label peering

- IPv6 VPN peering between RR1 and RR2 (which is the route reflector in the other autonomous systems) to exchange IPv6 VPN routes.
- IPv6 VPN peering with RR1. If the same route reflectors used to scale the IPv6 VPN service are used for interautonomous-system capability, then this function might also be already configured (see the Configuring Route Reflectors for Improved Scalability, page 16).

Configuring the multiautonomous-system backbone for IPv6 VPN consists of the following tasks:

- Configuring the PE VPN for a Multiautonomous-System Backbone, page 34
- Configuring the Route Reflector for a Multiautonomous-System Backbone, page 37
- Configuring the ASBR, page 47

## Configuring the PE VPN for a Multiautonomous-System Backbone

- Configuring iBGP IPv6 VPN Peering to a Route Reflector, page 34
- Configuring IPv4 and Label iBGP Peering to a Route Reflector, page 36

### Configuring iBGP IPv6 VPN Peering to a Route Reflector

Perform this task to configure iBGP IPv6 VPN peering to a route reflector named RR1.

### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3.** router bgp autonomous-system-number
- $\textbf{4. neighbor} \ \{\textit{ip-address} \mid \textit{ipv6-address} \mid \textit{peer-group-name}\} \ \textbf{remote-as} \ \textit{as-number}$
- **5. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **update-source** *interface-type interface-number*
- 6. address-family vpnv6 [unicast]
- 7. **neighbor** {*ip-address* | *peer-group-name* | *ipv6-address*} **activate**
- **8.** neighbor {ip-address | ipv6-address | peer-group-name} send-community [both | standard | extended]
- 9. exit

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Firemula	
	Example:	
	Device# configure terminal	
Step 3	router bgp autonomous-system-number	Configures the BGP routing process.
	Example:	
	Device(config)# router bgp 100	
Step 4	neighbor {ip-address   ipv6-address   peer-group-name} remote-as as-number	Adds an entry to the multiprotocol BGP neighbor table for peering with the route reflector with interautonomous-system functionality.
	Example:	
	Device(config-router)# neighbor 192.168.2.115 remote-as 100	

	Command or Action	Purpose
Step 5	<b>neighbor</b> {ip-address   ipv6-address   peer-group-name} <b>update-source</b> interface-type interface-number	Enables the BGP session to use a source address on the specified interface.
	Example:	
	Device(config-router)# neighbor 192.168.2.115 update- source Loopback 0	
Step 6	address-family vpnv6 [unicast]	(Optional) Places the device in address family configuration mode for configuring routing sessions.
	Example:	
	Device(config-router)# address-family vpnv6	
Step 7	neighbor {ip-address   peer-group-name   ipv6-address} activate	Enables the exchange of information for this address family with the specified BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.115 activate	
Step 8	neighbor {ip-address   ipv6-address   peer-group-name} send- community [both   standard   extended]	Specifies that a communities attribute should be sent to the BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.115 send-community extended	
Step 9	exit	Exits address family configuration mode.
	Example:	
	Device(config-router-af)# exit	

### Configuring IPv4 and Label iBGP Peering to a Route Reflector

Perform this task to configure IPv4 and label iBGP peering to a route reflector named RR1.

### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3.** router bgp autonomous-system-number
- $\textbf{4. address-family ipv4} \ [\textbf{mdt} \ | \ \textbf{multicast} \ | \ \textbf{tunnel} \ | \ \textbf{unicast} \ [\textbf{vrf} \ \textit{vrf-name}] \ | \ \textbf{vrf} \ \textit{vrf-name}]$
- **5. neighbor**  $\{ip\text{-}address \mid peer\text{-}group\text{-}name \mid ipv6\text{-}address\}$  **activate**
- **6. neighbor** { *ip-address* | *ipv6-address* | *peer-group-name*} **send-label**

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	router bgp autonomous-system-number	Configures the BGP routing process.
	Example:	
	Device(config)# router bgp 100	
Step 4	address-family ipv4 [mdt   multicast   tunnel   unicast [vrf vrf-name]   vrf vrf-name]	Enters address family configuration mode to configure a routing session using standard IPv4 address prefixes.
	Example:	
	Device(config-router)# address-family ipv4	
Step 5	neighbor {ip-address   peer-group-name   ipv6-address}	Enables the exchange of information for this address
	activate	family with the specified BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.115	
	activate	
Step 6	neighbor { ip-address   ipv6-address   peer-group-name} send- label	Enables label exchange for this address family to this neighbor in order to receive remote PE peer IPv4 loopback with label via RR1 in order to set up an end-to-end LSP.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.115 send-label	

# **Configuring the Route Reflector for a Multiautonomous-System Backbone**

• Configuring Peering to the PE VPN, page 38

- Configuring the Route Reflector, page 40
- Configuring Peering to the Autonomous System Boundary Router, page 43
- Configuring Peering to Another ISP Route Reflector, page 45

#### Configuring Peering to the PE VPN

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- **4. neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **remote-as** *as-number*
- **5. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **update-source** *interface-type interface-number*
- 6. address-family vpnv6 [unicast]
- 7. neighbor {ip-address | peer-group-name | ipv6-address} activate
- **8. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **send-community** [**both** | **standard** | **extended**]
- 9. exit
- 10. address-family ipv4 [mdt | multicast | tunnel | unicast [vrf vrf-name] | vrf vrf-name]
- **11. neighbor** { *ip-address* | *peer-group-name* | *ipv6-address*} **activate**
- **12. neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **send-label**
- **13**. exit

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	router bgp autonomous-system-number	Configures the BGP routing process.
	Example:	
	Device(config)# router bgp 100	

	Command or Action	Purpose
Step 4	neighbor {ip-address   ipv6-address   peer-group-name} remoteas as as-number	Adds an entry to the multiprotocol BGP neighbor table for peering with the route reflector for interautonomous system.
	Example:	
	Device(config-router)# neighbor 192.168.2.115 remote- as 100	
Step 5	<b>neighbor</b> {ip-address   ipv6-address   peer-group-name} <b>update-source</b> interface-type interface-number	Enables the BGP session to use a source address on the specified interface.
	Example:	
	Device(config-router)# neighbor 192.168.2.115 update- source Loopback 0	
Step 6	address-family vpnv6 [unicast]	(Optional) Places the device in address family configuration mode.
	Example:	
	Device(config-router)# address-family vpnv6	
Step 7	$\textbf{neighbor} \; \{\textit{ip-address} \mid \textit{peer-group-name} \mid \textit{ipv6-address}\} \; \textbf{activate}$	Enables the exchange of information for this address family with the specified BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.115 activate	
Step 8	neighbor {ip-address   ipv6-address   peer-group-name} send- community [both   standard   extended]	Specifies that a community attribute should be sent to the BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.115 send-community extended	
Step 9	exit	Exits address family configuration mode.
	Example:	
	Device(config-router-af)# exit	

	Command or Action	Purpose
Step 10	address-family ipv4 [mdt   multicast   tunnel   unicast [vrf vrf-name]   vrf vrf-name]	Enters address family configuration mode to configure a routing session using standard IPv4 address prefixes.
	Example:	
	Device(config-router)# address-family ipv4	
Step 11	neighbor {ip-address   peer-group-name   ipv6-address} activate	Enables the exchange of information for this address family with the specified BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.115 activate	
Step 12	neighbor { ip-address   ipv6-address   peer-group-name} send- label	Enables label exchange for this address family to this neighbor in order to send to the local PE the remote PE IPv4 loopback with a label in order to set up an end-to-end LSP.
	Example:	ap an one to one Est.
	Device(config-router-af)# neighbor 192.168.2.115 send-label	
Step 13	exit	Exits address family configuration mode.
	Example:	
	Device(config-router-af)# exit	

## **Configuring the Route Reflector**

- 1. enable
- 2. configure terminal
- **3.** router bgp autonomous-system-number
- **4. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **remote-as** *as-number*
- **5. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **update-source** *interface-type interface-number*
- 6. address-family vpnv6 [unicast]
- **7. neighbor** { *ip-address* | *peer-group-name* | *ipv6-address*} **activate**
- **8. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **send-community** [**both** | **standard** | **extended**]
- **9. neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **route-reflector-client**
- 10. exit
- 11. address-family ipv4 [mdt | multicast | tunnel | unicast [vrf vrf-name] | vrf vrf-name]
- **12. neighbor** { *ip-address* | *peer-group-name* | *ipv6-address*} **activate**
- **13. neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **send-label**
- **14.** exit

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	router bgp autonomous-system-number	Configures the BGP routing process.
	Example:	
	Device(config)# router bgp 100	

Command or Action	Purpose
<b>neighbor</b> {ip-address   ipv6-address   peer-group-name} <b>remote-as</b> as-number	Adds an entry to the multiprotocol BGP neighbor table for peering with the VPN PE for interautonomous system.
Example:	
Device(config-router)# neighbor 192.168.2.127 remote-as	
neighbor {ip-address   ipv6-address   peer-group-name} update- source interface-type interface-number	Enables the BGP session to use a source address on the specified interface.
Example:	
Device(config-router)# neighbor 192.168.2.127 update- source Loopback 0	
address-family vpnv6 [unicast]	(Optional) Places the device in address family configuration mode.
Example:	
Device(config-router)# address-family vpnv6	
neighbor {ip-address   peer-group-name   ipv6-address} activate	Enables the exchange of information for this address family with the specified neighbor.
Example:	
Device(config-router-af)# neighbor 192.168.2.127 activate	
neighbor {ip-address   ipv6-address   peer-group-name} send- community [both   standard   extended]	Specifies that a community attribute should be sent to the BGP neighbor.
Example:	
Device(config-router-af)# neighbor 192.168.2.127 send-community extended	
neighbor { ip-address   ipv6-address   peer-group-name} route- reflector-client	Configures the specified neighbor as a route reflector client.
Example:	
Device(config-router-af)# neighbor 192.168.2.127 route- reflector-client	
E C1 II S E C II S E C II S E C II S	ineighbor {ip-address   ipv6-address   peer-group-name} remote-as is-number  ixample:  ixample:

	Command or Action	Purpose
Step 10	exit	Exits address family configuration mode.
	Example:	
	Device(config-router-af)# exit	
Step 11	address-family ipv4 [mdt   multicast   tunnel   unicast [vrf vrf-name]   vrf vrf-name]	Enters address family configuration mode to configure a routing session using standard IPv4 address prefixes.
	Example:	
	Device(config-router)# address-family ipv4	
Step 12	neighbor {ip-address   peer-group-name   ipv6-address} activate	Enables the exchange of information for this address family with the specified neighbor.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.127 activate	
tep 13	neighbor { ip-address   ipv6-address   peer-group-name} send- label	Enables label exchange for this address family to this neighbor in order to send to the local PE the remote PE IPv4 loopback with a label in order to set up an end-to-end LSP.
	Example:	set up an one to one Est.
	Device(config-router-af)# neighbor 192.168.2.127 send-label	
tep 14	exit	Exits address family configuration mode.
	Example:	
	Device(config-router-af)# exit	

**Configuring Peering to the Autonomous System Boundary Router** 

- 1. enable
- 2. configure terminal
- **3.** router bgp autonomous-system-number
- **4. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **remote-as** *as-number*
- **5. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **update-source** *interface-type interface-number*
- 6. address-family ipv4 [mdt | multicast | tunnel | unicast [vrf vrf-name] | vrf vrf-name]
- 7. neighbor { ip-address | peer-group-name | ipv6-address} activate
- **8. neighbor** { *ip-address* | *ipv6-address* | *peer-group-name*} **send-label**
- 9. exit

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	router bgp autonomous-system-number	Configures the BGP routing process.
	Example:	
	Device(config)# router bgp 100	
Step 4	neighbor {ip-address   ipv6-address   peer-group-name} remote-as as-number	Adds an entry to the multiprotocol BGP neighbor table for peering with the ASBR1.
	Example:	
	Device(config-router)# neighbor 192.168.2.102 remote-as 100	

	Command or Action	Purpose
Step 5	<b>neighbor</b> {ip-address   ipv6-address   peer-group-name} <b>update-source</b> interface-type interface-number	Enables the BGP session to use a source address on the specified interface.
	Example:	
	Device(config-router)# neighbor 192.168.2.102 update- source Loopback 0	
Step 6	address-family ipv4 [mdt   multicast   tunnel   unicast [vrf vrf-name]   vrf vrf-name]	Enters address family configuration mode to configure a routing session using standard IPv4 address prefixes.
	Example:	
	Device(config-router)# address-family ipv4	
Step 7	neighbor {ip-address   peer-group-name   ipv6-address} activate	Enables the exchange of information for this address family with the specified BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.102 activate	
Step 8	neighbor { ip-address   ipv6-address   peer-group-name} send-label	Enables label exchange for this address family to this neighbor in order to receive the remote PE IPv4 loopback with the label set to an end-to-end
	Example:	LSP.
	Device(config-router-af)# neighbor 192.168.2.102 send-label	
Step 9	exit	Exits address family configuration mode.
	Example:	
	Device(config-router-af)# exit	

## **Configuring Peering to Another ISP Route Reflector**

Perform this task to configure peering to an ISP route reflector named RR2.

- 1. enable
- 2. configure terminal
- **3.** router bgp autonomous-system-number
- **4. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **remote-as** *as-number*
- **5. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **update-source** *interface-type interface-number*
- **6. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **ebgp-multihop** [*ttl*]
- 7. address-family vpnv6 [unicast]
- **8. neighbor** { *ip-address* | *peer-group-name* | *ipv6-address*} **activate**
- **9. neighbor** {*ip-address* | *ipv6-address* | **peer-group-name**} **send-community** [**both** | **standard** | **extended**]
- **10.** neighbor {ip-address | ipv6-address | peer-group-name} next-hop-unchanged [allpaths]

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	router bgp autonomous-system-number	Configures the BGP routing process.
	Example:	
	Device(config)# router bgp 100	
Step 4	<b>neighbor</b> {ip-address   ipv6-address   peer-group-name} <b>remote-as</b> as-number	Adds an entry to the multiprotocol BGP neighbor table for eBGP peering with RR2.
	Example:	
	Device(config-router)# neighbor 192.168.2.1 remote-as 100	

	Command or Action	Purpose
Step 5	<b>neighbor</b> {ip-address   ipv6-address   peer-group-name} <b>update-source</b> interface-type interface-number	Enables the BGP session to use a source address on the specified interface.
	Example:	
	Device(config-router)# neighbor 192.168.2.1 update-source Loopback 0	
Step 6	neighbor {ip-address   ipv6-address   peer-group-name} ebgp-multihop [ttl]	(Optional) Accepts and attempts BGP connections to external peers residing on networks that are not directly connected.
	Example:	
	Device(config-router)# neighbor 192.168.2.1 ebgp-multihop	
Step 7	address-family vpnv6 [unicast]	(Optional) Places the device in address family configuration mode for configuring routing sessions.
	Example:	Sessions.
	Device(config-router)# address-family vpnv6	
Step 8	neighbor {ip-address   peer-group-name   ipv6-address} activate	Enables the exchange of information for this address family with the specified BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.1 activate	
Step 9	neighbor {ip-address   ipv6-address   peer-group-name} send- community [both   standard   extended]	Specifies that a communities attribute should be sent to the BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.1 send-community extended	
Step 10	neighbor {ip-address   ipv6-address   peer-group-name} next-hop-unchanged [allpaths]	Enables an eBGP multihop peer to propagate to the next hop unchanged for paths.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.1 next-hop-unchanged allpaths	

## **Configuring the ASBR**

Perform this task to configure peering to an ISP route reflector named RR2.

- Configuring Peering with Router Reflector RR1, page 48
- Configuring Peering with the Other ISP ASBR2, page 49

#### **Configuring Peering with Router Reflector RR1**

Perform this task to configure peering with a route reflector named RR1.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3.** router bgp autonomous-system-number
- **4. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **remote-as** *as-number*
- **5. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **update-source** *interface-type interface-number*
- $\textbf{6.} \ \ \textbf{address-family ipv4} \ [\textbf{mdt} \ | \ \textbf{multicast} \ | \ \textbf{tunnel} \ | \ \textbf{unicast} \ [\textbf{vrf} \ \textit{vrf-name}] \ | \ \textbf{vrf} \ \textit{vrf-name}$
- **7. neighbor** {*ip-address* | *peer-group-name* | *ipv6-address*} **activate**
- **8. neighbor** *ip-address* | *ipv6-address* | *peer-group-name* **send-label**
- 9. exit

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	router bgp autonomous-system-number	Configures the BGP routing process.
	Example:	
	Device(config)# router bgp 100	
Step 4	$\begin{tabular}{ll} \bf neighbor ~ \{\it ip-address \mid \it ipv6-address \mid \it peer-group-name\} ~ \bf remote- \\ \bf as ~ \it as-number \\ \end{tabular}$	Adds an entry to the multiprotocol BGP neighbor table for peering with RR1.
	Example:	
	Device(config-router)# neighbor 192.168.2.115 remote-as 100	

	Command or Action	Purpose
Step 5	<b>neighbor</b> {ip-address   ipv6-address   peer-group-name} <b>update-source</b> interface-type interface-number	Enables the BGP session to use a source address on the specified interface.
	Example:	
	Device(config-router)# neighbor 192.168.2.115 update- source Loopback 0	
Step 6	address-family ipv4 [mdt   multicast   tunnel   unicast [vrf vrf-name]   vrf vrf-name	Enters address family configuration mode to configure a routing session using standard IPv4 address prefixes.
	Example:	
	Device(config-router)# address-family ipv4	
Step 7	neighbor {ip-address   peer-group-name   ipv6-address} activate	Enables the exchange of information for this address family with the specified BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 192.168.2.115 activate	
Step 8	neighbor ip-address   ipv6-address   peer-group-name send-label	Enables label exchange for this address family to this neighbor in order to send to the local PE the remote PE IPv4 loopback with a label in order to set
	Example:	up an end-to-end LSP.
	Device(config-router-af)# neighbor 192.168.2.115 send-label	
Step 9	exit	Exits address family configuration mode.
	Example:	
	Device(config-router-af)# exit	

## Configuring Peering with the Other ISP ASBR2

Perform this task to configure peering with ASBR2.

- 1. enable
- 2. configure terminal
- **3.** router bgp autonomous-system-number
- **4. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **remote-as** *as-number*
- **5. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **update-source** *interface-type interface-number*
- **6. neighbor** {*ip-address* | *ipv6-address* | *peer-group-name*} **ebgp-multihop** [*ttl*]
- 7. address-family ipv4 [mdt | multicast | tunnel | unicast [vrf vrf-name] | vrf vrf-name]
- **8. neighbor** { *ip-address* | *peer-group-name* | *ipv6-address*} **activate**
- **9. neighbor** { *ip-address* | *ipv6-address* | *peer-group-name*} **send-label**
- **10. network** { network-number [mask network-mask] | nsap-prefix } [route-map map-tag]
- **11. network** {network-number [mask network-mask] | nsap-prefix} [route-map map-tag]

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	router bgp autonomous-system-number	Configures the BGP routing process.
	Example:	
	Device(config)# router bgp 100	
Step 4	$\begin{tabular}{l} \textbf{neighbor} & \{ip\text{-}address \mid peer\text{-}group\text{-}name\} & \textbf{remote-} \\ \textbf{as} & as\text{-}number \\ \end{tabular}$	Adds an entry to the multiprotocol BGP neighbor table for peering with the ASBR2.
	Example:	
	<pre>Device(config-router)# neighbor 192.168.3.1 remote-as 100</pre>	

	Command or Action	Purpose
Step 5	<b>neighbor</b> {ip-address   ipv6-address   peer-group-name} <b>update-source</b> interface-type interface-number	Enables the BGP session to use a source address on the specified interface.
	Example:	
	Device(config-router)# neighbor 192.168.3.1 update- source Loopback 0	
Step 6	<b>neighbor</b> {ip-address   ipv6-address   peer-group-name} <b>ebgp-multihop</b> [ttl]	Accepts and attempts BGP connections to external peers residing on networks that are not directly connected.
	Example:	
	Device(config-router)# neighbor 192.168.3.1 ebgp-multihop	
Step 7	$ \begin{array}{c} \textbf{address-family ipv4} \ [\textbf{mdt} \   \ \textbf{multicast} \   \ \textbf{tunnel} \   \ \textbf{unicast} \ [\textbf{vrf} \ \textit{vrf-name}] \\ \textbf{name} \ ] \   \ \textbf{vrf} \ \textit{vrf-name} \ ] \\ \end{array} $	Enters address family configuration mode to configure a routing session using standard IPv4 address prefixes.
	Example:	
	Device(config-router)# address-family ipv4	
Step 8	neighbor {ip-address   peer-group-name   ipv6-address} activate	Enables the exchange of information for this address family with the specified BGP neighbor.
	Example:	
	Device(config-router-af)# neighbor 192.168.3.1 activate	
Step 9	neighbor { ip-address   ipv6-address   peer-group-name} send- label	Enables label exchange for this address family to this neighbor in order to receive the remote PE IPv4 loopback with a label in order to set up an end-to-end LSP.
	Example:	
	Device(config-router-af)# neighbor 192.168.3.1 send-label	
Step 10	<pre>network {network-number [mask network-mask]   nsap-prefix} [route-map map-tag]</pre>	Flags a network as local to this autonomous system and enters the network to the BGP table. This configuration is for the PE VPN loopback.
	Example:	
	Device(config-router-af)# network 192.168.2.27 mask 255.255.255	

	Command or Action	Purpose
Step 11	[route-map map-tag]	Flags a network as local to this autonomous system and enters the network to the BGP table. This configuration is for the RR1 loopback.
	Example:	
	Device(config-router-af)# network 192.168.2.15 mask 255.255.255.255	

## **Configuring CSC for IPv6 VPN**

Perform this task to configure CsC-PE1 peering configuration with CsC-CE1.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. hostname *name*
- **4. router bgp** *autonomous-system-number*
- **5.** address-family ipv6 [vrf vrf-name] [unicast | multicast]
- $\textbf{6. neighbor} \ \{\textit{ip-address} \mid \textit{ipv6-address} \mid \textit{peer-group-name}\} \ \textbf{remote-as} \ \textit{as-number}$
- **7. neighbor** {*ip-address* | *peer-group-name* | *ipv6-address*} **activate**
- **8. neighbor** { *ip-address* | *ipv6-address* | *peer-group-name*} **send-label**

	Command or Action	Purpose		
Step 1	enable	Enables privileged EXEC mode.		
		Enter your password if prompted.		
	Example:			
	Device> enable			
Step 2	configure terminal	Enters global configuration mode.		
	Example:			
	Device# configure terminal			
Step 3	hostname name	Specifies or modifies the host name for the network server.		
	Example:			
	Device(config)# hostname CSC-PE1			

	Command or Action	Purpose
Step 4	router bgp autonomous-system-number	Configures the BGP routing process.
	Example:	
	Device(config)# router bgp 100	
Step 5	address-family ipv6 [vrf vrf-name] [unicast   multicast]	Enters address family configuration mode.
	Example:	
	Device(config-router)# address-family ipv6 vrf ISP2	
Step 6	<b>neighbor</b> {ip-address   ipv6-address   peer-group-name} <b>remote-as</b> as-number	Adds an entry to the multiprotocol BGP neighbor table.
	Example:	
	Device(config-router-af)# neighbor FE80::866C:99 Serial0/0 remote-as 200	
Step 7	neighbor {ip-address   peer-group-name   ipv6-address} activate	Enables the exchange of information for this address family with the specified BGP neighbor.
	Example:	avignees.
	Device(config-router-af)# neighbor FE80::866C:99 Serial0/0 activate	
Step 8	neighbor { ip-address   ipv6-address   peer-group-name} send-label	Enables label exchange for this address family to this neighbor.
	Example:	
	Device(config-router-af)# neighbor FE80::866C:99 Serial0/0 send-label	

# **Configuring BGP IPv6 PIC Edge for IP MPLS**

Because many service provider networks contain many VRFs, the BGP PIC feature allows you to configure BGP PIC feature for all VRFs at once. Performing this task in IPv6 address family configuration mode protects IPv6 VRFs.

- 1. enable
- 2. configure terminal
- **3.** router bgp autonomous-system-number
- 4. address-family ipv6 [vrf vrf-name] [unicast | multicast | vpnv6]
- 5. bgp additional-paths install
- 6. bgp recursion host

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Router# configure terminal	
Step 3	router bgp autonomous-system-number	Configures the BGP routing process.
	Example:	
	Router(config)# router bgp 100	
Step 4	$address\text{-}family\ ipv6\ [vrf\textit{-}name]\ [unicast\mid multicast\mid vpnv6]$	Specifies a VRF table named vrf_pic, and enters IPv6 address family configuration mode.
		address raining configuration mode.
	Example:	
	Router(config-router)# address-family ipv6 vrf_pic	
Step 5	bgp additional-paths install	Calculates a backup path and installs it into the RIB and Cisco Express Forwarding.
	Example:	
	Router(config-router-af)# bgp additional-paths install	

	Command or Action	Purpose
Step 6	C.	Enables the recursive-via-host flag for IPv6 address families.
	Example:	
	Router(config-router-af)# bgp recursion host	

## Verifying and Troubleshooting IPv6 VPN

When users troubleshoot IPv6, any function that works similarly to VPNv4 will likely work for IPv6, therefore minimizing the learning curve for new IPv6 users. Few of the tools and commands used to troubleshoot 6PE and 6VPE are specific to IPv6; rather, the troubleshooting methodology is the same for both IPv4 and IPv6, and the commands and tools often vary by only one keyword.

- Verifying and Troubleshooting Routing, page 55
- Verifying and Troubleshooting Forwarding, page 56
- Debugging Routing and Forwarding, page 60

#### **Verifying and Troubleshooting Routing**

Deploying 6PE and 6VPE involves principally BGP. The same set of commands used for VPNv4 can be used (with different set of arguments) for IPv6, and similar outputs are obtained.

- Example: BGP IPv6 Activity Summary, page 55
- Example: Dumping the BGP IPv6 Tables, page 55
- Example: Dumping the IPv6 Routing Tables, page 56

#### **Example: BGP IPv6 Activity Summary**

```
Device# show bgp ipv6 summary
For address family: IPv6 Unicast
BGP router identifier 192.168.2.126, local AS number 33751
BGP table version is 15, main routing table version 15
12 network entries using 1692 bytes of memory
22 path entries using 1672 bytes of memory
5/4 BGP path/bestpath attribute entries using 580 bytes of memory
14 BGP rrinfo entries using 336 bytes of memory
2 BGP AS-PATH entries using 48 bytes of memory
0 BGP route-map cache entries using 0 bytes of memory
O BGP filter-list cache entries using O bytes of memory
BGP using 4328 total bytes of memory Dampening enabled. O history paths, O dampened paths
BGP activity 13/1 prefixes, 23/1 paths, scan interval 60 secs
Neighbor
                     AS MsgRcvd MsgSent TblVer InQ OutQ Up/Down State/PfxRcd
                  4 33751
192.168.2.146
                              991
                                      983
                                                             0 16:26:21
                  4 33751
                               991
                                       983
                                                  15
                                                             0 16:26:22
                                                                               10
192.168.2.147
FE80::4F6B:44%Serial1/0
                 4 20331
                             982
                                     987
                                                15
                                                      0
                                                           0 14:55:52
```

#### **Example: Dumping the BGP IPv6 Tables**

Each table (for example, BGP IPv6, BGP IPv6 VPN) can be reviewed individually, as shown in the following example:

```
Device# show bgp ipv6 unicast
BGP table version is 15, local router ID is 192.168.2.126
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,
             r RIB-failure, S Stale
Origin codes: i - IGP, e - EGP, ? - incomplete
                                                 LocPrf Weight Path
  Network
                   Next Hop
                                       Metric
* i2001:DB8:100::/48 ::FFFF:192.168.2.101
                                             0
                                                           0 10000 ?
                                                100
                    ::FFFF:192.168.2.101
                                             Ω
                                                  100
                                                           0 10000 ?
* i2001:DB8::1/128
                   ::FFFF:192.168.2.101
                                             0
                                                  100
                                                          0 i
                    ::FFFF:192.168.2.101
                                                  100
                                                           0 i
```

#### **Example: Dumping the IPv6 Routing Tables**

IPv6 routing tables identify each routing protocol contributor to routable entries, as shown in the following example:

```
Device# show ipv6 route

IPv6 Routing Table - default - 13 entries

Codes: C - Connected, L - Local, S - Static, U - Per-user Static route

B - BGP, R - RIP, I1 - ISIS L1, I2 - ISIS L2

IA - ISIS interarea, IS - ISIS summary

O - OSPF Intra, OI - OSPF Inter, OE1 - OSPF ext 1, OE2 - OSPF ext 2

ON1 - OSPF NSSA ext 1, ON2 - OSPF NSSA ext 2

B 2001:DB8:100::/48 [200/0]

via 192.168.2.101 Default-IP-Routing-Table, indirectly connected

B 2001:DB8::1/128 [200/0]

via 192.168.2.101 Default-IP-Routing-Table, c

LC 2001:DB8::26/128 [0/0]

via Loopback0, receive
```

From an IPv6 routing perspective, entries reachable over the MPLS backbone are listed as being indirectly connected, because MPLS is providing a Layer 2 tunnel mechanism.

## **Verifying and Troubleshooting Forwarding**

Forwarding anomalies should be detected and understood so that users can perform troubleshooting. Commands such as **ping ipv6** and **traceroute ipv6** are used to validate data-plane connectivity and detect traffic black-holing. Commands such as **traceroute mpls**and **show mpls forwarding** can pinpoint a damaged node, interface, and forwarding error correction (FEC). At the edge, troubleshooting forwarding failures for a particular IPv6 destination commonly leads to breaking down the recursive resolution into elementary pieces. This task requires combining analysis of IPv6 routing (iBGP or eBGP), IP routing (IS-IS or OSPF), label distribution (BGP, LDP, or RSVP), and adjacency resolution to find a resolution breakage.

The following examples describe how to verify IPv6 VPN and troubleshoot various IPv6 VPN forwarding situations:

- Example: PE-CE Connectivity, page 56
- Example: PE Imposition Path, page 57
- Example: PE Disposition Path, page 59
- Example: Label Switch Path, page 59
- Example: VRF Information, page 60

#### **Example: PE-CE Connectivity**

The **ipv6 ping** and **traceroute** commands are useful to check connectivity from a PE to a CE, whether locally attached or remote over the MPLS backbone.

When a device is locally attached, one can use the **ipv6 ping** command with the CE link-local address (used for eBGP peering), as shown in the following example:

```
Device# ping FE80::4F6B:44%Serial1/0

Type escape sequence to abort.

Sending 5, 100-byte ICMP Echos to FE80::4F6B:44, timeout is 2 seconds: |!!!!

Success rate is 100 percent (5/5), round-trip min/avg/max = 28/33/48 ms
```

The **ipv6 ping** command also can be used to test remote PE or CE reachability, but only IPv6 global addresses can be used (link-local addresses are not advertised beyond the link):

```
Device# ping 2001:DB8:1120:1::44
Type escape sequence to abort.
Sending 5, 100-byte ICMP Echos to 2001:DB8:1120:1:44::1, timeout is 2 seconds:
!!!!!
Success rate is 100 percent (5/5), round-trip min/avg/max = 28/33/48 ms
```

The **ping ipv6** and **traceroute** command functions over MPLS require PEs and CEs to announce one IPv6 global prefix. Each 6PE device announces 2001:DB8::PE#/128, filtered at the autonomous system edge. Each IPv6 CE configures 2001:DB8:*prefix*:CE#/128 and announces it as part as its less-specific prefix (2001:DB8:*prefix*::/n).

Reachability of remote PEs and CEs can be tested by using the **traceroute** command. If you have configured all PEs with the **no mpls ip propagate-ttl forwarded** command, when the **traceroute** command is executed from a CE, its output will show only the IPv6 nodes:

```
Device# traceroute 2001:DB8::1
Type escape sequence to abort.
Tracing the route to 2001:DB8::1
1 2001:DB8::26 [AS 33751] 32 msec 32 msec 20 msec
2 2001:DB8::1 [AS 33751] [MPLS: Label 73 Exp 0] 20 msec 20 msec
3 2001:DB8::1 [AS 33751] 28 msec 20 msec 20 msec
```

After the P devices have been upgraded with images that support ICMPv6, the **traceroute** command executed on the PE device (Time to Live [TTL] is then propagated) will also show P devices' responses, as shown in the following example:

```
Device# traceroute 2001:DB8::1

Type escape sequence to abort.

Tracing the route to 2001:DB8::1

1 ::FFFF:172.20.25.1 [MPLS: Labels 38/73 Exp 0] 40 msec 32 msec 32 msec 2 ::FFFF:172.20.10.1 [MPLS: Labels 30/73 Exp 0] 60 msec 32 msec 32 msec 3 2001:DB8::1 [MPLS: Label 73 Exp 0] 32 msec 32 msec 16 msec
```

When run from a 6VPE device, both the **ping ipv6** and **traceroute** commands accept a *vrf* argument, exactly as in the case of VPNv4.

The **traceroute** command is useful for evaluating the path across the MPLS backbone, but not for troubleshooting data-plane failures. The P devices are IPv6 unaware (and are also VPNv4 unaware), so the ICMPv6 messages that they generate in response to the **traceroute** command are forwarded to the egress PE using the received label stack. The egress PE can route the ICMPv6 message to the source of the traceroute. When the MPLS path is broken, it is also broken from the ICMP message, which cannot reach the egress PE.

#### **Example: PE Imposition Path**

On Cisco devices, the most useful tool for troubleshooting the imposition path for IPv6 is the **show ipv6 cef** command.

#### **Dumping IPv6 Forwarding Table**

You can use the **show ipv6 cef** command to display the forwarding table with label stacks used for each destination prefix, as shown in the following example:

```
Device# show ipv6 cef

2001:DB8:100::/48
  nexthop 172.20.25.1 Serial0/0 label 38 72
2001:DB8::1/128
  nexthop 172.20.25.1 Serial0/0 label 38 73
2001:DB8::26/128
  attached to Loopback0, receive
```

#### **Details of an IPv6 Entry in the Forwarding Table**

You can use the **show ipv6 cef** command to display details for a specific entry and to analyze how the destination was resolved and the label stack computed, as shown in the following example:

```
Device# show ipv6 cef 2001:DB8:100::/48 internal
2001:DB8:100::/48, epoch 0, RIB[B], refcount 4
   sources: RIB
...
  recursive via 192.168.2.101[IPv4:Default] label 72, fib 0252B1F8, 1 terminal fib
    path 024F56A8, path list 024F0BA8, share 0/1, type attached nexthop
   ifnums: (none)
    path_list contains at least one resolved destination(s). HW IPv4 notified.
   nexthop 172.20.25.1 Serial0/0 label 38, adjacency IP adj out of Serial0/0 0289BEF0
  output chain: label 72 label 38 TAG adj out of Serial0/0 0289BD80
```

#### **Details of a BGP Entry in the BGP Table**

The detailed output in the previous example shows that each label composing the label stack has a different origin that can be tracked down individually. The BGP table has the bottom label, as shown in the following example:

```
Device# show bgp ipv6 unicast 2001:DB8:100::/48
BGP routing table entry for 2001:DB8:100::/48, version 2
Paths: (2 available, best #2, table default)
  Advertised to update-groups:
  10000
    ::FFFF:192.168.2.101 (metric 30) from 192.168.2.147 (192.168.2.147)
      Origin incomplete, metric 0, localpref 100, valid, internal
      Originator: 192.168.2.101, Cluster list: 192.168.2.147,
      mpls labels in/out nolabel/72
  10000
    ::FFFF:192.168.2.101 (metric 30) from 192.168.2.146 (192.168.2.146)
      Origin incomplete, metric 0, localpref 100, valid, internal, best
      Originator: 192.168.2.101, Cluster list: 192.168.2.146,
      mpls labels in/out nolabel/72
LDP displays the other labels:
Device# show mpls ldp bindings 192.168.2.101 32
  lib entry: 192.168.2.101/32, rev 56
        local binding: label: 40
        remote binding: lsr: 192.168.2.119:0, label: 38
Device# show mpls ldp bindings 172.20.25.0 24
  lib entry: 172.20.25.0/24, rev 2
        local binding: label: imp-null
```

remote binding: lsr: 192.168.2.119:0, label: imp-null

#### **Example: PE Disposition Path**

Use the following examples to troubleshoot the disposition path.

#### **Dumping the MPLS Forwarding Table**

The following example illustrates MPLS forwarding table information for troubleshooting the disposition path.

Device# show mpls forwarding-table					
Local	Outgoing	Prefix	Bytes Label	Outgoing	Next Hop
Label	Label or VC	or Tunnel Id	Switched	interface	
16	Pop Label	192.168.2.114/32	0	Se0/0	point2point
17	26	192.168.2.146/32	0	Se0/0	point2point
72	No Label	2001:DB8:100::/48	63121	Se1/0	point2point
73	Aggregate	2001:DB8::1/128	24123		

#### **BGP Label Analysis**

The following example illustrates the label used for switching, which has been announced by iBGP (6PE in this example) and can be checked:

#### **Example: Label Switch Path**

Because the 6PE and 6VPE LSP endpoints are IPv4 addresses, the IPv4 tools for troubleshooting LSPs are useful for detecting data-plane failures that would lead to IPv6 traffic black-holing.

#### **Analyzing the Label Switch Path**

The following example displays the LSP IPv4 end:

```
Device# show ipv6 route 2001:DB8::1/128
Routing entry for 2001:DB8::1/128
Known via "bgp 33751", distance 200, metric 0, type internal
Route count is 1/1, share count 0
Routing paths:

192.168.2.101%Default-IP-Routing-Table indirectly connected
MPLS Required
Last updated 02:42:12 ago
```

#### **Traceroute LSP Example**

The following example shows the traceroute LSP:

```
Type escape sequence to abort.

0 172.20.25.2 0.0.0.0 MRU 1500 [Labels: 38 Exp: 0]
R 1 172.20.25.1 0.0.0.0 MRU 1500 [Labels: 30 Exp: 0] 40 ms, ret code 6
R 2 172.20.10.1 0.0.0.0 MRU 1504 [Labels: implicit-null Exp: 0] 60 ms, ret code 6
! 3 172.20.40.1 48 ms
```

#### **Example: VRF Information**

The following entries show VRF information for 6VPE.

#### show ipv6 cef vrf

The following is sample output from a Cisco Express Forwarding FIB associated with a VRF named ciscol:

```
Device# show ipv6 cef vrf ciscol
2001:8::/64
  attached to FastEthernet0/0
2001:8::3/128
  receive
2002:8::/64
  nexthop 10.1.1.2 POS4/0 label 22 19
2010::/64
  nexthop 2001:8::1 FastEthernet0/0
2012::/64
  attached to Loopback1
2012::1/128
  receive
```

#### show ipv6 route vrf

The following is sample output regarding an IPv6 routing table associated with a VRF named cisco1:

```
Device# show ipv6 route vrf cisco1
IPv6 Routing Table ciscol - 6 entries
Codes: C - Connected, L - Local, S - Static, R - RIP, B - BGP
       U - Per-user Static route
       I1 - ISIS L1, I2 - ISIS L2, IA - ISIS interarea
       O - OSPF intra, OI - OSPF inter, OE1 - OSPF ext 1, OE2 - OSPF ext 2
C
    2001:8::/64 [0/0]
     via ::, FastEthernet0/0
    2001:8::3/128 [0/0]
    via ::, FastEthernet0/0
    2002:8::/64 [200/0]
     via :: FFFF: 192.168.1.4,
    2010::/64 [20/1]
     via 2001:8::1,
    2012::/64 [0/0]
     via ::, Loopback1
    2012::1/128 [0/0]
     via ::, Loopback1
```

## **Debugging Routing and Forwarding**

For troubleshooting of routing and forwarding anomalies, enabling debugging commands can prove useful, although several debug messages can slow the router and harm the usability of such a tool. For this reason, use **debug** commands with caution. The **debug ipv6 cef**, **debug mpls packet**, and **debug ipv6 packet** commands are useful for troubleshooting the forwarding path; the **debug bgp ipv6** and **debug bgp vpnv6** commands are useful for troubleshooting the control plane.

# Configuration Examples for Implementing IPv6 VPN over MPLS

• Example: IPv6 VPN Configuration Using IPv4 Next Hop, page 61

## **Example: IPv6 VPN Configuration Using IPv4 Next Hop**

The following example illustrates a 6VPE next hop:

```
interface Loopback0
  ip address 192.168.2.11 255.255.255.255
!
router bgp 100
  neighbor 192.168.2.10 remote-as 100
  neighbor 192.168.2.10 update-source Loopback0
!
  address-family vpnv6
  neighbor 192.168.2.10 activate
  neighbor 192.168.2.10 send-community extended
  exit-address-family
```

By default, the next hop advertised will be the IPv6 VPN address:

```
[0:0]::FFFF:192.168.2.10
```

Note that it is a 192-bit address in the format of [RD]::FFFF:IPv4-address.

When the BGP IPv6 VPN peers share a common subnet, the MP\_REACH\_NLRI attribute contains a link-local address next hop in addition to the global address next hop. This situation typically occurs in an interautonomous-system topology when ASBRs are facing each other. In that case, the link-local next hop is used locally, and the global next hop is readvertised by BGP.

The BGP next hop is the keystone for building the label stack. The inner label is obtained from the BGP NLRI, and the outer label is the label distribution protocol (LDP) label to reach the IPv4 address embedded into the BGP next hop.

## **Additional References**

#### **Related Documents**

Related Topic	Document Title
IPv6 Multiprotocol BGP	Implementing Multiprotocol BGP for IPv6
IPv6 EIGRP	Implementing EIGRP for IPv6
IPv6 MPLS	Implementing IPv6 over MPLS
IPv6 static routes	Implementing Static Routes for IPv6
IPv6 commands	Cisco IOS IPv6 Command Reference

Related Topic	Document Title
BGP PIC edge for IP and MPLS-VPN	" BGP PIC Edge for IP and MPLS-VPN ," <i>IP</i> Routing: BGP Configuration Guide
Standards	
Standard	Title
draft-bonica-internet-icmp	ICMP Extensions for Multiprotocol Label Switching
draft-ietf-idr-bgp-ext-communities-0x.txt	Cooperative Route Filtering Capability for BGP-4
MIBs	
MIB	MIBs Link
None	To locate and download MIBs for selected platforms, Cisco software releases, and feature sets, use Cisco MIB Locator found at the following URL:
	http://www.cisco.com/go/mibs
RFCs	
RFC	Title
RFC 1267	A Border Gateway Protocol 3 (BGP-3)
RFC 1772	Application of the Border Gateway Protocol in the Internet
RFC 1918	Address Allocation for Private Internets
RFC 2858	Multiprotocol Extensions for BGP-4
RFC 3107	Carrying Label Information in BGP-4
RFC 3392	Capabilities Advertisement with BGP-4
RFC 3513	Internet Protocol Version 6 (IPv6) Addressing Architecture
RFC 4007	IPv6 Scoped Address Architecture
RFC 4193	Unique Local IPv6 Unicast Addresses
RFC 4364	BGP MPLS/IP Virtual Private Networks (VPNs)
RFC 4382	MPLS/BGP Layer 3 Virtual Private Network (VPN) Management Information Base

RFC	Title
RFC 4659	BGP-MPLS IP Virtual Private Network (VPN) Extension for IPv6 VPN

#### **Technical Assistance**

Description	Link
The Cisco Support and Documentation website provides online resources to download documentation, software, and tools. Use these resources to install and configure the software and to troubleshoot and resolve technical issues with Cisco products and technologies. Access to most tools on the Cisco Support and Documentation website requires a Cisco.com user ID and password.	http://www.cisco.com/cisco/web/support/index.html

# Feature Information for Implementing IPv6 VPN over MPLS

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to <a href="https://www.cisco.com/go/cfn">www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.

Table 1 Feature Information for Implementing IPv6 VPN over MPLS

Feature Name	Releases	Feature Information
BGP IPv6 PIC Edge and Core for IP/MPLS	15.1(2)S	The BGP IPv6 PIC Edge for IP/MPLS feature improves convergence after a network failure.
		The following commands were modified in this feature: bgp additional-paths install, bgp advertise-best-external, bgp recursion host.
IPv6 VPN over MPLS (6VPE)	12.2(28)SB 12.2(33)SRB 12.2(33)SXI 12.4(20)T 15.0(1)S	The IPv6 VPN (6VPE) over a MPLS IPv4 core infrastructure feature allows ISPs to offer IPv6 VPN services to their customers.

Feature Name	Releases	Feature Information
MPLS VPN 6VPE Support over IP Tunnels	12.2(33)SRB1 12.2(33)SXI	This feature allows the use of IPv4 GRE tunnels to provide IPv6 VPN over MPLS functionality to reach the BGP next hop.

# **Glossary**

- 6VPE device —Provider edge device providing BGP-MPLS IPv6 VPN service over an IPv4-based MPLS core. It is a IPv6 VPN PE, dual-stack device that implements 6PE concepts on the core-facing interfaces.
- **customer edge (CE) device**—A service provider device that connects to VPN customer sites.
- Forwarding Information Base (FIB) Table containing the information necessary to forward IP datagrams. At a minimum, the FIB contains the interface identifier and next-hop information for each reachable destination network prefix.
- **inbound route filtering (IRF)** —A BGP capability used for filtering incoming BGP updates that are not to be imported by the receiving PE device.
- **IPv6 provider edge device** (**6PE device**) —Device running a BGP-based mechanism to interconnect IPv6 islands over an MPLS-enabled IPv4 cloud.
- IPv6 VPN address —A IPv6 VPN address is a 24-byte identifier, beginning with an 8-byte route distinguisher (RD) and ending with a 16-byte IPv6 address. Sometimes it is called an IPv6 VPN address.
- IPv6 VPN address family —The address-family identifier (AFI) identifies a particular network-layer protocol and the subsequent AFI (SAFI) provides additional information. The AFI IPv6 SAFI VPN (AFI=2, SAFI=128) is called the IPv6 VPN address family. Sometimes it is called the IPv6 VPN address family. Similarly AFI IPv4 SAFI VPN is the VPNv4 address family.
- network layer reachability information (NLRI) —BGP sends routing update messages containing
  NLRI to describe a route and how to get there. In this context, an NLRI is a prefix. A BGP update
  message carries one or more NLRI prefixes and the attributes of a route for the NLRI prefixes; the
  route attributes include a BGP next hop gateway address and community values.
- **outbound route filtering (ORF)**—A BGP capability used to filtering outgoing BGP routing updates.
- **point of presence (POP)**—Physical location where an interexchange carrier installed equipment to interconnect with a local exchange carrier.
- **provider edge (PE) device** —A service provider device connected to VPN customer sites.
- route distinguisher (RD) —A 64-bit value prepended to an IPv6 prefix to create a globally unique IPv6 VPN address.
- **Routing Information Base (RIB)** —Also called the routing table.
- Virtual routing and forwarding (VRF) —A VPN routing and forwarding instance in a PE.
- **VRF table** —A routing and a forwarding table associated to a VRF. This is a customer-specific table that enables the PE device to maintain independent routing states for each customer.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: www.cisco.com/go/trademarks.

Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2012 Cisco Systems, Inc. All rights reserved.