Exemple de configuration de l'installation d'une clé de version de la gamme Expressway via l'interface Web et l'interface de ligne de commande

Contenu

Introduction Conditions préalables Conditions requises Components Used Configuration Exemple d'installation de la clé de libération de l'interface Web Exemple d'installation de la clé de version CLI Vérification Vérification de l'interface Web de l'installation de la clé de libération Vérification de l'interface CLI de l'installation de la clé de libération Dépannage

Introduction

Ce document décrit l'installation d'une clé de version sur un périphérique de la gamme Cisco Expressway via l'interface Web et l'interface de ligne de commande (CLI).

Contribué par Michael Wall, ingénieur TAC Cisco.

Conditions préalables

Conditions requises

Cisco vous recommande de prendre connaissance des rubriques suivantes :

Installation d'Expressway

L'Expressway a été correctement installé et une adresse IP valide accessible via l'interface Web et/ou l'interface de ligne de commande a été appliquée.

Demandez et recevez une clé de version valide pour le numéro de série de l'Expressway.

Accédez à l'Expressway à la fois avec root (par CLI) et un compte admin par interface Web ou CLI.

Vous avez téléchargé une image de mise à niveau du logiciel Expressway depuis Cisco.com.

Note: Les guides d'installation sont disponibles ici : Guides d'installation et de mise à niveau

Components Used

Les informations contenues dans ce document sont basées sur les versions de logiciel suivantes :

Expressway version x8.7.3 et x8.8.3

Versions C x7.X et x8.X d'Expressway

Versions d'Expressway E x7.X et x8.X

PuTTY (logiciel d'émulation de terminal)

: vous pouvez également utiliser n'importe quel logiciel d'émulation de terminal prenant en charge SSH, tel que Secure CRT, TeraTerm, etc.

PSCP (client PuTTY Secure Copy Protocol)

: vous pouvez utiliser n'importe quel client prenant en charge SCP.

E-mail de licence avec une clé de version ou une clé de mise à niveau.

Un navigateur Web. Dans cet exemple, Firefox est utilisé, Internet Explorer et Chrome fonctionnent également.

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. Si votre réseau est en ligne, assurez-vous de bien comprendre l'incidence possible des commandes.

Configuration

Exemple d'installation de la clé de libération de l'interface Web

Deux options s'offrent à vous :

Option 1 : vous pouvez définir la clé de libération.

Option 2 : vous pouvez ajouter la clé de version dans le cadre du processus de mise à niveau.

L'une ou l'autre de ces options fonctionne et nous affichons d'abord l'option set suivie de l'option de mise à niveau suivante.

Note: Les deux options nécessitent un redémarrage d'Expressway.

L'option 1 affiche l'option set.

Étape 1 : Une fois que vous avez installé votre Expressway, que votre numéro de série et que vous avez demandé votre clé de version utilisez votre PAK et votre numéro de série, vous recevez

un e-mail de licence de la part de l'équipe de licences Cisco qui peut ou ne peut pas contenir une clé de version et des clés d'option.

Note: L'exemple d'e-mail concerne un VCS, c'est correct, l'e-mail d'une série Expressway est identique.

Note: Des exemples de PAK ne sont pas abordés dans ce document.

EXEMPLE DE COURRIER ÉLECTRONIQUE

You have received this email because your email address was provided to Cisco Systems during the Serial Number Lookup process for software license activation key/file. Please read this email carefully and forward it with any attachments to the proper system administrator if you are not the correct person.

System Serial Number Hardware Serial Number MAC Address Service Contract : SC End Date	: 0B616767 : 0B616767 : 00000000000 : - : -
Software Part Name Tandberg Item No Shipped Version Shipped Version Key Shipped Image URL Upgrade To Upgrade To Key Upgrade To Image URL	: L-VCS-FINDME: : L-VCS-FINDME:VCS - Enable User Policy feature : - : 116341U00-1-1C328745 : - : 7513492028475672 : -
Options Cisco Option Name Tandberg Option Name Option Key	:LIC-VCS-300: :116341X300:VCS - add 300 non-traversal calls :116341X300-1-7D03B558
Options Cisco Option Name Tandberg Option Name Option Key	:LIC-VCS-DEVPROV: :116341P00:VCS - Enable Device Provisioning :116341P00-1-1FEB68A1
Options Cisco Option Name Tandberg Option Name Option Key	:LIC-VCS-GW: :116341G00:VCS - Enable GW feature :116341G00-1-96554215

Étape 2 : Accédez à l'interface Web de l'Expressway à l'aide d'un navigateur Web. Connectezvous à l'aide d'un compte d'administrateur et vous accédez à l'écran Expressway Status.

Note: Certains chiffres sont volontairement flous tout au long de ce document.

cisco Cisco E	xpresswe	Note: Login brin	gs us to the status screen	This system has 6 alarms
Status System C	Configuration Applications	Users Maintenance		🔏 🥑 Help. 🥶 Logout
Overview				You are here: Status + Overview
🕕 Invalid release key: I	Release key is missing: the system is	s in demonstration mode and has limit	ted functionality; contact your Cisco support representative to	buy your release key.
System information				
System name	EXP-Core		Note also, our release key is invalid	
Up time	6 days 15 hours 7 n	ninutes 51 seconds	note also, our release key is invalid.	
Software version	×8.7.3			
IPv4 address	.117			
Options	1 Rich Media Sessio	ons, Encryption, Interworking, Expres	sway Series.	
Resource usage (last upd	ated: 12:53:04 UTC)			
Rich media session calls	Current video	0		
	Current audio (SIP)	0		
	Peak video	0		
	Peak audio (SIP)	0		
	Since last restart video	0		
	Since last restart audio (SIP)	0		
Rich media sessions	License usage current	0%		
	License usage peak	0%		
User: admin Access: Read-w	rite System host name: VCS-C Syst	em time: 12:56 UTC		Language: en US S/N: DE16E47 Version: X8.7.3

Étape 3 : Accédez à l'écran approprié afin d'installer votre clé de version. Placez le pointeur de la souris sur l'onglet Maintenance.

Overview				You are here: <u>Status</u> > Overview
👥 Invalid release key: Re	lease key is missing: the system is	s in demonstration mode and has limi	ted functionality; contact your Cisco support representative	e to buy your release key.
System information				
System name	EXP-Core			
Up time	6 days 15 hours 7 m	ninutes 51 seconds		
Software version	X8.7.3			
IPv4 address	117			
Options	1 Rich Media Sessio	ons, Encryption, Interworking, Expres	ssway Series.	
Resource usage (last updat	ed: 12:53:04 UTC)			
Rich media session calls	Current video	0		
	Current audio (SIP)	0		
	Peak video	0		
	Peak audio (SIP)	0		
	Since last restart video	0		
	Since last restart audio (SIP)	0		
Disharada analara		001		
Rich media sessions	License usage current	0%		
	License usage peak	0%		

Étape 4 : Lorsque le menu s'affiche, cliquez sur **Touches d'option**.

Status System C	onfiguration Applications	Users	Maintenance		🛓 3 Help. 🞯 Logout
Overview			Upgrade		You are here: Status > Overview
🕕 Invalid release key: F	Release key is missing: the system i	s in demonstr	Logging		tionality; contact your Cisco support representative to buy your release key.
System information		_	Option keys		Of the Orling Kern
System name	EXP-Core		Tools	۲	Click on Option Keys
Up time	6 days 15 hours 7 r	ninutes 51 se	Security certificates	۲	
Software version	×8.7.3		Backup and restore		
IPv4 address	.117		Diagnostics		
Options	1 Rich Media Sessi	ons, Encrypti	Maintenance mode		eries.
Resource usage (last upda	ated: 12:53:04 UTC)		Language		
Distance	0		Language		
Rich media session calls	Current video	0	Restart options		
	Current audio (SIP)	0			
	Peak audio (SIP)	0			
	Since last restart video	0			
	Since last restart audio (SIP)	0			
Rich media sessions	License usage current	0%			
	License usage peak	0%			

```
User: admin Access: Read-write System host name: VCS-C System time: 13:12 UTC
```

anguage: en_US S/N: 0DE16F47 Version: X8.7.3

Étape 5 : Observez la section **Clé de libération** et s'il s'agit d'une nouvelle installation, un champ de clé de libération vide s'affiche. Le champ de **clé de libération** d'une autre installation d'Expressway est prérempli avec la valeur de clé de libération actuelle. Vous utilisez l'option **Mise à niveau** pour définir la clé de libération dans ce cas.

Note: La clé de version ne change pas entre les mises à niveau de version mineures. La clé de version ne change qu'entre les mises à niveau de version majeures telles que x7.X et x8.X.

Copiez et collez votre clé de libération dans le champ Clé de libération :

սիսիս	
cisco	Cisco Expressway-C

							This system has 6 alarms	
atus Syste	em Configuration	Applications	Users	Maintenance			Ž 🤊 🗄	elp. 😁 Log
otion keys							You are here: Maintenar	nce • Option
📃 Invalid rele	ase key: Release key is	missing: the system	is in demonst	ration mode and has limit	ed functionality; contact yo	ur Cisco support representative to	o buy your release key.	
Key 🔻				Description	Status			×
] 116341E	00-1-2B872ED6		Expressway Series Active				The 16-character release key this software. Warning: if this	is
lete	all Unselect all						invalid the system will run wit restricted functionality.	h
ystem inform	ation						Range: must be exactly 16 characters	_
erial number			0DE1	6F47			L	
ctive options			1 Rich	n Media Sessions, Encryp	otion, Interworking, Express	way Series.		
oftware optio	n							
dd option key					١			
1d option						Note the Release Key fie Series Device. This field n key is already installed or Copy your new re	eld is blank if a new Expressway nay be pre-populated if a release upgrading from a prior version. elease key into this field.	
elease key								,
elease key								
t release key								
rent licenses								
versal calls			1					
admin Acce	s: Read-write System ho	st name: VCS-C Sv	stern time: 13:	16 LITC			Language: en LIS S/N: 0DE16E47	Version: X

Étape 6 : Vous pouvez voir la clé de libération collée dans le champ Clé de libération.

ababa	
CISCO	Cisco Expressway

CIS	CO Cisc	o Expressway	/-C						This system has 6 ala	rms
Status	System	Configuration	Applications	s Users	Maintenance				-	🔺 🕐 Help. 😔 Logout
Optic	on keys								You are here:	Maintenance > Option keys
	nvalid release I	ey: Release key is	missing: the sys	tem is in demo	nstration mode and has limited	d functionality;	ontact your Cisco supp	port representative to buy	your release key.	
	Key ▼				Description			Status	Validity period	
	116341E00-1-2	2B872ED6			Expressway Series	S		Active	Unlimited	
Delete	Select all	Unselect all								
Syste	em information									
Seria	l number			0D	E16F47					
Activ	e options			1 F	tich Media Sessions, Encrypti	on, Interworkinį	, Expressway Series.			
Softv	vare option									
Add o	option key					(j)				
Add op	ption						Here I've pasted ir received for th	n the Release Key I iis Expressway]	
Relea	ase key			_		-				
Relea	ise key			78	00812430795357					
Set re	lease key									
Currer	nt licenses	_	_	_		_				
Travers	al calls			1						
User: ac	imin Access: Re	ad-write System hos	st name: VCS-C	System time:	13:28 UTC				Language: en_US S/N:	DE16F47 Version: X8.7.3

Étape 7 : Cliquez sur Définir la clé de libération.

CIS	CO Cis	co Expressway	y-C					This system has 6 a	llarms
Status	System	Configuration	Applications	Users	Maintenance				🔺 🧿 Help. 😔 Logout
Optior	n keys							You are her	e: Maintenance • Option key
e In	valid release	key: Release key is	missing: the system	is in demon	stration mode and has limited	d functionality; contact your Cisco sup	port representative to	o buy your release key.	
_	Key 🔻				Description		Status	Validity period	
	116341E00-1-	-2B872ED6			Expressway Serie	S	Active	Unlimited	
Delete	Select all	Unselect all							
Syster	n information	1							
Serial r	number			0DE	16F47				
Active	options			1 Ric	h Media Sessions, Encrypti	on, Interworking, Expressway Series.			
Softwa	are option								
Add op	tion key					٢			
Add opt	ion								
Releas	e key								
Releas	e key			7800	812430795357				
Set rele	ase key			Click Set	release key				
Current	licenses	_		-			_		
Traversa	l calls			1					
User: adn	nin Access: R	ead-write System ho:	st name: VCS-C Sy	stem time: 13	:32 UTC			Language: en_US S/N	I: 0DE16F47 Version: X8.7

Étape 8 : Cliquez sur le lien hypertexte **redémarrer** dans l'invite qui apparaît en haut de la page pour redémarrer l'Expressway.

սիսիս	
CISCO	Cisco Expressway-C

,,,,,,,,,,,,			This system has 6 alarms
atus System Configuration Applicati	ions Users Maintenance		👗 🕐 Help. 😔 Logo
Difion keys Saved: The release key has been updated, howe Number of the release key. Release key is missing, the	ever a restart is required for it to take effect.	Notice how a message comes u need to restart. Click on the F hyperlink and follow the steps fr Once rebooted, the key will be ality, contact your cisco support representative to	p saying I Restart om there. installed.
Key 👻	Description	Status	Validity period
116341E00-1-2B872ED6	Expressway Series	Active	Unlimited
alete Select all Unselect all			
system information			
Serial number	0DE16F47		
vctive options	1 Rich Media Sessions, Encryption, Interwo	rking, Expressway Series.	
oftware option			
dd option key			
dd option			
Release key			
Release key	7800812430795357		
et release key			
rrent licenses			
ar admin Access Read-write System host name VC	S-C System time: 13:36 UTC		Language: en US S/N: 0DE16F47 Version: X8.

Option 2 : Option de mise à niveau pour installer votre clé de version

Étape 1 : À partir de l'interface Web, cliquez sur **Maintenance** comme auparavant, puis sur **Mettre à niveau** dans la fenêtre contextuelle du menu.

Status System Configuration Applications Use	rs Maintenance	👗 🕐 🖽	lp 🥶 Logout
Upgrade	Upgrade	You are here: Mainter	ance • Upgrad
Component 💌	Logging	Release key	-
B2BUA Presence Relay	Option keys		^
B2BUA Service	Tools ►		
c_mgmt	Security certificates ▹	Click on Maintenance Tab>Upgrade	
collectdsupport	Backup and restore		
oaksupport	Dackup and restore		
stringencoderssupport	Diagnostics >	700000070777	
System platform	Maintenance mode	7800812430795357	
tranc_server	Language		
xcp-vcs	Restart options		
Select hie	Browse No file selected.		
opgrade			
	44.444.770		

Étape 2 : Dans l'écran Mise à niveau, vous voyez une section Composant de mise à niveau.

Note: Ce document suppose que vous avez téléchargé une image de mise à niveau logicielle d'Expressway sur votre ordinateur local.

Cliquez sur Parcourir pour localiser votre image de mise à niveau Expressway téléchargée :

pgrade before upgrading before upgrading. System backarp the system backarp the system before upgrading. System backarp the system	status System Configuration Applica	tions Users Maintenance	👗 🕜 Help. 😔 Logi
component Version Release key 22BUA Presence Relay 1.0-oak-v8.7.3-rc-2	Ipgrade		You are here: Maintenance + Upg
2BUA Presence Relay 1.0-oak-v8.7.3-rc-2 2BUA Service 1.0-oak-v8.7.3-rc-2 mgmt 8.61.0.321052 olectdsupport 5368 aksupport 5368 atingencoderssupport 5368 ystem platform X8.7.3 Tingencoderssupport 5368 ystem platform X8.7.3 Tingencoderssupport 5368 ystem platform X8.7.3 Tingencoderssupport 5368 ypros 1.0-oak-v8.7.3-rc-2 ypport 5368 ypros 1.0-oak-v8.7.3-rc-2 ypport 5368 ypport 5368 Upgrade component V WARNING: You should backup the system before upgrading. System backup Belect file Erowse No file selected Improved. Improved. Improved. Improved. Improved. <td>Component 💌</td> <td>Version</td> <td>Release key</td>	Component 💌	Version	Release key
2BUA Service 1.0-oak-v8.7.3-rc-2 _mgmt 8.6-1.0.321052 ollectdsupport 5388 aksupport 5388 aksupport 5388 ystem platform 28.7.3 7800812430795357 368 spevos 1.0-oak-v8.7.3-rc-2 spupport 5368 spupport 5368 ypvos 1.0-oak-v8.7.3-rc-2 spupport 5368 ypvos 1.0-oak-v8.7.3-rc-2 spupport 5368 VPgrade component Svstem backup WARNING: You should backup the system before upgrading. Svstem backup Select file Browse No file selected ig ig ig igrade No file selected ig	32BUA Presence Relay	1.0-oak-v8.7.3-rc-2	
ingent 8 6-1 0.321052 blectdsupport 5368 aksupport 5368 ystem platform 568 ystem platform 5368 infige.server 5368 ypos 1.0-oak-v8.7.3-rc-2 psystem 5368 Upgrade component 5368 WARNING: You should backup the system before upgrading. System backup Browse No file selected iggrade Imachine and then upload.	2BUA Service	1.0-oak-v8.7.3-rc-2	
Metddsupport sleddsupport 5368 kisupport 5368 inigencoderssupport 5368 ystem platform X8.7.3 7800812430795357 fific_server 5368 p-vcs 1.0-oak-v8.7.3-rc-2 psupport 5368	_mgmt	8.6-1.0.321052	
ingencoderssupport 5368 ingencoderssupport 5368 vetem platform X8.7.3 7800812430795357 fific_server 5368 p-vos 1.0-oak-v8.7.3-rc-2 psupport 5368 Upgrade component WARNING: You should backup the system before upgrading. System backup Browse No file selected. I file machine and then upload.	ollectdsupport	5368	
ringencoderssupport 5368 ystem platform X8.7.3 7800812430795357 affic_server 5368 p-vcs 1.0-oak-v8.7.3-rc-2 psupport 5368 Upgrade component WARNING: You should backup the system before upgrading. Select file Browse No file selected pgrade	aksupport	5368	
ystem platform X8.7.3 7800812430795357 affic_server 5368 p-vcs 1.0-oak-v8.7.3-rc-2 psupport 5368	ringencoderssupport	5368	
affic_server 5368 p-vcs 1.0-oak-v8.7.3-rc-2 psupport 5368 Upgrade component WARNING: You should backup the system before upgrading. Select file Browse No file selected pgrade	vstem platform	×8.7.3	7800812430795357
p-vcs 1.0-oak-v8.7.3-rc-2 psyport 536 Upgrade component VARNING: You should backup the system before upgrading. Select file Browse No file selected I Click Browse to locate your upgrade software on your local machine and then upload.	ffic_server	5368	
psuport 5368			
Upgrade component WARNING: You should backup the system before upgrading. Select file	p-vcs	1.0-oak-v8.7.3-rc-2	
Jograde	op-vos opsupport Upgrade component	1.0-oak-v8.7.3-rc-2 5368	
	cp-vcs cpsupport Upgrade component WARNING: You should backup the system before up Select file	1.0-oak-v8.7.3-rc-2 5368 bgrading. System backup Browse No file selected	Click Browse to locate your upgrade software on your local machine and then upload.
	pp-vcs cpsupport Upgrade component WARNING: You should backup the system before up Select file Ipgrade	1.0-oak-v8.7.3-rc-2 5368 grading. System backup Browse No file selected.	Click Browse to locate your upgrade software on your local machine and then upload.
	p-vcs psupport Upgrade component WARNING: You should backup the system before up Select file pgrade	1.0-oak-v8.7.3-rc-2 5368 grading. System backup Browse No file selected.	Click Browse to locate your upgrade software on your local machine and then upload.
	p-vcs psupport Upgrade component WARNING: You should backup the system before up Select file pgrade	1.0-oak-v8.7.3-rc-2 5388 grading. <u>System backup</u> Browse No file selected.	Click Browse to locate your upgrade software on your local machine and then upload.
	p-vcs psupport Upgrade component WARNING: You should backup the system before up Select file pgrade	1.0-oak-v8.7.3-rc-2 5388 grading. <u>System backup</u> Browse No file selected.	Click Browse to locate your upgrade software on your local machine and then upload.
	:p-vcs :psupport Upgrade component WARNING: You should backup the system before up Select file	1.0-oak-v8.7.3-ro-2 5368 grading. System backup Browse No file selected.	Click Browse to locate your upgrade software on your local machine and then upload.
	ip-vos ipsupport Upgrade component WARNING: You should backup the system before up Select file	1.0-oak-v8.7.3-ro-2 5368 grading. System backup Browse No file selected.	Click Browse to locate your upgrade software on your local machine and then upload.

User: admin Access: Read-write System host name: VCS-C System time: 13:53 UTC

Language: en_US S/N: 0DE16F47 Version: X8.7.3

Étape 3 : Entrez la valeur de la clé de libération dans le champ **Clé de libération** lorsque vous y êtes invité. Copiez-collez à partir de l'e-mail ou s'il s'agit d'une mise à niveau mineure, comme dans ce cas, x8.7.3 à x8.8.3, copiez-collez-le à partir du même écran.

s System Configuration Application	ons Users Maintenance	A CONTRACTOR AND A CONTRA
rade		You are here: Maintenance > Upgr
ponent 💌	Version	Release key
JA Presence Relay	1.0-oak-v8.7.3-rc-2	
JA Service	1.0-oak-v8.7.3-rc-2	
imt	8.6-1.0.321052	
stdsupport	5368	
apport	5368	
encoderssupport	5368	
em platform	X8.7.3	7800812430795357
_server	5368	
cs	1.0-oak-v8.7.3-rc-2	•
apport	5368	
ect file ease key	Browse s42700x8_8_3.tar.gz ()	release key from your licensing email. Or, if you are just doing a minor upgrade like in this example from 8.7.3 to 8.8.3, you can copy and paste the release key already installed which is circled above in this example.
ade		

Étape 4 : Cliquez sur le bouton Mettre à niveau. Regardez le processus qui suit et ne vous éloignez pas du processus, ou vous devez recommencer. L'image est téléchargée, puis installée. Cliquez sur Redémarrer lorsque vous y êtes invité.

us System Configuration Applications	Users Maintenance		Elogo
grade		You are here: Maintenance	• Upgr
nponent 👻	Version	Release key	
UA Presence Relay	1.0-oak-v8.7.3-rc-2	Information	×
UA Service	1.0-oak-v8.7.3-rc-2	The 16-character release key for	
igmt	8.6-1.0.321052	the new software version. This is	
ectdsupport	5368	not required if you are upgrading t	P
support	5368	to 1.1.	'
gencoderssupport	5368		
tem platform	X8.7.3	7800812430795357	
ic_server	5368		
VCS	1.0-oak-v8.7.3-rc-2		
support	5368		
lect file	Browse \$42700x8_8_3.tar.gz	Once the release key is pasted, you can click upgrade then follow the steps from there. Do not leave the screen	and s that
grade		then it gets installed and finally you restart the Expressy Once it is restarted and comes back up, it should be on new release and the release key can be verified exactly same as with a fresh install.	ay. the the

Vérifiez que la version a été correctement installée, une fois que l'Expressway a redémarré. Utilisez les deux méthodes indiquées dans la section **Vérifier** de ce document.

Exemple d'installation de la clé de version CLI

Installez une clé de version via l'interface de ligne de commande. Il s'agit d'un processus en deux parties qui implique l'utilisation d'un client SCP (PSCP dans cet exemple à partir d'une invite de commande (CMD) dans Windows et d'une application logicielle d'émulation de terminal telle que PuTTY.

Étape 1 : Copiez votre clé de version dans un fichier texte ASCII simple. Assurez-vous qu'il n'y a aucun espace avant ou après la valeur de la clé de libération. Copiez la clé de libération dans votre application d'éditeur de texte enregistrez le fichier en tant que **release-key.txt** :



Étape 2 : Placez le fichier **release-key.txt** et PSCP.exe dans le même répertoire sur votre ordinateur. Accédez à ce répertoire à l'aide d'une invite de commande (CMD) sous Windows et copiez la clé de version dans un répertoire temporaire sur l'Expressway. Utilisez le compte racine pour la transaction PSCP. Entrez le mot de passe du compte racine lorsque vous y êtes invité. Vérifiez que le transfert est terminé comme indiqué par 100 %. Voici un exemple :



Étape 3 : Copiez l'image vers laquelle vous souhaitez effectuer la mise à niveau, telle que 8.8.3 utilisée ici. Copiez cette image sur PSCP. Vérifiez que l'état est de 100 %, ce qui signifie que le logiciel de l'image a été transféré sur l'Expressway et que vous êtes prêt à redémarrer l'Expressway.



Étape 4 : Redémarrez l'Expressway via une session SSH sur l'Expressway. Ouvrez PuTTY et saisissez l'adresse IP de l'Expressway. Cliquez sur SSH pour ouvrir.



Étape 5 : Cliquez sur **Ouvrir** et connectez-vous à l'Expressway avec un compte d'administrateur lorsque vous y êtes invité. Entrez le mot de passe du compte admin lorsque vous y êtes invité. Vérifiez que vous disposez de la commande appropriée pour redémarrer l'Expressway. Entrez la commande suivie d'un espace et d'un point d'interrogation pour vous assurer qu'il est correct. L'Expressway confirme que **xCommand Boot** a été redémarré. Entrez la commande **xCommand Boot** pour redémarrer l'Expressway.



L'Expressway clignote qu'il est en cours de redémarrage et que votre session PuTTY se ferme. Ce comportement est normal car la connexion est interrompue lors du redémarrage de l'Expressway. L'Expressway prend environ trois à cinq minutes pour redémarrer. Une fois terminé, vérifiez que la clé de libération est correctement installée via l'interface Web ou l'interface de ligne de commande, comme indiqué dans la section **Vérifier** de ce document.

Vérification

Vérification de l'interface Web de l'installation de la clé de libération

Vous pouvez vérifier la clé de libération installée dans l'interface Web de deux manières :

Option 1 : Examinez la **page Clé des options** comme indiqué précédemment et cochez le champ **Clé de libération**.

CISC	Surtem	Configuration	Applications	Lieore	Maintonanco		This system has 5	alarms
Ortion	System	Configuration	Applications	Osers	Maintenance		Vau ara bu	
Option	keys				Description	Ohahua	tou are ne	ere: <u>Maintenance</u> • Option key
	\ey ▼ 116341E00-1-	-2B872ED6		_	Expressway Series	Active	Unlimited	
Delete	Select all	Unselect all			Expressively corres	10010	Granning	
Sustam	information							
System	information	1						
Serial n	umber			0DE	16F47			
Active o	ptions			0 Ri	ch Media Sessions, Encryption, Interworking, Ex	pressway Series.		
Softwar	re option							
Add opt	ion key				٢			
Add optio	on					After restart, I verify the k checking the Release K populated.	key installed by ey field is now	
Release	e key			_				
Release	e key			780	0812430795357			
Set relea	ase key							
Current I	licenses	_	_	_				
Traversal	calls			0				

Option 2 : Consultez la page Mise à niveau comme indiqué précédemment :

tatus System Configuration Applicat	lions Users Maintenance	(?) Help 💽 Logou
lpgrade		You are here: Maintenance + Upgra
Component 💌	Version	Release key
32BUA Presence Relay	1.0-oak-v8.7.3-rc-2	
32BUA Service	1.0-oak-v8.7.3-rc-2	
c_mgmt	8.6-1.0.321052	
collectdsupport	5368	
paksupport	5368	
stringencoderssupport	5368	
System platform	X8.7.3	7800812430795357
raffic_server	5368	
cp-vcs	1.0-oak-v8.7.3-rc-2	
cepsupport	5368	You can also verify by checking the
Upgrade component WARNING: You should backup the system before up	grading. <u>System backup</u>	key is now visible under the release key column of this page.
Select file	Browse No file selected.	
Upgrade		

User: admin Access: Read-write System host name: VCS-C System time: 13:46 UTC

Language: en_US S/N: 0DE16F47 Version: X8.7.3

Vérification de l'interface CLI de l'installation de la clé de libération

Vérifiez la clé de libération installée via l'interface de ligne de commande par une session SSH vers l'interface de ligne de commande. Connectez-vous avec un compte d'administrateur comme indiqué précédemment dans ce document. Une fois sur place, entrez la commande **xStatus SystemUnit Software**. Vous constatez que la mise à niveau a réussi et que la clé de version est installée :



Dépannage

Vous n'avez aucun problème lorsque vous installez une clé de version sur un Cisco Expressway. Entrez une clé d'option dans le champ **Libérer la clé** de l'Expressway ou entrez une clé d'option lorsque vous mettez à niveau les causes les plus courantes d'échec. L'exemple d'e-mail cité au début de cet article montre des clés d'option en plus de la clé de version. Une erreur se produit lorsqu'une clé d'option est entrée dans le champ **Libérer la clé** :

atus System Configuration Ap	pplications Users Maintenance	🖌 🕐 Нер. 😔 Ца
ption keys		You are here: Maintenance + Option
Saved: The release key has been updated	d, however a restart is required for it to take effect.	
Key 💌	Description	Status Validity period
116341E00-1-2B872ED6	Expressway Series	Active Unlimited
elete Select all Unselect all		
system information		
Serial number	0DE16F47	
Active options	0 Rich Media Sessions, 0 Room Systems, Expressway Series.	0 Det top Systems, Encryption, Interworking, FindMe, Device Provisioning,
Software option		
Add option key		
dd option		Here, I've made a mistake which is one of the most common causes of a release key installation failure. Specifically, I've tried to install an option key as a release key. The Expressway will allow me to make this mistake and will not show the error until I have fully restarted/rebooted
Release key		the Expressway. Just as before, I've pasted in the "bad" key in the
Release key	116341E00-1-2B87	being prompted to restart the Expressway.
et release key		
urrent licenses		
aversal calls	0	
aversal calls esktop System License	0 0	

Un Expressway accepte toute valeur dans le champ de clé de libération. Redémarrez l'Expressway avec une valeur incorrecte entrée et vous recevez une erreur "Clé de libération non valide" :

սիսիս	
CISCO	Cisco Expressway-C

		This system has 6 alarms			
Status System Configuration Applica	itions Users Maintenance	🔺 🕐 Logout			
Option keys You are here: Maintenance > Option keys					
Invalid release key: Release key is missing: the	e system is in demonstration mode and has limited functionality; contai	ct your Cisco support representative to buy your release key.			
Key 🔻	Description	Status Validity period			
116341E00-1-2B872ED6	Expressway Series	Active Unlimited			
Delete Select all Unselect all					
	_				
System information					
Serial number	0DE16F47				
Active options	1 Rich Media Sessions, 0 Room Systems, 0 Desktop Expressway Series.	System Encryption, Interworking, FindMe, Device Provisioning,			
Software option					
Add option key	١				
Add option					
Release key		key as a release key. Note the option key showing as the release key now with the big red warning at the top?			
Release key	116341E00-1-2B87	To fix this error, I simply use the procedure in this document to install a proper RELEASE KEY and not an option key.			
Set release key					
Current licenses					
Traussed colle					
naversar calls Desidon Sustem License	0				
Room System License	0				

User: admin Access: Read-write System host name: VCS-C System time: 17:49 UTC

Language: en_US S/N: 0DE16F47 Version: X8.8.3

Installez une clé de version comme indiqué dans ce document pour corriger cette condition.

Note: Les touches de libération et les touches d'option sont liées au numéro de série affiché dans le coin inférieur droit de l'interface Web, si la série change (ce qui peut se produire avec la modification matérielle de la machine virtuelle), la clé de libération et les options doivent être régénérées et réinstallées.

Demandez l'assistance du TAC Cisco pour tout autre type de défaillance.