サードパーティルータのMACアドレスを RV160またはRV260ルータに複製する

目的

この記事では、RV160またはRV260ルータを使用してMACアドレスクローンを設定する方法について説明します。

概要

各デバイスには、独自のメディアアクセスコントロール(MAC)アドレスがあります。各 MACアドレスは、各デバイスに固有です。ネットワークのセットアップとトラブルシュー ティングを行う際には、MACアドレスを知っておくことをお勧めします。デバイス上に物 理的に配置され、12個の16進数が含まれています。

ネットワークデバイスを設定する場合、ローカルエリアネットワーク(LAN)とワイドエリア ネットワーク(WAN)の両方のIPアドレスにDynamic Host Configuration Protocol(DHCP)を使 用するのが一般的です。DHCPは、使用可能なIPアドレスのプールを管理し、ネットワーク に参加するホストに割り当てます。これは、管理者の介入なしに自動的に行われるため、ネ ットワークを維持する簡単な方法です。DHCPは、デバイスに正しいサブネットマスク、デ フォルトゲートウェイ、およびドメインネームシステム(DNS)情報を設定するためにも使用 されます。

ある時点で、RV160またはRV260ルータのWANインターフェイスがDHCPに設定されてい ることがわかります。ただし、何らかの理由で、WANインターフェイスはインターネット サービスプロバイダー(ISP)からIPを取得できません。 おそらく、ISPは既知のデバイスの 側にMACアドレスバインディングを設定しています。そのため、ISPは不明なデバイスに DHCP IPを割り当てません。

ルータのリブートが機能せず、ネットワークにDリンクなどの設定済みの別のサードパーティルータが含まれている場合は、そのルータをチェックアウトします。そのルータは同じ ISPリンクを使用してWANインターフェイスのDHCP IPを取得できますか。

可能であれば、RV160またはRV260はそのサードパーティルータのMACアドレスを複製で きます。この例では、DリンクのWANインターフェイスのMACアドレスが複製されます。 その後、WANインターフェイス上の複製されたMACアドレスを示すRV160またはRV260は 、DHCP IPアドレスを取得して接続を再開できます。

該当するデバイス

- RV160シリーズルータ
- RV260シリーズルータ

[Software Version]

• 1.0.00.15

基本設定の確認

ステップ1:ルータにログインして、グラフィカルユーザインターフェイス(GUI)にアクセス します。 Cisco VPNルータのGUIにアクセスする方法については、ここをクリックし<u>てくだ</u> <u>さい</u>。

ılıılı cısco

Router



©2018 Cisco Systems, Inc. All Rights Reserved. Cisco, the Cisco Logo, and the Cisco Systems are registered trademarks or trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

注:ルータがデフォルト設定の場合は、ユーザ名とパスワードを*cisco*として入力します。 それ以外の場合は、事前設定されたユーザ名とパスワードを使用してルータにログインしま す。

ステップ2:[WAN] > [**WAN Settings]に移動します**。[IPv4**設定]を選択します**。WANインター フェイス*の接続タイ*プがDHCPとして設定されていることを**確認します**。



ステップ3:動作している既知のサードパーティルータのWANインターフェイスのMACアドレスの詳細をメモします。

注:この例では、D-Linkルータが選択されています。

Product Page: DIR-615	5				H	ardware Version: C1	Firn	nware Version: 3.10NA		
D-Linl	¢							\prec		
DIR-615	SETUP		SUPPORT							
DEVICE INFO	DEVICE INFORMAT	TON						Helpful Hints		
LOGS STATISTICS INTERNET SESSIONS	All of your Internet and version is also displayed	All of your Internet and network connection details are displayed on this page. The firmware version is also displayed here.								
ROUTING	GENERAL							norem		
WIRELESS		Time :	4/17/2000	7-58-05 PM						
IPv6	Firmware	Version :	3.10NA, F	ri, 17, Apr, 2009						
							_			
	WAN									
	Connect	tion Type:	DHCP Client	Connected						
	Cabl	e Status :	Connected							
	Networ	k Status :	Established							
	Connection	Up Time :	0 Day, 0:00	:41						
	MAC	Address :	00:21:91:ee	e:ca:b1						
	IP	Address :	172.16.100.	56						
	Subr	ier Mask : Sateway :	255.255.25	5.0						
	Primary DN	S Server :	4.2.2.2	1						
	Secondary DN	S Server :	4.2.2.3							
	LAN									
	MAC	Address :	00:21:91:ee	e:ca:b0						
	IP	Address :	192.168.0.1							
	Subr	iet Mask :	255.255.255	5.0						
	DHC	P Server :	Enabled							

ステップ4:[Status and **Statistics**] > [**System Summary]に移動します**。おそらく、WANイン ターフェイスのステータスがconnectedと表示されています。また、WANインターフェイス にIP、デフォルトゲートウェイ、またはDNSサーバがリストされていないことがわかります

	ा। टाइटव	RV260W-ro	outerA0CA31							cisco(admin)	English 🔻 💡 🚯	• •
Getting Started Status and Statistics	System S	Summary										
System Summary	Serial Number:	DNI2226A0VE					Firmware Version:	1.0.00.15				
TCP/IP Services	System Up Tim	e: 0 days 2 hours	s 12 minutes 40 sec				Firmware MD5 Checksum:	0b83b796e5300e00)3b6c91f2ff3ab128			
Port Traffic	Current Time:	Current Time: 2019-May-15, 08:20:51 UTC Locale: English										
WAN QoS Statistics	PID VID:	RV260W-E-K	9 V01				Language Version:	1.0.0.0				
Switch QoS Statistics	LAN MAC: WAN MAC:	LAN MAC: 68:9CE2.A0.CA.31 Language MD5 Checksum: d901cc97ae6a606564195bb34/c2d4d2										
Connected Devices												
Routing Table	Port Status											
DHCP Bindings										\frown		
Mobile Network	Port ID	1	2	3	4	5	6	7	8/DMZ	Internet	USB	
												- 1
VPN Status	Interface	LAN	LAN	LAN	LAN	LAN	LAN	LAN	LAN	WAN (Copper)	USB	
VPN Status View Logs	Interface Status	LAN Connected	LAN Not Connected	LAN Not Connected	LAN Not Connected	LAN Not Connected	LAN Not Connected	LAN Not Connected	LAN Not Connected	WAN (Copper) Connected	USB Not Connected	
VPN Status View Logs Captive Portal Status	Interface Status Speed	LAN Connected 1000Mbps	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	WAN (Copper) Connected 1000Mbps	USB Not Connected N/A	_
VPN Status View Logs Captive Portal Status	Interface Status Speed	LAN Connected 1000Mbps	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	WAN (Copper) Connected 1000Mbps	USB Not Connected N/A	_
VPN Status View Logs Captive Portal Status Administration System Configuration	Interface Status Speed	LAN Connected 1000Mbps IPv6	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	WAN (Copper) Connected 1000Mbps	USB Not Connected N/A	_
VPN Status View Logs Captive Portal Status Administration System Configuration	Interface Status Speed	LAN Connected 1000Mbps IPv6 WAN (Const	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	WAN (Copper) Connected 1000Mbps	USB Not Connected N/A	_
VPN Status View Logs Captive Portal Status Administration System Configuration WAN LAN	Interface Status Speed IPv4	LAN Connected 1000Mbps IPv6 WAN (Copp	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	WAN (Copper) Connected 1000Mbps	USB Not Connected N/A	-
VPN Status View Logs Captive Portal Status Administration System Configuration WAN LAN System Status	Interface Status Speed IPv4 IP Address: Default Gate	LAN Connected 1000Mbps IPv6 WAN (Copp 	LAN Not Connected N/A Per) USB 	LAN Not Connected N/A	WAN (Copper) Connected 1000Mbps	US8 Not Connected N/A	-					
VPN Status View Logs Captive Portal Status Administration System Configuration WAN LAN Walk N System Status System Configuration Walk	Interface Status Speed IP-v4 IP Address: Default Gate DNS:	LAN Connected 1000Mbps IPv6 WAN (Copp way: 	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	LAN Not Connected N/A	WAN (Copper) Connected 1000Mbps	US8 Not Connected N/A	
VPN Status View Logs Captive Portal Status Administration System Configuration WAN LAN Waireless Routing Firewall	Interface Status Speed IPv4 IP Address: Default Gate DNS: Dynamic DN	LAN Connected 1000Mbps IPv6 WAN (Copp way: S: Disabled	LAN Not Connected N/A USB Disable	LAN Not Connected N/A	WAN (Copper) Connected 1000Mbps	US8 Not Connected N/A	-					

RV160またはRV260ルータでのMACアドレスクローンの設定

ステップ1:[WAN] > [WAN Settings]に移動します。[Advanced Settings]をクリックし、[

MAC Address Clone]チェックボックスをクリックして、そのオプションを有効にします。 正常に動作しているサードパーティ製ルータのWAN MACアドレスのMACアドレスを入力し、 (Apply]をクリックします。

		siliniti _{RV:}	260W-routerA0CA31		cisco(admin) English 🔻 😯 🚺 💽
\otimes	Getting Started				
G	Status and Statistics	WAN Settings	,		3 Apply Cancer
**	Administration				
۰	System Configuration	IPv4 Settings	IPv6 Settings Advanced Settin	gs J 🕗	
Ø	WAN	WAN VLAN Tag:	0		
	WAN Settings	VLAN ID:		(1 ~ 4094)	
	Multi WAN	MTU:	Auto O Manual		
	Mobile Network			Bytes (Range: 576 ~ 1500, Default: 1500)	
	Dynamic DNS	3	*Note: MTU range should be 1280 ~ 15	00 if IPv6 is desired.	
	Hardware DMZ	MAC Address Clone			
	IPv6 Transition	MAC Address:	00:21:91:FE:CA:B1	Clone My PC's MAC Address	
"	LAN	WAC Address.			



新しく設定したMACアドレスがRV160またはRV260ルータのWANインターフェイスに反映 されることを確認するには、[Status and Statistics] > [System Summary]を選択します。 WAN MACアドレスを確認します。

		E	· · [· · ·] cisco	RV260V	V-routerA0CA31					O Save cisc	co(admin) Englisi	n v (?	6	C+	
8 ()	Getting Started Status and Statistics	System Summary													
	System Summary TCP/IP Services	Sy	stem Info	ormation				Firmware Information							
	Port Traffic	Se	rial Number:	DNI2226A	.0VE				Firmware Version: 1.0.00.15						
	WAN OoS Statistics	Sys	stem Up Tim	ne: 0 days 0 h	iours 14 minutes 4	6 sec			Firmware MD5 Checksum: 0b83b796e5300e003b6c91f2ff3ab128						
		Cu	rrent Time:	2019-May	-15, 06:06:08 UT	с			Locale:	English	English				
	Switch QoS Statistics	PID VID: RV260W-E-K9 V01 L LAN MAC: 68:9C:E2:A0:CA:31 L WAN MAC: 00:21:01:FE:CA:B1							Language Version:	1.0.0.0					
	Connected Devices								Language MD5 Checksum: d901cc97ae6a606564195bb34fc2d4d2						
	Routing Table														
	DHCP Bindings														
	Mobile Network	Po	ort Status	;											
	VPN Status														
	View Logs		Port ID	1	2	3	4	5	6	7	8/DMZ	Internet	USB		
	Captive Portal Status		Interface	LAN	LAN	LAN	LAN	LAN	LAN	LAN	LAN	WAN (Copper)	USB		
			Status	Connected	Not Connected	Not Connected	Not Connected	Not Connecte	d Not Connected	Not Connected	Not Connected	Connected	Not Conne	ected	
	Administration		Speed	1000Mbps	N/A	N/A	N/A	N/A	N/A	N/A	N/A	1000Mbps	N/A		
٠	System Configuration														

注:RV160またはRV260ルータのWANインターフェイスのIPアドレスが表示されることを 確認することもできます。このIPは、ISPリンクに基づいてユーザごとに異なります。

結論

これでMACアドレスクローンが完了し、確認され、RV160またはRV260シリーズルータに IPアドレスが割り当てられていることを確認できました。