RV130およびRV130Wでの基本的なVPNセット アップ

目的

バーチャルプライベートネットワーク(VPN)は、企業の従業員だけが使用するように設計された サイトである企業ネットワークイントラネットを拡張する手段として、企業でよく使用されます 。VPNは、パブリックネットワークインフラストラクチャ内に構築されたプライベートネットワ ークです。一般的な小規模企業の環境では、VPNによって地理的な接続を拡張し、従来のワイド エリアネットワーク(WAN)に比べて運用コストを削減し、従業員のワークフローの生産性を向上 させることができます。

[Basic VPN Setup]ページでは、他のロケーションゲートウェイデバイスとのゲートウェイ間 VPNトンネルを簡単に設定できます。VPNトンネルを使用すると、リモートユーザはVPNクライ アントソフトウェアを使用してルータのローカルエリアネットワーク(LAN)ネットワークにアク セスすることもできます。

注:RV130およびRV130Wは、サードパーティのIPSec VPNソフトウェアをサポートしています 。詳細については、製品アドミニストレーションガイドを参照してください。

このドキュメントの目的は、RV130デバイスで基本VPNを設定する方法を説明することです。

該当するデバイス |ファームウェアバージョン

• RV130 | V 1.0.3.28(最新のダウンロ<u>ード</u>)

• RV130W | V 1.0.3.28(最新のダウンロ<u>ード</u>)

デフォルトVPN設定の表示

ステップ1:ルータ設定ユーティリティを使用して、[VPN] > [Site-to-Site IPSec VPN] > [Basic VPN Setup] を選択します。[Basic VPN Setup] ページが開きます。

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

View Default Settings		
Connection Name and Remote IP Type		
New Connection Name:		
Pre-Shared Key:		
Endpoint Information		
Remote Endpoint:	IP Address 👻	
Remote WAN (Internet) IP Address:		(Hint: 1.2.3.4 or abc.com)
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:		(Hint: 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Local LAN (Local Network) IP Address:		(Hint: 1.2.3.4)
Local LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Save Cancel		

ステップ2:[View Default Settings] ボタンをクリックして、Basic VPNによって設定されたデフォルト値を表示します。

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

View Default Settings		
Connection Name and Remote IP Type		
New Connection Name:		
Pre-Shared Key:		
Endpoint Information		
Remote Endpoint:	IP Address 👻	
Remote WAN (Internet) IP Address:		(Hint: 1.2.3.4 or abc.com)
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:		(Hint: 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Local LAN (Local Network) IP Address:		(Hint: 1.2.3.4)
Local LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Save Cancel		

[Basic VPN Setup] ページにデフォルト設定が表示されます。

Basic VPN Setup Default Values for IKE		
Exchange Mode:	Main	
Local WAN (Internet) ID:	Local WAN (Internet) IP Address	
Remote WAN (Internet) ID:	Remote WAN (Internet) IP Address	
Encryption Algorithm:	AES-128	
Authentication Algorithm:	MD5	
Authentication Method:	Pre-Shared Key	
Diffie-Hellman (DH) Group:	Group2 (1024 bit)	
SA-Lifetime:	8 Hours	
Basic VPN Setup Default Values for VPN		
Encryption Algorithm:	AES-128	
Integrity Algorithm:	MD5	
SA-Lifetime:	1 Hours	
PFS Key Group:	Group 2(1024 bit)	
Back		

ステップ3:[Back] ボタンをクリックして、[Basic VPN Setup] ウィンドウに戻ります。

Basic VPN Setup	
Basic VPN Setup Default Va	lues for IKE
Exchange Mode:	Main
Local WAN (Internet) ID:	Local WAN (Internet) IP Address
Remote WAN (Internet) ID:	Remote WAN (Internet) IP Address
Encryption Algorithm:	AES-128
Authentication Algorithm:	MD5
Authentication Method:	Pre-Shared Key
Diffie-Hellman (DH) Group:	Group2 (1024 bit)
SA-Lifetime:	8 Hours
Basic VPN Setup Default Va	lues for VPN
Encryption Algorithm:	AES-128
Integrity Algorithm:	MD5
SA-Lifetime:	1 Hours
PFS Key Group:	Group 2(1024 bit)
Back	

VPNの基本設定

ステップ1:ルータ設定ユーティリティを使用して、[VPN] > [Site-to-Site IPSec VPN] > [Basic VPN Setup] を選択します。[Basic VPN Setup] ページが開きます。

Basic VPN Setup		
About Basic VPN Setup		
The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu		
View Default Settings		
Connection Name and Remote IP Type		
New Connection Name:		
Pre-Shared Key:		
Endpoint Information		
Remote Endpoint:	IP Address 👻	
Remote WAN (Internet) IP Address:		(Hint: 1.2.3.4 or abc.com)
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:		(Hint: 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Local LAN (Local Network) IP Address:		(Hint: 1.2.3.4)
Local LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Save Cancel		

ステップ2:[New Connection Name] フィールドに接続名を入力します。この名前は管理目的で使用され、VPNの動作には影響しません。

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

View Default Settings		
Connection Name and Remote IP Type		
New Connection Name:	cisco_sb)
Pre-Shared Key:		
Endpoint Information		
Remote Endpoint:	IP Address 👻	
Remote WAN (Internet) IP Address:		(Hint: 1.2.3.4 or abc.com)
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:		(Hint: 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Local LAN (Local Network) IP Address:		(Hint 1.2.3.4)
Local LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Save Cancel		

ステップ3:[*Pre*-Shared Key]フィールドに事前共*有キーを入力*します。このキーは、VPN Clientま たはゲートウェイがVPN接続を確立するために必要です。

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

View Default Settings

Connection Name and Remote IP Type		
New Connection Name:	cisco_sb	
Pre-Shared Key:	password1	
Endpoint Information		
Remote Endpoint:	IP Address 👻	
Remote WAN (Internet) IP Address:		(Hint: 1.2.3.4 or abc.com)
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:		(Hint: 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Local LAN (Local Network) IP Address:		(Hint: 1.2.3.4)
Local LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Save Cancel		

ステップ4:[Remote Endpoint] ドロップダウンリストで、リモートゲートウェイが接続の確立に使用するアドレスタイプとして[IP Address] または[FQDN] を選択します。

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

View Default Settings

Connection Name and Remote IP Type		
New Connection Name:	cisco_sb	
Pre-Shared Key:	password1	
Endpoint Information		
Remote Endpoint:	IP Address	
Remote WAN (Internet) IP Address:	FQDN	(Hint: 1.2.3.4 or abc.com)
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:		(Hint: 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Local LAN (Local Network) IP Address:		(Hint: 1.2.3.4)
Local LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Save Cancel		

使用可能なオプションは次のように定義されています。

- IPアドレス ネットワーク上で通信するためにインターネットプロトコルを使用している各 マシンを識別する、ピリオドで区切られた一意の数字の文字列。
- FQDN(完全修飾ドメイン名):インターネット、特定のコンピュータ、または特定のホストの完全なドメイン名。FQDNは次の2つの部分で構成されます。ホスト名とドメイン名。たとえば、仮想メールサーバのFQDNはmymail.companyname.orgです。ホスト名はmymailで、ホストはドメインcompanyname.org内にあります。

ステップ5:ステップ4で選択したIPアドレスまたはFQDNを[Remote WANs (Internet) IP Address] フィールドに入力します。

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

View Default Settings

Connection Name and Remote IP Type		
New Connection Name:	cisco_sb	
Pre-Shared Key:	password1	
Endpoint Information		
Remote Endpoint:	IP Address 👻	
Remote WAN (Internet) IP Address:	64 32 141 233	(Hint: 1.2.3.4 or abc.com)
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:		(Hint: 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Local LAN (Local Network) IP Address:		(Hint: 1.2.3.4)
Local LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Save Cancel		

ステップ6:[Remote LAN (Local Network) IP Address] フィールドと[Remote LAN (Local Network) Subnet Mask] フィールドにリモートLANのIPアドレスとサブネットマスクを入力します。

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

View Default Settings

Connection Name and Remote IP Type

New Connection Name:	cisco_sb	
Pre-Shared Key:	password1	
Endpoint Information		
Remote Endpoint:	IP Address 🔻	
Remote WAN (Internet) IP Address:	1.2.3.4	(Hint: 1.2.3.4 or abc.com)
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:	192.168.2.100	(Hint: 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:	255.255.255.0	(Hint: 255.255.255.0)
Local LAN (Local Network) IP Address:		(Hint: 1.2.3.4)
Local LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Save Cancel		

ステップ7:[Local LAN (Local Network) IP Address] フィールドと[Local LAN (Local Network) Subnet Mask] フィールドに、ローカルLANのIPアドレスとサブネットマスクを入力します。

Basic VPN Setup		
About Basic VPN Setup		
The basic VPN setup sets most parameters i and assumes a Pre-shared Key, which great you can always update the parameters throug	to defaults as proposed ly simplifies setup. After gh the Policies menu	by the VPN Consortium (VPNC), creating the policies through the Basic VPN Setup,
View Default Settings		
Connection Name and Remote IP Type		
New Connection Name:	cisco_sb	
Pre-Shared Key:	password1	
Endpoint Information		
Remote Endpoint:	IP Address 👻	
Remote WAN (Internet) IP Address:	1.2.3.4	(Hint: 1.2.3.4 or abc.com)
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:	192.168.2.100	(Hint 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:	255.255.255.0	(Hint: 255.255.255.0)
Local LAN (Local Network) IP Address:	192.168.8.100	(Hint 1.2.3.4)
Local LAN (Local Network) Subnet Mask:	255.255.255.255	(Hint: 255.255.255.0)
Save Cancel		

ステップ8:[Save] をクリックして設定を保存します。

Basic ∨PN Setup		
About Basic VPN Setup		
The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu		
View Default Settings		
Connection Name and Remote IP Type		
New Connection Name:	cisco_sb	
Pre-Shared Key:	password1	
Endpoint Information		
Remote Endpoint:	IP Address 👻	
Remote WAN (Internet) IP Address:	1.2.3.4	(Hint 1.2.3.4 or abc.com)
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:	192.168.2.100	(Hint 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:	255.255.255.0	(Hint 255.255.255.0)
Local LAN (Local Network) IP Address:	192.168.8.100	(Hint 1.2.3.4)
Local LAN (Local Network) Subnet Mask:	255.255.255.255	(Hint: 255.255.255.0)
Save Cancel		

この記事に関連するビデオを見る…

<u>シスコのその他の技術に関する講演を表示するには、ここをクリックしてください。</u>

翻訳について

シスコは世界中のユーザにそれぞれの言語でサポート コンテンツを提供するために、機械と人に よる翻訳を組み合わせて、本ドキュメントを翻訳しています。ただし、最高度の機械翻訳であっ ても、専門家による翻訳のような正確性は確保されません。シスコは、これら翻訳の正確性につ いて法的責任を負いません。原典である英語版(リンクからアクセス可能)もあわせて参照する ことを推奨します。