WebインターフェイスとCLIを使用したVCSリリ ースキーのインストールの設定例

内容

概要 前提条件 要件 使用するコンポーネント 設定 Webインターフェイスリリースキーのインストール例 CLIリリースキーのインストール例 確認 Webインターフェイスのリリースキーのインストールの検証 リリースキーのインストールのCLIインターフェイスの確認 トラブルシュート

概要

このドキュメントでは、Webインターフェイスおよびコマンドラインインターフェイス(CLI)を介 したCisco Video Communication Server(VCS)へのリリースキーのインストールについて説明しま す。

前提条件

要件

次の項目に関する知識があることが推奨されます。

VCSのインストール

VCSが正常にインストールされ、WebインターフェイスまたはCLIから到達可能な有効なIPアド レスが適用されていること。

VCSシリアル番号に対して有効なリリースキーを申請し、受信していること。

root(CLIによる)とadminアカウントの両方を使用して、WebインターフェイスまたはCLIから VCSにアクセスできます。

Cisco.comからVCSソフトウェアアップグレードイメージをダウンロードしていること。

注:インストールガイドは次の場所にあります。 <u>http://www.cisco.com/c/en/us/support/unified-communications/telepresence-video-</u> <u>communication-server-vcs/products-installation-guides-list.html</u>

使用するコンポーネント

このドキュメントの情報は、次のソフトウェアのバージョンに基づいています。

VCSバージョンx8.6.1およびx8.7.3

VCS Control x7.Xおよびx8.Xリリース

VCS Expressway x7.Xおよびx8.Xリリース

PuTTY (端末エミュレーション ソフトウェア)

– または、Secure CRT、TeraTermなどのSSHをサポートする任意のターミナルエミュレーショ ンソフトウェアを使用できます。

PSCP(PuTTY Secure Copy Protocolクライアント)

--SCPをサポートする任意のクライアントを使用できます。

リリースキーまたはアップグレードキーを含むライセンス電子メール。

Webブラウザ。この例では、Firefoxを使用しています。Internet ExplorerとChromeも同様に動作 します。

このドキュメントの情報は、特定のラボ環境にあるデバイスに基づいて作成されました。このド キュメントで使用するすべてのデバイスは、初期(デフォルト)設定の状態から起動しています 。対象のネットワークが実稼働中である場合には、どのようなコマンドについても、その潜在的 な影響について確実に理解しておく必要があります。

設定

Webインターフェイスリリースキーのインストール例

次の2つのオプションがあります。

オプション1、リリースキーを設定することができます。

オプション2では、アップグレードプロセスの一部としてリリースキーを追加できます。

どちらのオプションも機能し、最初に**setオプション**を表示し、次に**upgradeオプション**を表示し ます。

注:どちらのオプションでも、VCSの再起動が必要です。

注:どちらのオプションも、同じライセンス電子メールの例を使用します。

オプション1は、setオプションを表示します。Web インターフェイスの例を示す次のビデオは、 このドキュメントの内容を補足します。 ステップ1:VCSをインストールし、シリアル番号を取得し、PAKとシリアル番号を使用してリ リースキーを申請すると、シスコのライセンスチームからライセンス電子メールが届きます。リ リースキーとオプションキーが含まれているかどうかは問いません。例の電子メールでは、この ドキュメントで使用されているリリースキーを確認できます。

注: PAK の例については、このドキュメントの対象外です。

メールの例

You have received this email because your email address was provided to Cisco Systems during the Serial Number Lookup process for software license activation key/file. Please read this email carefully and forward it with any attachments to the proper system administrator if you are not the correct person.

System Serial Number Hardware Serial Number MAC Address Service Contract SC End Date	: 0B616767 : 0B616767 : 000000000000
Software Part Name Tandberg Item No Shipped Version Shipped Version Key Shipped Image URL Upgrade To Upgrade To Key Upgrade To Image URL	L-VCS-FINDME: L-VCS-FINDME:VCS - Enable User Policy feature 116341U00-1-1C328745 - 7513492028475672
Options Cisco Option Name Tandberg Option Name Option Key	:LIC-VCS-300: :116341X300:VCS - add 300 non-traversal calls :116341X300-1-7D03B558
Options Cisco Option Name Tandberg Option Name Option Key	:LIC-VCS-DEVPROV: :116341P00:VCS - Enable Device Provisioning :116341P00-1-1FEB68A1
Options Cisco Option Name Tandberg Option Name Option Key	:LIC-VCS-GW: :116341G00:VCS - Enable GW feature :116341G00-1-96554215

ステップ2:WebブラウザでVCSのWebインターフェイスにアクセスします。管理者アカウント で**ログイン**すると、[VCS Status]画面が表示されます。

注:このドキュメントでは意図的に一部の数字の表示をぼかしています。

cise	CO Ciso	o TelePresen	ice Video Co	mmunic	ation Server Control	This system has 5 alarms
Status	System	Configuration	Applications	Users	Maintenance	1 2 B
Overvi	iew					You are here: Status • Overview
System	information			Note: I	ogin brings you to the Sta	tus Screen
System r	name	VCS-C				
Up time		22 days	32 minutes 11 seco	onds		
Software	version	X8.6.1				
IPv4 add	iress		101			
Options		500 Non Interoper	Traversal Calls, 15 ability.	0 Traversal	Calls, 2500 Registrations, Enc	ryption, Interworking, FindMe, Device Provisioning, Microsoft
Resource	ce usage (last	updated: 17:07:52 [EOT)			
Non-trav	ersal calls	Current	0			
		Peak	0		1	
		Since last restart	0			
		License usage cu	rrent 0%			
		License usage pe	ak 0%			
Traversa	L calls	Current video	0			
		Current audio (SI	P) 0			
		Peak video	0			
		Peak audio (SIP)	0			
		Since last restart	video 0			
		Since last restart ((SIP)	audio 0			
		License usage cu	rrent 0%			
		License usage pe	ak 0%			
Registrat	tions	Current	0			
		Peak	0			
		Since last restart	0			
		License usage cu	ment 0%			
		License usage pe	ak 0%			

alada

ステップ 3:適切な画面に移動して、リリースキーをイン**ストールします**。[Maintenance]タブに カーソルを合わせます。

CISCO Ciso	co TelePresenc	e Video Co	mmunica	tion Server Cor	Click on	This system has 6 alarms
Status System	Conliguration	Applications	Osers	Maintenance	Maintenance	A 9 9
Overview						You are here: Status + Overview
System information			_			
System name	VCS-C				-	
Up time	22 days 32	minutes 11 seco	onds			
Software version	X8.6.1					
IPv4 address	. 10	01				
Options	500 Non Tri Interoperati	aversal Calls, 15 iility.	0 Traversal C	alls, 2500 Registration	s, Encryption, Interworking, FindMe	, Device Provisioning, Microsoft
Resource usage (last	updated: 17:07:52 EC)T)	_			
Non-traversal calls	Current	0				
	Peak	0				
	Since last restart	0		1		
	License usage curre	ent 0%				
	License usage peak	0%				
Traversal calls	Current video	0				
	Current audio (SIP)	0				
	Peak video	0				
	Peak audio (SIP)	0				
	Since last restart vid	5eo 0				
	Since last restart au (SIP)	dio 0				
	License usage cum	ent 0%				
	License usage peak	0%				
Registrations	Current	0				
	Peak	0				
	Since last restart	0				
	License usage curre	ent 0%				
	License usage peak	0%				

ステップ 4:メニューがポップアップ表示されたら、オプションキーをクリ**ックします**。

cisco Cis	co TelePresence \	Video Communica	tion Server Contro	ol		(This system has	5 alarms
Status System	Configuration App	plications Users	Maintenance					<u> </u>
Overview			Upgrade				You are here:	Status • Overview
System information			Logging					
System name	VCS-C		Option keys			Click on Opt	ion Keys	
Up time	22 days 32 mir	utes 11 seconds	Tools					
Software version	X8.6.1		Security certificates		L .			
IPv4 address	.101							
Options	500 Non Traver	sal Calls, 150 Traversal C	Backup and restore		tion, In	terworking, FindMe, Dev	rice Provisioning, N	ficrosoft
Resource usage (las	t undated: 17:10:32 EDT)		Diagnostics	,				
			Maintenance mode					
Non-traversal calls	Current	0	Language					
	Peak	0	Restart options					
	Since last restart	0		-				
	License usage current	0%						
	License usage peak	0%						

ステップ 5: 「リリースキー**」セクション**を確認し、新しいインストールの場合は、空のリリー

スキーのフィールドがあります。既存のVCSインストールの[Release key]フィールドには、現在 のリリースキー値が事前に入力されています。この場合は、[Upgrade]オプションを使用してリリ ースキーを設定します。

注:リリースキーは、マイナーバージョンアップグレード間では変更されません。リリース キーは、x7.Xからx8.Xへのメジャーバージョンアップグレード間でのみ変更されます。

リリースキーをコピーし、[リリースキー]フィールドに**貼り付け**ます。

Status	System	Configuration	Applications	Users	Maintenance		🛓 🕑 E	ielo. 😁 Logo
Optior	n keys						You are here: Maintena	nce • Option k
K	iy -			_	Description	Status	Validity period	
11	6341C00-1-1E	7D8EDE			Microsoft Interoperability	Active	Unlimited	^
11	6341G00-1-96	554215			H323-SIP Interworking Gatewa	y Active	Unlimited	=
11	6341P00-1-1F	EB68A1			Device Provisioning	Active	Unlimited	
11	6341U00-1-1C	328745			FindMe	Active	Unlimited	-
Syster Serial r	n information		08616	3767			-in Internetion Franks	
Syster Serial r Active	n information number options are option		0B616 500 N Device	3767 Ion Traverse e Provision	al Calls, 150 Traversal Calls, 25 ing, Microsoft Interoperability.	00 Registrations, Encry Note the Release Ke	yption, Interworking, FindMe, ey section and the blank fie	ld if this
System Serial r Active Softwa Add op	n information number options are option dion key		0B616 500 N Device	3767 Ion Traversa e Provision	al Calls, 150 Traversal Calls, 25 ing, Microsoft Interoperability.	00 Registrations, Encry Note the Release Ke is a new VCS. This r is already installed. (Ki	ption, Interworking, FindMe, ey section and the blank fie may have a value if the rele Copy your newly acquired F ey into this field.	ld if this ase key Release
Syster Serial r Active Softwa Add opt	n information number options are option tion key ion		08616 500 N Device	3767 Ion Traversi e Provision	al Calis, 150 Traversal Calis, 25 ing, Microsoft Interoperability.	00 Registrations, Encry Note the Release Ke is a new VCS. This r is already installed. (Ki	rption, Interworking, FindMe, ey section and the blank fie may have a value if the rele Copy your newly acquired F ey into this field.	ld if this ase key Release
Syster Serial r Active of Softwa Add opt Releas	n information number options are option dion key ion		08616 500 N Device	3767 Ion Traverse e Provision	al Calls, 150 Traversal Calls, 25 ing, Microsoft Interoperability.	00 Registrations, Encry Note the Release Ke is a new VCS. This r is already installed. (Ki	/ption, Interworking, FindMe, ey section and the blank fie may have a value if the rele Copy your newly acquired F ey into this field.	ld if this ase key Release

ステップ 6 : [リリースキー]フィールドに貼り付けられたリリースキーを確認できます。

olaida oyalein	Configuration	Applications	Users	Maintenance		👗 🧿	Help. 😁 Log
Option keys						You are here: Maintene	ance • Option
Key 🔹			_	Description	Status	Validity period	_
116341C00-1-	1E7D8EDE			Microsoft Interoperability	Active	Unlimited	<u>^</u>
116341G00-1-	96554215			H323-SIP Interworking Gateway	Active	Unlimited	=
116341P00-1-	1FEB68A1			Device Provisioning	Active	Unlimited	
116341U00-1-	1C328745			FindMe	Active	Unlimited	-
Delete Select all	Unselect all						
System information	m						
Serial number		0B616	3767				
Serial number Active options		0B616 500 N	on Travers	al Calls, 150 Traversal Calls, 2500 R	egistrations, Encry	yption, Interworking, FindMe,	
Serial number Active options		0B616 500 N Device	3767 on Travers e Provision	al Calls, 150 Traversal Calls, 2500 R ing, Microsoft Interoperability.	egistrations, Encry	yption, Interworking, FindMe,	
Serial number Active options		0B616 500 N Device	on Travers e Provision	al Calls, 150 Traversal Calls, 2500 R ing, Microsoft Interoperability.	egistrations, Encry	yption, Interworking, FindMe,	
Serial number Active options Software option		0B616 500 N Device	5767 on Travers e Provision	al Calls, 150 Traversal Calls, 2500 R ing, Microsoft Interoperability.	egistrations, Encry	yption, Interworking, FindMe,	
Serial number Active options Software option Add option key		0B616 500 N Device	on Travers a Provision	al Calls, 150 Traversal Calls, 2500 R ing, Microsoft Interoperability.	egistrations, Encry Here, I've paste ema	yption, Interworking, FindMe, ed in the release key from o il example above.	our
Serial number Active options Software option Add option key		0B616 500 N Device	on Travers a Provision	al Calls, 150 Traversal Calls, 2500 Ro ing, Microsoft Interoperability.	egistrations, Encry Here, I've paste ema	yption, Interworking, FindMe, ed in the release key from o il example above.	pur
Serial number Active options Software option Add option key Add option		0B616 500 N Device	i767 on Travers a Provision	al Calls, 150 Traversal Calls, 2500 R ing, Microsoft Interoperability.	egistrations, Encry Here, I've paste ema	yption, Interworking, FindMe, ad in the release key from d il example above.	our
Serial number Active options Software option Add option key Add option		0B616 500 N Device	i767 on Travers e Provision	al Calis, 150 Traversal Calis, 2500 Ro ing, Microsoft Interoperability.	egistrations, Encry Here, I've paste ema	yption, Interworking, FindMe, ed in the release key from o il example above.	pur
Serial number Active options Software option Add option key Add option		0B616 500 N Device	i767 on Travers a Provision	al Calls, 150 Traversal Calls, 2500 Ro ing, Microsoft Interoperability.	egistrations, Encry Here, I've paste ema	yption, Interworking, FindMe, ed in the release key from d il example above.	DUF
Serial number Active options Software option Add option key Add option		08616 500 N Device	00078475	al Calis, 150 Traversal Calis, 2500 Ro	egistrations, Encry Here, I've paste ema	yption, Interworking, FindMe, ed in the release key from d il example above.	bur
Serial number Active options Software option Add option key Add option Release key Release key		0B616 500 N Device	92028475	al Calls, 150 Traversal Calls, 2500 Re ing, Microsoft Interoperability.	egistrations, Encry Here, I've paste ema	yption, Interworking, FindMe, ad in the release key from d	DUF
Serial number Active options Software option Add option key Add option Release key Release key		08616 500 N Device	92028475	al Calis, 150 Traversal Calis, 2500 R ing, Microsoft Interoperability.	egistrations, Encry Here, I've paste ema	yption, Interworking, FindMe, ed in the release key from d il example above.	bur

手順 7:次に、[Set release key]をクリックします。

CISCO Cisco Tele	Presence Video Co	mmuni	cation Server Control	Th	is system has 6 alarms	
Status System Configu	ration Applications	Users	Maintenance		👗 🗷 Heb	. <u>e los</u>
Option keys					You are here: Maintenance	 Option
Key =		_	Description	Status	Validity period	_
116341C00-1-1E7D8EDE			Microsoft Interoperability	Active	Unlimited	^
116341G00-1-96554215			H323-SIP Interworking Gateway	Active	Unlimited	=
116341P00-1-1FEB68A1			Device Provisioning	Active	Unlimited	
116341U00-1-1C328745			FindMe	Active	Unlimited	-
System information Serial number Active options Software option Add option key	0B616 500 N Device	3767 on Travers e Provision	al Calls, 150 Traversal Calls, 2500 R ing, Microsoft Interoperability.	egistrations, Encry	ption, Interworking, FindMe,	
Add option Release key						
Release key	75134	92028475	372 ()			
Set release key			Now I click Set release ke	y		
Current licenses						_

ステップ 8:ページ上部に表示されるプ**ロンプト**内の[restart]ハイパーリンクをクリックして、 VCSを再起動します。

Status System Configuration Ap	plications Users Maintenance		🛓 🕐 Help.	<u>0</u> 6
ption keys			You are here: Maintenance	Option
Saved. The release key has been updated	however a restart is required for it to take effect.			
Key	Description	itatus	Validity period	
116341C00-1-1E7D8EDE	Microsoft Interoperability A	ctive	Unlimited	1
116341G00-1-96554215	H323-SIP Interworking Gateway A	ctive	Unlimited	-
116341P00-1-1FEB68A1	Device Provisioning A	ctive	Unlimited	
116341U00-1-1C328745	FindMe A	ctive	Unlimited	
Serial number Active options	Notice how a message comes up saying I n steps from there to reload the VCS. Onc 0B616767 500 Non Traversal Calls, 150 Traversal Calls, 2500 Registr Device Provisioning, Microsoft Interoperability.	eed to rest e rebooted ations, Encr	tart, click on restart and follow d, the key will be installed. yption, Interworking, FindMe,]
Select all Unselect all System information Serial number Active options Software option	Notice how a message comes up saying I n steps from there to reload the VCS. Onc 0B616767 500 Non Traversal Calls, 150 Traversal Calls, 2500 Registr Device Provisioning, Microsoft Interoperability.	eed to rest e rebooted ations, Encr	tart, click on restart and follow d, the key will be installed. yption, Interworking, FindMe,]
Delete Select all Unselect all System information Serial number Active options Software option Add option key	Notice how a message comes up saying I n steps from there to reload the VCS. One 0B616767 500 Non Traversal Calls, 150 Traversal Calls, 2500 Registr Device Provisioning, Microsoft Interoperability.	eed to resi e rebooter ations, Encr	tart, click on restart and follow d, the key will be installed. yption, Interworking, FindMe,]
Select all Unselect all System information Serial number Active options Software option Add option key	Notice how a message comes up saying I n steps from there to reload the VCS. Onc 0B616767 500 Non Traversal Calls, 150 Traversal Calls, 2500 Registr Device Provisioning, Microsoft Interoperability.	eed to resi e rebooter ations, Encr	tart, click on restart and follow d, the key will be installed. yption, Interworking, FindMe,]
Select all Unselect all System information Serial number Active options Software option Add option key Add option Release key	Notice how a message comes up saying I n steps from there to reload the VCS. One 08616767 500 Non Traversal Calls, 150 Traversal Calls, 2500 Registr Device Provisioning, Microsoft Interoperability.	eed to resi	tart, click on restart and follow d, the key will be installed. yption, Interworking, FindMe,]

選択肢2:**リリースキー**をインストールするアップグレードオプション

ステップ1 : Webインターフェイスから、以前と同様に[メンテ**ナリ]をク**リックし、メニューポッ プ**アップで[**アップグレード]をクリックします。

Status System Configuration Applications Users	Maintenance	👗 🕐 Helo. 🥪 Loor		
Upgrade	Upgrade		You are here: Maintenance • Upgrad	
Component +	Logging			
B2BUA Presence Relay	Option keys		^	
B2BUA Service	Tools -	Click on Maintenance>Upgrade		
c_mgmt	Security certificates +			
collectdsupport	Backup and restore			
oaksupport			,	
stringencoderssupport	Diagnostics +	10 + 1 + 1 + 1 + 1 + 1 + 1 + 1 + 1 + 1 +		
System platform	Maintenance mode	7513492028475672		
samc_server	Language			
incoment.	Restart options			
Upgrade component				
WARNING: You should backup the system before upgrading.	em backup			
Select file	nume No file selected			

Upgrade

ステップ2:[アップグレード]画面に、[アップグレード・コンポー**ネント]セクションが**表示され ます。

注:このドキュメントでは、VCSソフトウェアアップグレードイメージをローカルコンピュ ータにダウンロードしたことを前提としています。

[Browse]をクリックし、ダウンロードしたVCSアップグレードイメージを見つけます。

Status System Configuration Application	ons Users Maintenance	👗 🕐 Haio. 🥪 Loo	28
Upgrade		You are here: Maintenance • Upg	rad
Component +	Version	Release key	
B2BUA Presence Relay	1.0-319687		*
B2BUA Service	1.0-319687		
c_mgmt	8.6-1.0.319687		
collectdsupport	5128		
caksupport	5128		
stringencoderssupport	5128		
System platform	×8.6.1	7513492028475672	
traffic_server	5128		
xcp-vcs	1.0-319687		
xcpsupport	5128		-
Upgrade component			_
WARNING: You should backup the system before upg	rading. System backup		
Select file	Browse Networked	Click Browse to locate your upgrade image, then browse to the file on your local machine and upload.	

ステップ 3:プロンプトが**表示され**たら、リリースキー**フィールド**にリリースキー値を入力しま す。電子メールからコピーして貼り付けるか、この場合x8.6.1 ~ x8.7.3のようなマイナーアップ グレードの場合は、同じ画面からコピーして貼り付けます。

Status System Configuration Applicatio	ns Users Maintenance	👗 🖲 Helo. 😔 Loopul
Jpgrade		You are here: Maintenance • Upgra
Component -	Version	Release key
328UA Presence Relay	1.0-319687	· · · · · · · · · · · · · · · · · · ·
32BUA Service	1.0-319687	
_mgmt	8.6-1.0.319687	
rollectdsupport	5128	
aksupport	5128	
tringencoderssupport	5128	
System platform	X8.6.1	7513492028475672
raffic_server	5128	
icp-vcs	1.0-319687	
cpsupport	5128	
Upgrade component	ading. <u>System backup</u>	Once the file is selected, you can paste your release key in the field noted to the left. You can copy the release key from your licensing email. Or, if you are just doing a minor upgrade like in this example from 8.6.1 to 8.7.3, you can
Select file	Browse 542700x8_7_3.tar gz	copy and paste the release key already installed which is circled above in this example

ステップ 4 : [アップグレード]ボタンをクリックします。次のプロセスを確認し、プロセスから移動しないでください。または、最初からやり直す必要があります。イメージがアップロードされ、インストールされます。プロンプトが表示さ**れたら**再起動をクリックします。

tatus System Configuration Applications	Users Maintenance		🎽 🕐 Helz. 😏	Lego
pgrade			You are here: Maintenance •	Upgr
iomponent =	Version	Release key		
2BUA Presence Relay	1.0-319687		Information	
2BUA Service	1.0-319687		The 16-character release key for	
_mgmt	8.6-1.0.319687		the new software version. This is	
ollectdsupport	5128		not required if you are upgrading to	
aksupport	5128		a dot release, for example from 1.0 to 1.1.	
ringencoderssupport	5128			
ystem platform	X8.6.1	7513492028475672		
affic_server	5128			
:p-vcs	1.0-319687			
cpsupport	5128			
Upgrade component WARNING: You should backup the system before upgrade Select file Release key	ng. <u>System backup</u> Browse 942700x8_7_3 tar gz	Once the release key is p follow the steps from there. I to start over. The image wi finally you restart the VCS. O should be on the new relea	asted, you can click upgrade and then Do not leave the screens or you will ha Il first upload, then it gets installed and Ince it is restarted and comes back up ise and the release key can be verified	ve , it

VCSを再起動したら、リリースが正しくインストールされていることを確認します。このドキュメントの「VERIFY」セクションに記載されている**2つの方法**を使用してください。

CLIリリースキーのインストール例

CLIを使用してリ**リースキー**をインストールします。これは、Windowsのコマンド(CMD)プロンプ トとPuTTYなどのターミナルエミュレーションソフトウェアアプリケーションからSCPクライア ント(この例ではPSCP)を使用する2つの部分のプロセスです。

ステップ1:リリースキーをプレーンASCIIテキストファイルにコピーします。リリースキー値の 前後にスペースがないことを確認します。リリースキーをテキストエディタのアプリケーション にコピーし、ファイルをrelease-key.txtとして保存します。

release-key.txt	
File Edit Format View Help	
7513492028475672	First, open a plain text editor such as in this example, notepad. Be careful not to use an editor that saves the file in RTF format. It MUST be plain ASCII text. Paste the 16 digit release key from your email or Web Interface as noted previously in this article and save the file with the name "release-key.txt". Note the release key and filename syntax to the left.
4	5

ステップ 2: release-key.txtファイルとPSCP.exeをコンピュータの同じディレクトリに置きます 。Windowsのコマンド(CMD)プロンプトを使用してそのディレクトリに移動し、VCS上の一時デ ィレクトリにリリースキーをコピーします。PSCPトランザクションのrootアカウントを使用しま す。プロンプトが表示されたら、rootアカウントのパスワードを入力します。100 %で示されてい るように、転送が完了したことを確認します。以下が一例です。



ステップ 3:ここで使用する8.7.3など、アップグレードするイメージをコピーします。PSCPを 使用してこのイメージをコピーします。ステータスが100 %と表示され、ソフトウェアイメージ がVCSへのコピーを終了し、VCSをリブートする準備が整ったことを確認します。

I will use putty SSH shell to restart the VCS.



ステップ 4:VCSへのSSHセッションを介してVCSをリブートします。PuTTYを開き、VCSの IPアドレスを入力します。[SSH]をクリックして開きます。



ステップ 5: [Open]をクリックし、プロンプトが表示されたら、管理者アカウントでVCSにログ インします。プロンプトが表示されたら、管理者アカウントのパスワードを入力します。VCSを リブートするための正しいコマンドがあることを確認します。コマンドの後にスペースと疑問符 を入力して、正しいことを確認します。VCSは、xCommand BootがVCSを再起動することを確認 します。xCommand Bootコマンドを入力してVCSをリブートします。



VCSがリブート中に点滅し、PuTTYセッションが閉じます。VCSがリブートすると接続が終了す るため、この動作は正常です。VCSのリブートには約5分かかります。完了したら、このドキュ メントの「確認」セクションに記載されているように、WebインターフェイスまたはCLI経由で 正しくインストールされたリリースキーを確認します。

確認

Webインターフェイスのリリースキーのインストールの検証

Webインターフェイスにインストールされているリリースキーを確認するには、次の2つの方法 があります。

オプション 1 : 前述のオプションキ**ーページを見**て、「リリースキー」フィールド**をチェック**し ます。

Status System Configuration	Applications	Users	Maintenance		👗 🕐 Holo. 😔 La
Option keys					You are here: Maintenance • Optic
Key 💌		_	Description	Status	Validity period
116341C00-1-1E7D8EDE			Microsoft Interoperability	Active	Information
116341G00-1-96554215			H323-SIP Interworking Gateway	Active	Specifies the option key of your
116341P00-1-1FEB68A1			Device Provisioning	Active	These are added to the system in
116341U00-1-1C328745			FindMe	Active	order to add extra functionality, such as increasing the system's
Delete Select all Unselect all					capacity. Contact your Cisco representative for further information.
System information Serial number	08616	767			Range: 0 to 1024 characters
System information Serial number Active options	0B616 500 No Device	767 on Traversi Provision	al Calls, 150 Traversal Calls, 2500 R ing, Microsoft Interoperability.	egistrations, E	Range: 0 to 1024 characters
System information Serial number Active options Software option	0B616 500 No Device	767 on Traversa Provision	al Calls, 150 Traversal Calls, 2500 R ing, Microsoft Interoperability.	egistrations, E	Range: 0 to 1024 characters
System information Serial number Active options Software option Add option key	0B616 500 No Device	767 on Traversa Provision	al Calls, 150 Traversal Calls, 2500 R ing, Microsoft Interoperability.	egistrations, E	Range: 0 to 1024 characters
System information Serial number Active options Software option Add option key Add option	0B616 500 No Device	767 n Traversi Provision	al Calls, 150 Traversal Calls, 2500 R ing, Microsoft Interoperability.	ogistrations, E	Range: 0 to 1024 characters
System information Serial number Active options Software option Add option key Add option Release key	0B616 500 Nc Device	767 Provision	al Calls, 150 Traversal Calls, 2500 R ing, Microsoft Interoperability.	egistrations, E Re	Range: 0 to 1024 characters

オプション 2:前に説明したアップグ**レードのペ**ージをチェックします。

CISCO Cisco TelePresence Vie	deo Communication Server Cor	This system has 6 alarms
Status System Configuration Applic	ations Users Maintenance	👔 👔 Helo. 😔 Lozout
Upgrade		You are here: Maintenance • Upgrade
Component •	Version	Release key
B2BUA Presence Relay	1.0-319687	A
B2BUA Service	1.0-319687	
c_mgmt	8.6-1.0.319687	
collectdsupport	5128	
oaksupport	5128	
stringencoderssupport	5128	
System platform	×8.6.1	7513492028475672
traffic_server	5128	
xcp-vcs	1.0-319687	
xcpsupport	5128	· · · · ·
Upgrade component]	
WARNING: You should backup the system	System backup	You can see the Release Key on the
before upgrading.		opgrade Screen too.
Select file	Browse No file selected.	

Upgrade

リリースキーのインストールのCLIインターフェイスの確認

CLIへのSSHセッションによって、CLIインターフェイス経由でインストールされたリリースキー を確認します。このドキュメントで前述したadminアカウントでログインします。その後、コマ ンドxStatus SystemUnit Softwareを発行します。アップグレードが成功し、リリースキーがイン ストールされていることが確認できます。



トラブルシュート

Cisco VCSにリリースキーをインストールする際には、問題は発生しません。VCSのリリースキ ーフィールドにオプションキーを入力するか、アップグレード時にオプションキーを入力するこ とが、最も一般的な障害の原因です。この記事の冒頭で引用した電子メールの例は、リリースキ ーに加えてオプションキーを示しています。オプション キーを [Release Key] フィールドに入力 すると、エラーが発生します。 սիսիս

CISCO Cisco TelePresence Video Communication Server Control

This system has 5 starms



VCSは、[リリースキー]フィールドの任意の値**を受け入**れま**す**。誤った値を入力してVCSをリブ ートすると、「Invalid release key」というエラーが表示されます。

Status	System	Configuration	Applications	Users	Maintenance		2) Help. (red Logant
Overview							You are here: Status + Overvie
Overview							THE REPORT OF A
C. Press	d release k	ey Release key is n	issing the system	i is in demor	stration mode and has limite	d functionality, contact your Cisco support representative to buy your neease key.	
System info	rmation			_			
System nam	12		VCS-C				
Up time			0 minutes 0	seconds			
Software ver	calion		>8.7.3				
Pri attes	5		14.80.94.1	21			
Ostors			501 Non Tr	aversal Calls	, 150 Traversal Calls, 3 Regi	strations, Encryption, Intervolving, FindMe, Device Provisioning, Microsoft Interoperability	
Resource u	ange (last i	updated: 01.41.40	EDT)	_			
Non-Interestal calls	el calta	Curre	nt		0		
		Peak			0		
		Since	last restart		0		
		License usage current		0%			
		Licen	se usage peak		0%	Now I have an invalid Release Key To fix this, I simply follow the release key process noted in this document and install the RELEASE KEY and not an option key.	
Traversal cal	ts .	Current video Current audio (SIP)		0			
				0			
		Peak	video		0		
		Peak	autio (SIP)		0		
		Since	last restart video		0		
		Since	last restart audio	(SIP)	0		
		Licen	se usage current		0%		
		Licen	se usage peak		0%		
Registrations	8	Curre	nt		0		
		Peak			0		
		Since	last restart		0		
		Licen	se usage current		0%		
		Licen	se usøge peak		0%		

この状況を修正す**るには、このド**キュメントに記載されているリリースキーをインストールして ください。

その他のタイプの障害については、Cisco TAC にお問い合わせください。