Cisco Real Time Monitoring Toolでのカスタムア ラートの設定

内容

<u>概要</u>
<u>前提条件</u>
<u>要件</u>
<u>使用するコンポーネント</u>
<u>背景説明</u>
<u>設定</u>
<u>確認</u>
トラブルシュート

概要

このドキュメントでは、Cisco Real Time Monitoring Tool(RTMT)で顧客アラートを設定する方法 について説明します。

著者:TACエンジニア、Sankalp Jain

前提条件

要件

次の項目に関する知識があることが推奨されます。

- Cisco Call Manager(CUCM)
- RTMT

使用するコンポーネント

このドキュメントの情報は、RTMTバージョン11.5に基づくものです。

このドキュメントの情報は、特定のラボ環境のデバイスとアプリケーションから作成されたもの です。このドキュメントで使用するすべてのデバイスとアプリケーションは、クリア(デフォル ト)設定から開始されています。ネットワークが稼働中の場合は、どのようなアクションが及ぼ す潜在的な影響を確実に理解しておいてください。

背景説明

RTMTの[Alert central]セクションでは、[System]、[Voice/Video]、[Custom]などの異なるタブにア ラートが整理されています。[System]および[Voice/Video]の下。事前に設定されたアラートが見 つかりました。アラートは削除できませんが、無効または変更することはできます。デフォルト ではカスタムタブは空で、管理者はRTMTのパフォーマンスセクションで利用可能なカウンタに

設定

1. RTMTで、図に示すように、[System] > [Performance] > [Open Performance Monitoring]に移動 します。



2.図に示すように、アラートを設定する必要があるノードを選択します。



3.アラートを設定する必要がある特定のデバイス、エンドポイント、プロセス、または機能を選 択し、展開します。

特定のカウンタを右クリックし、カウンタに応じてCounter MonitoringまたはCounter Instanceを 選択します。



4.オブジェクトインスタンスのリストからインスタンスを選択します。





5.右側のパネルに特定のインスタンス/カウンタが表示されます。

インスタンスを右クリックし、 [Alert/Properties]を設定します。

File System Voice/Video AnalysisManager IM and Presence Edit Window Application Help						
Real Time Monitoring Tool For Claco Unified Communications Solutions						
System	Performance				X	
System Summary System Summary Server CPU and Memory Process Critical Services Performance Performance Log Viewer Tools Alert Central SysLog Viewer VLT AuditLog Viewer	Claco Locations LBM Claco Locations RSVP Claco Media Streaming App Claco Messaging Interface Claco MGCP BRI Device Claco MGCP SRD Device Claco MGCP FXS Device Claco MGCP TCAS Device Claco MGCP TCAS Device Claco MGCP TCAS Device Claco MOH Device Claco MOH Device Claco MOH Device Claco Phones Claco Phones Claco Phones Claco Streaming App Claco TETP Claco TETP Claco Terper App Claco Terper App Claco Terper App Claco Terpereaming App Claco App Claco Streaming App Claco Streami		10.106.97.135.Memory 60.0 65.0 15.22.90 • VM Used	10.106.97.135,Claco SIP Stack	10.106.97.135.Cisco SIP.JoTest 1 Set Alert/Properties 0 Tentiove Adet Zoom Chart View All Data Remove Monitoring Properties Start Counter(s) Logging	
AnalysisManager	Cisco Tomcat JVM					
, some ger	Cisco Transcode Device		Perfmon Counters			

5. 「アラートを有効にする」チェックボックスを選択し、重大度を指定して「次へ」をクリック します。

<u>File System Voice/Video An</u>	alysisManager IM and Presence <u>E</u> dit <u>W</u> in	dow Appl <u>i</u> cation He <u>l</u> p			
Real Time Monitoring To	OO For Cisco Unified Communications Solutions				
System	Performance				X
System Summary System Summary Server CPU and Memory Process Disk Usage Critical Services Performance Performance Performance Log Viewer Tools Alert Central Job Status SysLog Viewer VLT AuditLog Viewer VLT Voice/Video	Cisco Locations LBM Cisco Locations RSVP Cisco Media Straming App Cisco Media Straming App Cisco MGCP BRI Device Cisco MGCP FXD Device Cisco MGCP FXD Device Cisco MGCP FXD Device Cisco MGCP TAS Device Cisco SIP Contents Cisco SIP Contents Cisco SIP Contents Cisco SIP Contents Cisco SIP Line Normalization Cisco SIP Line Normalization Cisco SIP Line Normalization Cisco SIP Line Normalization Cisco SIP Station Cisco SIP Station Cisco Trepersence MCU Conference Cisco Tartepresence MCU Conference Cisco Tartepresen	Alert Properties: Genera Name: \\10.106.97.135\Cisco SiP(Jo_Test)\CallsInf Ir Enable Alert Description: Recommended Action: Generation Generati	to 10.106.97.135.Memory 96.0 Progress erity: Warning 15.22.00 15.20.00 15.	10.106.97.135.Claco SIP Stack	10.106.97.135,Claco SIP_Jo_Test
AnalysisManager	Cisco Tomcat Web Application Cisco Transcode Device		Perfmon Counters		

6:頻度とスケジュールを指定し、[次へ]をクリ**ックします**。



7:電子メールアラートを有効にし(必要に応じて)、電子メールアドレスを指定してアラートを 受信します。

完了したら、[Save]をクリックします。

<u>File System Voice/Video An</u>	alysisManager IM and Presence <u>E</u> dit <u>W</u> indo	w Appl <u>i</u> cation He <u>l</u> p				
Real Time Monitoring To	OO For Cisco Unified Communications Solutions					
System	Performance					X
System Summary Server Process Disk Usage Critical Services Performance Performance Log Viewer Tools Alert Central Trace & Log Central Dob Status SysLog Viewer VLT AuditLog Viewer	Cisco Locations LBM Cisco Locations RSVP Cisco Media Streaming App Cisco MacG Pressing App Cisco MGCP BRI Device Cisco MGCP FXD Device Cisco MGCP FXD Device Cisco MGCP PRI Device Cisco MGCP PRI Device Cisco MGCP PRI Device Cisco MGCP PRI Device Cisco MGCP TICAS Device Cisco MGCP TICAS Device Cisco MGCP TICAS Device Cisco MGCP PRI Device Cisco MGCP TICAS Device Cisco MGCP TICAS Device Cisco MGCP Art Device Cisco MGCP TICAS Device Cisco ONTP Device Cisco ONTP Device Cisco ONTP Device Cisco OSIG Features Cisco SIT Device Cisco SIT Device Cisco SIP Matter Device Cisco Co SIP Cisco Contempleted CallaCampleted Cisco SIP Normalization Cisco SIP Normalization Cisco SIP Station Cisco SIP Station Cisco TIFTP	Alert Properties: Email	Configure	0 16:106:07:135.Memory 18:23:00 18:23:00	10.106.97.135.Cisco SIP Stack 1.2 1.1 1.1 1.2 1.2 1.2 1.2 1.2 1.2 1.2	10.106.97.135,Cisco SIP,Jo,_Test
Voice/Video	Cisco Tomcat JVM					
AnalysisManager	Cisco Tomcat Web Application Cisco Transcode Device		- Pe	erfmon Counters		
IM and Presence	ľ					

確認

ここでは、設定が正常に機能しているかどうかを確認します。

カスタムが設定されると、RTMTの[Alert Central]の[Custom]に表示されます。



トラブルシュート

現在、この設定に関する特定のトラブルシューティング情報はありません。