

# Teste de loopback Ethernet ASR9000

## Contents

[Usando Loopbacks para Testar Interfaces Ethernet](#)

[Loopback interno](#)

[Configurar o loopback](#)

[clear counters](#)

[Faça ping no IP local](#)

[Verificar contadores de interface](#)

[Verifique os contadores do controlador](#)

[Loopback externo](#)

[Configurar o loopback](#)

[clear counters](#)

[Faça ping no IP local](#)

[Verificar contadores de interface](#)

[Verificar Contadores de Controlador](#)

[Referências](#)

## Usando Loopbacks para Testar Interfaces Ethernet

Quando necessário, os loopbacks podem ser usados para encontrar problemas com placas de linha, estrutura, Processadores de Rede (NPs - Network Processors), transceptores ou caminhos de trânsito óptico.

Há dois tipos principais de loopbacks: interno e externo.

*Os loops internos* podem ser feitos remotamente, mas não fornecem tanta informação.

*Os loops externos* devem ser executados no local, mas fornecem a maior quantidade de informações.

Os exemplos abaixo usam esta interface:

```
RP/0/RSP0/CPU0:ASR9001-F# show run int tenGigE 0/0/1/1
interface TenGigE0/0/1/1
  ipv4 address 10.100.101.1 255.255.255.0
!
```

### Loopback interno

Este é um teste básico que pode ser executado sem acesso a um local remoto. Ele pode encontrar problemas com a CPU, o caminho da estrutura, o NP e o transceptor, mas não pode encontrar problemas ópticos ou de trânsito.

### Configurar o loopback

## Isso afeta o tráfego

```
RP/0/RSP0/CPU0:ASR9001-F# configure
RP/0/RSP0/CPU0:ASR9001-F(config)# int tenGigE 0/0/1/1
RP/0/RSP0/CPU0:ASR9001-F(config-if)# loopback internal
RP/0/RSP0/CPU0:ASR9001-F(config-if)# commit
RP/0/RSP0/CPU0:ASR9001-F(config-if)# end
```

## clear counters

Isso limpa os contadores na interface e no controlador.

```
RP/0/RSP0/CPU0:ASR9001-F# clear counters tenGigE 0/0/1/1
Clear "show interface" counters on this interface [confirm]
```

## Faça ping no IP local

```
RP/0/RSP0/CPU0:ASR9001-F# ping 10.100.101.1 count 10000 size 1500 timeout 0
pings with timeout=0 may result in system instability and
control protocol flaps resulting in traffic impact.
DO you really want to continue[confirm with only 'y' or 'n'] [y/n] :y
Type escape sequence to abort.
Sending 10000, 1500-byte ICMP Echos to 10.100.101.1, timeout is 0 seconds:
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
```

[output omitted]

```
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
Success rate is 100 percent (10000/10000), round-trip min/avg/max = 1/1/5 ms
```

## Verificar contadores de interface

```
RP/0/RSP0/CPU0:ASR9001-F# show interfaces tenGigE 0/0/1/1
TenGigE0/0/1/1 is up, line protocol is up
  Interface state transitions: 3
  Hardware is TenGigE, address is 70e4.2217.ba65 (bia 70e4.2217.ba65)
  Layer 1 Transport Mode is LAN
  Internet address is 10.100.101.1/24
  MTU 1514 bytes, BW 10000000 Kbit (Max: 10000000 Kbit)
    reliability 255/255, txload 0/255, rxload 0/255
  Encapsulation ARPA,
  Full-duplex, 10000Mb/s, link type is force-up
  output flow control is off, input flow control is off
  loopback set (External),
  ARP type ARPA, ARP timeout 04:00:00
  Last input 00:00:00, output 00:00:00
  Last clearing of "show interface" counters 00:02:40
  5 minute input rate 685000 bits/sec, 126 packets/sec
  5 minute output rate 685000 bits/sec, 126 packets/sec
    10003 packets input, 15140657 bytes, 0 total input drops 0 drops for unrecognized upper-
level protocol Received 0 broadcast packets, 3 multicast packets 0 runts, 0 giants, 0 throttles,
0 parity 0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored, 0 abort 10003 packets output,
15140657 bytes, 0 total output drops Output 0 broadcast packets, 3 multicast packets 0 output
```

errors, 0 underruns, 0 applique, 0 resets 0 output buffer failures, 0 output buffers swapped out  
0 carrier transitions

## Verifique os contadores do controlador

```
RP/0/RSP0/CPU0:ASR9001-F# show controllers tenGigE 0/0/1/1 stats
```

Statistics for interface TenGigE0/0/1/1 (cached values):

Ingress:

```
Input total bytes          = 15140657
Input good bytes           = 15140657
```

```
Input total packets = 10003 Input 802.1Q frames = 0 Input pause frames = 0 Input pkts 64
bytes = 0 Input pkts 65-127 bytes = 0 Input pkts 128-255 bytes = 3 Input pkts 256-511 bytes = 0
Input pkts 512-1023 bytes = 0 Input pkts 1024-1518 bytes = 10000 Input pkts 1519-Max bytes = 0
Input good pkts = 10003 Input unicast pkts = 10000 Input multicast pkts = 3 Input broadcast pkts
= 0 Input drop overrun = 0 Input drop abort = 0 Input drop invalid VLAN = 0 Input drop invalid
DMAC = 0 Input drop invalid encap = 0 Input drop other = 0 Input error giant = 0 Input error
runt = 0 Input error jabbers = 0 Input error fragments = 0 Input error CRC = 0 Input error
collisions = 0 Input error symbol = 0 Input error other = 0 Input MIB giant = 0 Input MIB jabber
= 0 Input MIB CRC = 0 Egress: Output total bytes = 15140657 Output good bytes = 15140657
Output total packets = 10003 Output 802.1Q frames = 0 Output pause frames = 0 Output pkts 64 bytes = 0
Output pkts 65-127 bytes = 0 Output pkts 128-255 bytes = 3 Output pkts 256-511 bytes = 0 Output
pkts 512-1023 bytes = 0 Output pkts 1024-1518 bytes = 10000 Output pkts 1519-Max bytes = 0
Output good pkts = 10003 Output unicast pkts = 10000 Output multicast pkts = 3 Output broadcast
pkts = 0 Output drop underrun = 0 Output drop abort = 0 Output drop other = 0 Output error other
= 0
```

## Loopback externo

Este teste verifica a CPU (Central Processing Unit) da placa de linha, o caminho da estrutura, o NP, o transceptor e a óptica.

Este teste exige um comprimento de cabo de fibra para fazer o loop físico dos sinais de transmissão (Tx) na porta de recepção (Rx).

## Configurar o loopback

### Isso afeta o tráfego

```
RP/0/RSP0/CPU0:ASR9001-F# configure
RP/0/RSP0/CPU0:ASR9001-F(config)# interface tenGigE 0/0/1/1
RP/0/RSP0/CPU0:ASR9001-F(config-if)# loopback external
RP/0/RSP0/CPU0:ASR9001-F(config-if)# commit
RP/0/RSP0/CPU0:ASR9001-F(config-if)# end
```

## clear counters

Isso limpa os contadores na interface e no controlador.

```
RP/0/RSP0/CPU0:ASR9001-F# clear counters
Clear "show interface" counters on all interfaces [confirm]
```

## Faça ping no IP local

```
RP/0/RSP0/CPU0:ASR9001-F# ping 10.100.101.1 count 10000 size 1500 timeout 0
pings with timeout=0 may result in system instability and
control protocol flaps resulting in traffic impact.
DO you really want to continue[confirm with only 'y' or 'n'] [y/n] :y
Type escape sequence to abort.
Sending 10000, 1500-byte ICMP Echos to 10.100.101.1, timeout is 0 seconds:
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
```

[output omitted]

```
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
Success rate is 100 percent (10000/10000), round-trip min/avg/max = 1/1/5 ms
```

## Verificar contadores de interface

```
RP/0/RSP0/CPU0:ASR9001-F# show interfaces tenGigE 0/0/1/1
TenGigE0/0/1/1 is up, line protocol is up
  Interface state transitions: 7
  Hardware is TenGigE, address is 70e4.2217.ba65 (bia 70e4.2217.ba65)
  Layer 1 Transport Mode is LAN
  Internet address is 10.100.101.1/24
  MTU 1514 bytes, BW 10000000 Kbit (Max: 10000000 Kbit)
    reliability 255/255, txload 0/255, rxload 0/255
  Encapsulation ARPA,
  Full-duplex, 10000Mb/s, link type is force-up
  output flow control is off, input flow control is off
  loopback set (Internal),
  ARP type ARPA, ARP timeout 04:00:00
  Last input 00:00:00, output 00:00:00
  Last clearing of "show interface" counters 00:00:32
  5 minute input rate 504000 bits/sec, 52 packets/sec
  5 minute output rate 504000 bits/sec, 52 packets/sec
    10001 packets input, 15140219 bytes, 0 total input drops 0 drops for unrecognized upper-
level protocol Received 0 broadcast packets, 1 multicast packets 0 runts, 0 giants, 0 throttles,
0 parity 0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored, 0 abort 10001 packets output,
15140219 bytes, 0 total output drops Output 0 broadcast packets, 1 multicast packets 0 output
errors, 0 underruns, 0 applique, 0 resets 0 output buffer failures, 0 output buffers swapped out
0 carrier transitions
```

## Verificar Contadores de Controlador

```
RP/0/RSP0/CPU0:ASR9001-F# show controllers tenGigE 0/0/1/1 stats
Statistics for interface TenGigE0/0/1/1 (cached values):
```

Ingress:

```
  Input total bytes          = 15140219
  Input good bytes           = 15140219
```

```
  Input total packets = 10001 Input 802.1Q frames = 0 Input pause frames = 0 Input pkts 64
bytes = 0 Input pkts 65-127 bytes = 0 Input pkts 128-255 bytes = 1 Input pkts 256-511 bytes = 0
Input pkts 512-1023 bytes = 0 Input pkts 1024-1518 bytes = 10000 Input pkts 1519-Max bytes = 0
Input good pkts = 10001 Input unicast pkts = 10000 Input multicast pkts = 1 Input broadcast pkts
= 0 Input drop overrun = 0 Input drop abort = 0 Input drop invalid VLAN = 0 Input drop invalid
DMAC = 0 Input drop invalid encap = 0 Input drop other = 0 Input error giant = 0 Input error
runt = 0 Input error jabbers = 0 Input error fragments = 0 Input error CRC = 0 Input error
collisions = 0 Input error symbol = 0 Input error other = 0 Input MIB giant = 0 Input MIB jabber
= 0 Input MIB CRC = 0 Egress: Output total bytes = 15140219 Output good bytes = 15140219 Output
total packets = 10001 Output 802.1Q frames = 0 Output pause frames = 0 Output pkts 64 bytes = 0
```

Output pkts 65-127 bytes = 0 Output pkts 128-255 bytes = 1 Output pkts 256-511 bytes = 0 Output pkts 512-1023 bytes = 0 Output pkts 1024-1518 bytes = 10000 Output pkts 1519-Max bytes = 0 Output good pkts = 10001 Output unicast pkts = 10000 Output multicast pkts = 1 Output broadcast pkts = 0 Output drop underrun = 0 Output drop abort = 0 Output drop other = 0 Output error other = 0

## Referências

[Referência de Comandos de Componentes de Hardware e Interface do Roteador de Serviços de Agregação Cisco ASR 9000 Series, Release 4.3.x Chapter: Ethernet Interface Commands on the Cisco ASR 9000 Series Router](#)

## Sobre esta tradução

A Cisco traduziu este documento com a ajuda de tecnologias de tradução automática e humana para oferecer conteúdo de suporte aos seus usuários no seu próprio idioma, independentemente da localização.

Observe que mesmo a melhor tradução automática não será tão precisa quanto as realizadas por um tradutor profissional.

A Cisco Systems, Inc. não se responsabiliza pela precisão destas traduções e recomenda que o documento original em inglês ([link fornecido](#)) seja sempre consultado.