

# Recover the 2900 Integrated Services Router Password

## Contents

---

### [Introduction](#)

### [Prerequisites](#)

[Requirements](#)

[Components Used](#)

[Related Products](#)

[Conventions](#)

### [Background Information](#)

### [Step-by-Step Procedure](#)

### [Example of Password Recovery Procedure](#)

### [Related Information](#)

---

## Introduction

This document describes how to recover the **enable password** and the **enable secret** passwords for the 2900 Cisco Router.

## Prerequisites

### Requirements

There are no specific requirements for this document.

### Components Used

The information in this document is based on these hardware versions:

- Cisco 2900 Series Integrated Services Router (ISR)

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. If your network is live, ensure that you understand the potential impact of any command.

### Related Products

Refer to [Password Recovery Procedures](#) for information on how to recover passwords for related products.

### Conventions

Refer to [Cisco Technical Tips Conventions](#) for more information on document conventions.


# Background Information

This document describes how to recover the **enable password** and the **enable secret** passwords. These passwords protect access to privileged EXEC and configuration modes. The **enable password** password can be recovered, but the **enable secret** password is encrypted and must be replaced with a new password. Use the procedure described in this document in order to replace the **enable secret** password.

## Step-by-Step Procedure

To recover your password:

1. Either switch off or shut down the router.
2. Remove the compact flash that is on the rear of the router. This image shows the rear of the 2951 router:

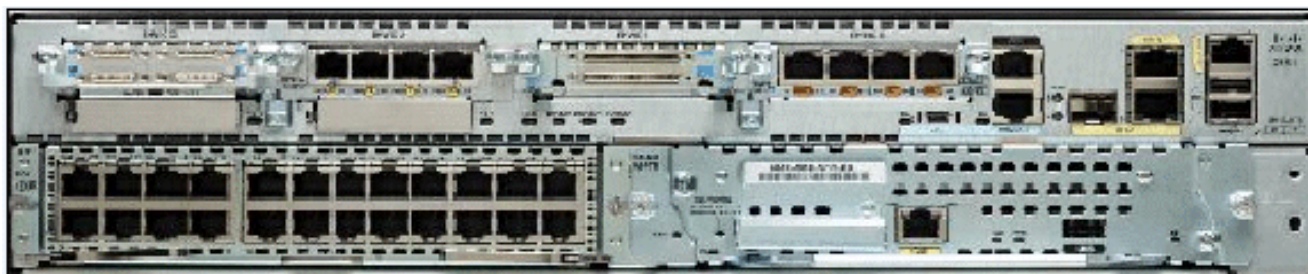

*Back of the 2951 Router*

For more information, refer to [Overview of the Routers](#).

3. Switch on the router.
4. Once the router is on Rommon mode, reinsert the compact flash.
5. Type **confreg 0x2142** at the rommon 1> prompt in order to boot from Flash.

This step bypasses the startup configuration where the passwords are stored.

6. Type **reset** at the rommon 2> prompt.

The router reboots, but ignores the saved configuration.

7. Type **no** after each setup question, or press **Ctrl-C** in order to skip the initial setup procedure.
8. Type **enable** at the Router > prompt.

You are in enable mode and you see the Router# prompt.

9. Type **configure memory** or **copy startup-config running-config** in order to copy the nonvolatile RAM (NVRAM) into memory.

---

**Warning:** Do **not** enter **copy running-config startup-config** or **write**. These commands erase your startup configuration.

---

10. Issue the **show running-config** command.

The **show running-config** command shows the configuration of the router. In this configuration, the **shutdown** command appears under all interfaces, which indicates all interfaces are currently shut down. In addition, the passwords (enable password, enable secret, vty, and console passwords) are in either an encrypted or unencrypted format. You can reuse unencrypted passwords. You must change encrypted passwords to a new password.

11. Type **configure terminal** .

The `hostname(config)#` prompt appears.

12. Type **enable secret <password>** in order to change the **enable secret** password. For example:

```
<#root>
hostname(config)#
enable secret cisco
```

13. Issue the **no shutdown** command on every interface that you use.

If you issue a **show ip interface brief** command, every interface that you want to use display *up up* .

14. Type **config-register <configuration\_register\_setting>** . Where **<configuration\_register\_setting>** is either the value you recorded in step 2 or **0x2102** . For example:

```
<#root>
hostname(config)#
config-register 0x2102
```

15. Press **Ctrl-z** or **end** in order to leave the configuration mode.

The `hostname#` prompt appears.

16. Type `write memory` OR `copy running-config startup-config` in order to commit the changes.

## Example of Password Recovery Procedure

This section provides an example of the password recovery procedure. This example was created with a Cisco 2900 Series ISR. Even if you do not use a Cisco 2900 Series ISR, this output provides an example of what you must experience on your product.

```
<#root>
Router>
enable
Password:
```

Password:  
Password:  
% Bad secrets

Router>  
show version

Cisco IOS Software, C2900 Software (C2900-UNIVERSALK9-M), Version 15.0(1)M1,  
RELEASE SOFTWARE (fc1)  
Technical Support: <http://www.cisco.com/techsupport>  
Copyright (c) 1986-2009 by Cisco Systems, Inc.  
Compiled Wed 02-Dec-09 15:23 by prod\_re1\_team

ROM: System Bootstrap, Version 15.0(1r)M1, RELEASE SOFTWARE (fc1)

c2921-CCP-1-xfr uptime is 2 weeks, 22 hours, 15 minutes  
System returned to ROM by reload at 06:06:52 PCTime Mon Apr 2 1900  
System restarted at 06:08:03 PCTime Mon Apr 2 1900  
System image file is "flash:c2900-universalk9-mz.SPA.150-1.M1.bin"  
Last reload reason: Reload Command

This product contains cryptographic features and is subject to United States and local country laws governing import, export, transfer and use. Delivery of Cisco cryptographic products does not imply third-party authority to import, export, distribute or use encryption. Importers, exporters, distributors and users are responsible for compliance with U.S. and local country laws. By using this product you agree to comply with applicable laws and regulations. If you are unable to comply with U.S. and local laws, return this product immediately.

A summary of U.S. laws governing Cisco cryptographic products may be found at:  
<http://www.cisco.com/wwl/export/crypto/tool/stqrg.html>

If you require further assistance please contact us by sending email to [export@cisco.com](mailto:export@cisco.com).

Cisco CISC02921/K9 (revision 1.0) with 475136K/49152K bytes of memory.  
Processor board ID FHH1230P04Y  
1 DSL controller  
3 Gigabit Ethernet interfaces  
9 terminal lines  
1 Virtual Private Network (VPN) Module  
1 Cable Modem interface  
1 cisco Integrated Service Engine-2(s)  
Cisco Foundation 2.2.1 in slot 1  
DRAM configuration is 64 bits wide with parity enabled.  
255K bytes of non-volatile configuration memory.  
248472K bytes of ATA System CompactFlash 0 (Read/Write)  
62720K bytes of ATA CompactFlash 1 (Read/Write)

Technology Package License Information for Module:'c2900'

Technology	Technology-package Current	Technology-package Type	Technology-package Next reboot
ipbase	ipbasek9	Permanent	ipbasek9
security	securityk9	Permanent	securityk9
uc	uck9	Permanent	uck9
data	datak9	Permanent	datak9

Configuration register is 0x2102

Router>

!--- Execute Steps 1 through 4 from Step-by-Step Procedure.

!

rommon 1 >

confreg 0x2142

You must reset or power cycle for new config to take effect

rommon 2 >

reset

System Bootstrap, Version 15.0(1r)M1, RELEASE SOFTWARE (fc1)  
Copyright (c) 2009 by Cisco Systems, Inc.  
TAC:Home:SW:IOS:Specials for info  
C2900 platform with 524288 Kbytes of main memory

program load complete, entry point: 0x80008000, size: 0x6fdb4c

Self decompressing the image : #####  
#####  
#####  
#####  
##### [OK]

#### Restricted Rights Legend

Use, duplication, or disclosure by the Government is subject to restrictions as set forth in subparagraph (c) of the Commercial Computer Software - Restricted Rights clause at FAR sec. 52.227-19 and subparagraph (c) (1) (ii) of the Rights in Technical Data and Computer Software clause at DFARS sec. 252.227-7013.

Cisco Systems, Inc.  
170 West Tasman Drive  
San Jose, California 95134-1706

Cisco IOS Software, C2900 Software (C2900-UNIVERSALK9-M), Version 15.0(1)M1,  
RELEASE SOFTWARE (fc1)  
Technical Support: <http://www.cisco.com/techsupport>  
Copyright (c) 1986-2009 by Cisco Systems, Inc.  
Compiled Wed 02-Dec-09 15:23 by prod\_rel\_team

Cisco CISC02921/K9 (revision 1.0) with 475136K/49152K bytes of memory.  
Processor board ID FHH1230P04Y

```
1 DSL controller
3 Gigabit Ethernet interfaces
9 terminal lines
1 Virtual Private Network (VPN) Module
1 Cable Modem interface
1 cisco Integrated Service Engine-2(s)
  Cisco Foundation 2.2.1 in slot 1
DRAM configuration is 64 bits wide with parity enabled.
255K bytes of non-volatile configuration memory.
248472K bytes of ATA System CompactFlash 0 (Read/Write)
62720K bytes of ATA CompactFlash 1 (Read/Write)
```

--- System Configuration Dialog ---

Would you like to enter the initial configuration dialog? [yes/no]:

n

Press RETURN to get started!

```
00:00:19: %LINK-3-UPDOWN: Interface BRI0/0, changed state to up
00:00:19: %LINK-3-UPDOWN: Interface Ethernet0/0, changed state to up
00:00:19: %LINK-3-UPDOWN: Interface Ethernet0/1, changed state to up
00:00:19: %LINK-3-UPDOWN: Interface Serial0/0, changed state to down
00:00:19: %LINK-3-UPDOWN: Interface Serial0/1, changed state to down
00:00:20: %LINEPROTO-5-UPDOWN: Line protocol on Interface BRI0/0,
changed state to down
00:00:20: %LINEPROTO-5-UPDOWN: Line protocol on Interface Ethernet0/0,
changed state to up
Router>
00:00:20: %LINEPROTO-5-UPDOWN: Line protocol on Interface Ethernet0/1,
changed state to up
00:00:20: %LINEPROTO-5-UPDOWN: Line protocol on Interface Serial0/0,
changed state to down
00:00:20: %LINEPROTO-5-UPDOWN: Line protocol on Interface Serial0/1,
changed state to down
00:00:50: %SYS-5-RESTART: System restarted --
Cisco IOS Software, C2900 Software (C2900-UNIVERSALK9-M), Version 15.0(1)M1,
RELEASE SOFTWARE (fc1)
Technical Support: http://www.cisco.com/techsupport
Copyright (c) 1986-2009 by Cisco Systems, Inc.
Compiled Wed 02-Dec-09 15:23 by prod_re1_team
00:00:50: %LINK-5-CHANGED: Interface BRI0/0,
changed state to administratively down
00:00:52: %LINK-5-CHANGED: Interface Ethernet0/0,
changed state to administratively down
00:00:52: %LINK-5-CHANGED: Interface Serial0/0,
changed state to administratively down
00:00:52: %LINK-5-CHANGED: Interface Ethernet0/1,
changed state to administratively down
00:00:52: %LINK-5-CHANGED: Interface Serial0/1,
changed state to administratively down
00:00:53: %LINEPROTO-5-UPDOWN: Line protocol on Interface Ethernet0/0,
changed state to down
00:00:53: %LINEPROTO-5-UPDOWN: Line protocol on Interface Ethernet0/1,
changed state to down
Router>
Router>
enable
```

Router#

copy startup-config running-config

Destination filename [running-config]?

1324 bytes copied in 2.35 secs (662 bytes/sec)

Router#

00:01:24: %LINEPROTO-5-UPDOWN: Line protocol on Interface BRI0/0:1, changed state to down

00:01:24: %LINEPROTO-5-UPDOWN: Line protocol on Interface BRI0/0:2, changed state to down

Router#

configure terminal

Enter configuration commands, one per line. End with CNTL/Z.

Router(config)#

enable secret < password >

Router(config)#

^Z

00:01:54: %SYS-5-CONFIG\_I: Configured from console by console

Router#

show ip interface brief

Interface	IP-Address	OK?	Method	Status	Protocol
Ethernet0/0	10.200.40.37	YES	TFTP		
				administratively down	
				down	
Serial0/0	unassigned	YES	TFTP		
				administratively down	
				down	
BRI0/0	192.168.121.157	YES	unset		
				administratively down	
				down	
BRI0/0:1	unassigned	YES	unset		
				administratively down	
				down	
BRI0/0:2	unassigned	YES	unset		
				administratively down	
				down	
Ethernet0/1	unassigned	YES	TFTP		
				administratively down	
				down	
Serial0/1	unassigned	YES	TFTP		
				administratively down	
				down	
Loopback0	192.168.121.157	YES	TFTP	up	up

Router#

```
configure terminal
```

```
Enter configuration commands, one per line. End with CNTL/Z.
```

```
Router(config)#
```

```
interface Ethernet0/0
```

```
Router(config-if)#
```

```
no shutdown
```

```
Router(config-if)#
```

```
00:02:14: %LINK-3-UPDOWN: Interface Ethernet0/0, changed state to up
```

```
00:02:15: %LINEPROTO-5-UPDOWN: Line protocol on Interface Ethernet0/0,  
changed state to up
```

```
Router(config-if)#
```

```
interface BRI0/0
```

```
Router(config-if)#
```

```
no shutdown
```

```
Router(config-if)#
```

```
00:02:26: %LINK-3-UPDOWN: Interface BRI0/0:1, changed state to down
```

```
00:02:26: %LINK-3-UPDOWN: Interface BRI0/0:2, changed state to down
```

```
00:02:26: %LINK-3-UPDOWN: Interface BRI0/0, changed state to up
```

```
00:02:115964116991: %ISDN-6-LAYER2UP: Layer 2 for Interface BR0/0,  
TEI 68 changed to up
```

```
Router(config-if)#
```

```
^z
```

```
Router#
```

```
00:02:35: %SYS-5-CONFIG_I: Configured from console by console
```

```
Router#
```

```
copy running-config startup-config
```

```
Destination filename [startup-config]?
```

```
Building configuration...
```

```
[OK]
```

```
Router#
```

```
show version
```

```
Cisco IOS Software, C2900 Software (C2900-UNIVERSALK9-M), Version 15.0(1)M1,  
RELEASE SOFTWARE (fc1)
```

```
Technical Support: http://www.cisco.com/techsupport
```

```
Copyright (c) 1986-2009 by Cisco Systems, Inc.
```

```
Compiled Wed 02-Dec-09 15:23 by prod_rel_team
```

```
ROM: System Bootstrap, Version 15.0(1r)M1, RELEASE SOFTWARE (fc1)
```

```
c2921-CCP-1-xfr uptime is 2 weeks, 22 hours, 15 minutes
```

```
System returned to ROM by reload at 06:06:52 PCTime Mon Apr 2 1900
```

```
System restarted at 06:08:03 PCTime Mon Apr 2 1900
```

```
System image file is "flash:c2900-universalk9-mz.SPA.150-1.M1.bin"
```

```
Last reload reason: Reload Command
```

```
Cisco CISC02921/K9 (revision 1.0) with 475136K/49152K bytes of memory.
```

```
Processor board ID FHH1230P04Y
```

```
1 DSL controller
```

```
3 Gigabit Ethernet interfaces
```

```
9 terminal lines
```

```
1 Virtual Private Network (VPN) Module
```



```
1 Cable Modem interface
1 cisco Integrated Service Engine-2(s)
  Cisco Foundation 2.2.1 in slot 1
DRAM configuration is 64 bits wide with parity enabled.
255K bytes of non-volatile configuration memory.
248472K bytes of ATA System CompactFlash 0 (Read/Write)
62720K bytes of ATA CompactFlash 1 (Read/Write)
```

Configuration register is 0x2102

Router#

```
configure terminal
```

Enter configuration commands, one per line. End with CNTL/Z.

Router(config)#

```
config-register 0x2102
```

Router(config)#^Z

00:03:20: %SYS-5-CONFIG\_I: Configured from console by console

Router#

```
show version
```

```
Cisco IOS Software, C2900 Software (C2900-UNIVERSALK9-M), Version 15.0(1)M1,
  RELEASE SOFTWARE (fc1)
```

Technical Support: <http://www.cisco.com/techsupport>

Copyright (c) 1986-2009 by Cisco Systems, Inc.

Compiled Wed 02-Dec-09 15:23 by prod\_rel\_team

ROM: System Bootstrap, Version 15.0(1r)M1, RELEASE SOFTWARE (fc1)

```
c2921-CCP-1-xfr uptime is 2 weeks, 22 hours, 15 minutes
System returned to ROM by reload at 06:06:52 PCTime Mon Apr 2 1900
System restarted at 06:08:03 PCTime Mon Apr 2 1900
System image file is "flash:c2900-universalk9-mz.SPA.150-1.M1.bin"
Last reload reason: Reload Command
```

```
Cisco CISC02921/K9 (revision 1.0) with 475136K/49152K bytes of memory.
Processor board ID FHH1230P04Y
```

```
1 DSL controller
```

```
3 Gigabit Ethernet interfaces
```

```
9 terminal lines
```

```
1 Virtual Private Network (VPN) Module
```

```
1 Cable Modem interface
```

```
1 cisco Integrated Service Engine-2(s)
```

```
  Cisco Foundation 2.2.1 in slot 1
```

```
DRAM configuration is 64 bits wide with parity enabled.
```

```
255K bytes of non-volatile configuration memory.
```

```
248472K bytes of ATA System CompactFlash 0 (Read/Write)
```

```
62720K bytes of ATA CompactFlash 1 (Read/Write)
```

Configuration register is 0x2142 (is

```
0x2102
```

```
at next reload)
```

Router#

## Related Information

- [Password Recovery Procedures](#)
- [Cabling Guide for Console and AUX Ports](#)
- [Connecting a Terminal to the Console Port on Catalyst Switches](#)
- [Connect a Terminal to Catalyst 2948G-L3, 4908G-L3, and 4840G Series Switches](#)
- [Cisco Technical Support & Downloads](#)