

VPN) ةيرهاظلا ةصاخلا IPsec ةكبش نيوكت وأ RV132W هجوم ىلع عقوم ىلا عقوم نم RV134W

فدهلا

ىلا اذانتسا عقوم ىلا عقوم نم (VPN) ةيرهاظلا ةصاخلا تاكبشلا ذيفنت متي
ةعومجم يه IPsec ةسايس. VPN تاكبش تااطخمل اهنبيعت متي يتلا IPsec تاسايس
نامالا تالوكوتورب لثم، عقوملا ىلا عقوملا نم VPN صئاصخ ددحت يتلا تاملعمل نم
IPsec قفن يفتانايبال رورم ةكرح نيما تل اهمادختسا متيس يتلا نامالا تايمزراوخو.

عقوم ىلا عقوم نم IPsec لوكوتوربل VPN ةكبش RV132W و RV134W تاهجوملا معدت
، ةساسالا VPN تادادع نيوكت دعب. ةرابع ىلا ةرابع نم يداحا VPN قفن عاشنال
زاهجال نيوكت كنكمي، لاثملا لىبس ىلع. VPN معدي رخا هجومب ناماب لاصتالا كنكمي
يف عقوم ىلا عقوم نم VPN تاكبش قافنا طبري هجومب لاصتاللي عرف عقوم يفت
ةكرشلا ةكبش ىلا نم لوصو عرفلا عقومل حبصي يتح، ةكرشلا عقوم.

نم IPsec لاصتال يساسا دادع ةيلمع VPN لكشي نأ فيك تنأ يدبي نأ ةدام اذه فدهي
RV132W و RV134W ديدخت جاحسم ىلع عقوم ىلا عقوم.

قيبطتلل ةلباقلا ةزهجالا


- زارطلا RV132W
- زارطلا RV134W

جماربال رادصا

- 1.0.0.17 — RV132W
- 1.0.0.21 — RV134W

هجوم ىلع IPsec عقوم ىلا عقوم نم VPN ةكبش نيوكت

ىلا عقوم > VPN رتخاو بيولا ىلا ةدنتسملا ةدعاسملا ةادالا ىلا لوخدلا لچس 1. ةوطخلا
ي. يساسالا VPN دادع > IPsec VPN عقوم.

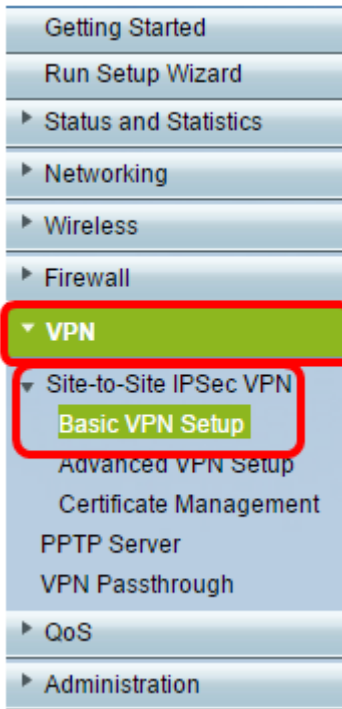

مسالايوتحي نأ نكمي VPN قفنل امسالخدا، ديدجال لاصتالامسالقحي في 2. ةوطخلال طاقف تالصالواو ماقراو فرحأ يلع.

Branch1. وه مسالا، لاثملا اذه في: ةظحالم

A screenshot of the 'Basic VPN Setup' configuration page. The page title is 'Basic VPN Setup'. Below the title, there is a section 'About Basic VPN Setup' with explanatory text. A 'View Default Settings' button is present. The main configuration area is titled 'Connection Name and Remote IP Type'. It contains several fields: 'New Connection Name' (set to 'Branch1'), 'Pre-Shared Key' (set to 'Cisco12345'), 'Protocol' (set to 'ESP'), and 'Endpoint Information' (set to 'IP Address'). Below this, there are fields for 'Remote WAN (Internet) IP Address' (10.11.12.13), 'Local WAN (Internet) IP Address' (192.168.100.121), and a section for 'Secure Connection Remote Accessibility' with fields for 'Remote LAN (Local Network) IP Address' (10.10.100.162), 'Remote LAN (Local Network) Subnet Mask' (255.0.0.0), 'Local LAN (Local Network) IP Address' (192.168.100.128), and 'Local LAN (Local Network) Subnet Mask' (255.255.255.0). At the bottom, there are 'Save', 'Cancel', and 'Back' buttons.

ةكرتشملا رورملا ةملك وأ حاتفملا لخدا، اقبسمة كرتشم حاتفم لقحي في 3. ةوطخلال 49 و 8 نيبرورملا ةملك نوكت نأ بحجي. نيهجوملا نيبراهل دابت متيس يتلاو، اقبسمة افح.

Cisco1234\$ وه اقبس م كرتشمل محتاتفملا نوكي، لاثملا اذه في: ةظحالم

Basic VPN Setup

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

[View Default Settings](#)

Connection Name and Remote IP Type

New Connection Name:

Pre-Shared Key:

Protocol:

Endpoint Information

Remote Endpoint:

Remote WAN (Internet) IP Address: (Hint: 1.2.3.4 or abc.com)

Local WAN (Internet) IP Address:

Secure Connection Remote Accessibility

Remote LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Remote LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

Local LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Local LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

يه تارايلخا. لوكوتوربال مسا رتخا، ام لوكوتورب ةلدسنملا ةمئاقلا في 4. ةوطخلا

- ESP — ةيرسو ةهازنو ةيلصأ ةيامح (ESP) ني مضتلا نامألا ةلومح لوكوتورب رفوي — مزلل
- AH — نمضيو تانايبلا تاططخم لصأ يلح (AH) ةقداصملا سار لوكوتورب قداصي — تانايبلا ةمالس

ESP رايته م تي، لاثملا اذه في: ةظحالم

Basic VPN Setup

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

[View Default Settings](#)

Connection Name and Remote IP Type

New Connection Name:

Pre-Shared Key:

Protocol:

Endpoint Information

Remote Endpoint:

Remote WAN (Internet) IP Address: (Hint: 1.2.3.4 or abc.com)

Local WAN (Internet) IP Address:

Secure Connection Remote Accessibility

Remote LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Remote LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

Local LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Local LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

يہ تاريخي خال. ٲل دس نم ال ٲم ئاق ال نم "ٲدي ع ب ال ٲي اهل ال ٲطقن" ر تخ 5. ٲ و ط خ ال

- ناوع مادخت ساب زاخ ال ه ب لصت ي س ي ذل ا ه جوم ال دي دحت ب را ي خ ال اذ ه موق ي س — IP ناوع IP ه ب صا خ ال IP
- ه ب لصت ي س ي ذل ا ه جوم ال دي دحت ب (FQDN) لم الك ل اب له و م ل ل ا ج م ل م س ا موق ي س — FQDN ه ب صا خ ال ل ا ج م ل م س اب ك ب صا خ ال زاخ ال

IP ناوع را ي تخ ا م تي ، ل ا ث م ل ا ذ ه ي ف : ٲ ط خ ال م

Basic VPN Setup

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

[View Default Settings](#)

Connection Name and Remote IP Type

New Connection Name:

Pre-Shared Key:

Protocol:

Endpoint Information

Remote Endpoint:

Remote WAN (Internet) IP Address: (Hint: 1.2.3.4 or abc.com)

Local WAN (Internet) IP Address:

Secure Connection Remote Accessibility

Remote LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Remote LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

Local LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Local LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

ناونع (تنترنإن) WAN دي عب ل ل ي ف QDN و أ ناونع (تنترنإن) WAN دي عب ل ل تلخد 6. ة و ط خ ل ل ا ج ل .

10.11.12.13. وه (تنترنإن) ة دي عب ل ل WAN ة ك ب ش ل ل IP ناونع ، ل ا ث م ل ا ذه ي ف : ة ط ح ا ل م

Basic VPN Setup

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

[View Default Settings](#)

Connection Name and Remote IP Type

New Connection Name:

Pre-Shared Key:

Protocol:

Endpoint Information

Remote Endpoint:

Remote WAN (Internet) IP Address: Hint: 1.2.3.4 or abc.com)

Local WAN (Internet) IP Address:

Secure Connection Remote Accessibility

Remote LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Remote LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

Local LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Local LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

م تي. جي حص لاجم ناووع (تنترنت) wan ي لجم ل ي ف ناووع رصم ل نأ تقود 7. ةوطخل ا ايئ اقلت اذه عاشن ا

192.168.100.121. وه (تنترنت) ةي لجم ل WAN ةكبش ل IP ناووع، ل اثلما اذه ي ف: ةطالما

Basic VPN Setup

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

[View Default Settings](#)

Connection Name and Remote IP Type

New Connection Name:

Pre-Shared Key:

Protocol:

Endpoint Information

Remote Endpoint:

Remote WAN (Internet) IP Address: (Hint: 1.2.3.4 or abc.com)

Local WAN (Internet) IP Address:

Secure Connection Remote Accessibility

Remote LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Remote LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

Local LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Local LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

لقح يف ءءبعبلا ءءاهننلا ءطقنل (LAN) ءصاخلا ءكبشلل IP ناونع لءءا 8. ءوطءلا يف ءءلءءلا ءكبشلل IP ناونع وه اءه. ءءبعبلا (LAN) ءءلءءلا ءكبشلل IP ناونع ءءبعبلا ءقوولء.

وه (ءءلءءلا ءكبشلا) ءءبعبلا LAN ءكبشلل IP ناونع ،لءءل اءه يف :ءظءالم 10.10.100.162.

Basic VPN Setup

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

[View Default Settings](#)

Connection Name and Remote IP Type

New Connection Name:

Pre-Shared Key:

Protocol:

Endpoint Information

Remote Endpoint:

Remote WAN (Internet) IP Address: (Hint: 1.2.3.4 or abc.com)

Local WAN (Internet) IP Address:

Secure Connection Remote Accessibility

Remote LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Remote LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

Local LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Local LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

ةطقنل ةصاخلا ةكبشلل ةيعرفلا (LAN) ةيلحمل ةكبشلا عانق نم ققحت 9. ةوطخلا ةديعلا (LAN) ةيلحمل ةكبشلل ةيعرفلا ةكبشلا عانق ل قح يف ةديعلا ةياهنلا (ت نرت نإل). ائاقلت اذه عاشنإ متي.

ةكبشلا) ةديعلا LAN ةكبشل ةيعرفلا ةكبشلا عانق نوكي، لاثملا اذه يف: **ةظحالم** 255.0.0.0. وه (ةيلحمل)

Basic VPN Setup

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

[View Default Settings](#)

Connection Name and Remote IP Type

New Connection Name:

Pre-Shared Key:

Protocol:

Endpoint Information

Remote Endpoint:

Remote WAN (Internet) IP Address: (Hint: 1.2.3.4 or abc.com)

Local WAN (Internet) IP Address:

Secure Connection Remote Accessibility

Remote LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Remote LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

Local LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Local LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

ةكبشلا يف ةيحلحمالا ةكبشلا نم ناوع (LAN) ةصاخلا ةكبشلا تلخد 10 ةوطخلا زاهجلا ىلع ةيلخادلا ةكبشلا ل IP ناوع وه اذه . لاجم ناوع (ةيحلحم ةكبش) ةيحلحمالا

وه (ةيحلحمالا ةكبشلا) ةيحلحمالا LAN ةكبشلا ل IP ناوع ، لاثملا اذه يف : **ةظحالم** 192.168.100.128.

Basic VPN Setup

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

[View Default Settings](#)

Connection Name and Remote IP Type

New Connection Name:

Pre-Shared Key:

Protocol:

Endpoint Information

Remote Endpoint:

Remote WAN (Internet) IP Address: (Hint: 1.2.3.4 or abc.com)

Local WAN (Internet) IP Address:

Secure Connection Remote Accessibility

Remote LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Remote LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

Local LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Local LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

[Save](#)

[Cancel](#)

[Back](#)

لقح في ةي لحملة ةي اه نل ن م subnet mask (LAN) ة صا ل ة ك ب ش ل ا ت ق ق د 11. ة و ط خ ل ا ا ي ا ق ل ت ا ذ ه ا ش ن ا م ت ي . (ة ي لحملة ة ك ب ش ل ا) ة ي ع ر ف ل ا ة ك ب ش ل ا ع ا ن ق

ة ك ب ش ل ل (ة ي لحملة ة ك ب ش ل ا) ة ي ع ر ف ل ا ة ك ب ش ل ا ع ا ن ق ن و ك ي ، ل ا ث م ل ا ا ذ ه ي ف : ة ط ح ا ل م ة ك ب ش ل (LAN) و ه 255.255.255.0.

Basic VPN Setup

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

[View Default Settings](#)

Connection Name and Remote IP Type

New Connection Name:

Pre-Shared Key:

Protocol:

Endpoint Information

Remote Endpoint:

Remote WAN (Internet) IP Address: (Hint: 1.2.3.4 or abc.com)

Local WAN (Internet) IP Address:

Secure Connection Remote Accessibility

Remote LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Remote LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

Local LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Local LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

ىلع ةديعبلل LAN ةكبشو ةديعبلل WAN ةكبشل IP نيوانع نوكت نأ نكمي ال: **ةظحالم**
 LAN ةكبشل IP ناوع بيبستي، لاثملا ليبس ىلع. اهسفن ةيعرفلا ةكبشل
 ثودح ي ف 192.168.1.115 نم ةيلحملل LAN ةكبشل IP ناوعو 192.168.1.100 نم ةديعبلل
 ينامثلل ماظنل نوكتي نأ بجي. VPN ةكبش ربع تانايبلا رورم ةكرهيجوت دنع ضراعت
 ليبس ىلع. ةفلتخم ةيعرف تاكبش ىلع IP نيوانع نوكت ىتح افلتخم ثلاثل
 ةيلحملل LAN ةكبشل IP ناوعو 192.168.1.199 ةديعبلل LAN ةكبشل IP ناوع، لاثملا
 192.168.2.100 لوبقم.

ظفح ةقطقط 12. ةوطخلا

عقوم ىلإ عقوم نم IPsec نم VPN ةكبش نيوكت نم نآلا تيهمتانا دق نوكت نأ بجي
 RV132W وأ RV134W هجوملا ىلع حاجنب

ةمچرتل هذه لوج

ةللأل تاي نقتل نمة ومة مادختساب دن تسمل اذة Cisco تمةرت
ملاعلاء انء مء مء نمة دختسمل معد و تمة مء دقتل ةر شبل او
امك ةق قء نوك ت نل ةللأل ةمچرت لصف أن ةظحال مء ءرء. ةصاأل مء تءل ب
Cisco ةللخت. فرتمة مچرت مء دقء ةللأل ةل فارتحال ةمچرتل عم لاعل او
ىل إأمءءاد ءوچرلاب ةصوء و تامةرتل هذه ةقء نء اهءل وئس م Cisco
Systems (رفوتم طبارل) ةل صأل ةل ءل ءن إل دن تسمل