



# Cisco Nexus Dashboard Insights Flows, Release 6.4.1 - For Cisco ACI

# Table of Contents

New and Changed Information .....	2
Flows .....	3
Flows .....	3
Flows Guidelines and Limitations .....	3
Extending Flows to Cisco ACI Tier-3 Topologies in Nexus Dashboard Insights .....	4
View Flows .....	5
L4-L7 Traffic Path Visibility .....	6
Flow Telemetry Events .....	8
Multi-Site Traffic Path .....	10
Multi-Site Traffic Path Trace and Fault Correlation .....	10
Configure Multi-Site Traffic Path Trace and Fault Correlation .....	10
Copyright .....	12

First Published: 2024-02-16

**Americas Headquarters**

Cisco Systems, Inc.

170 West Tasman Drive

San Jose, CA 95134-1706

USA

<http://www.cisco.com>

Tel: 408 526-4000

800 553-NETS (6387)

Fax: 408 527-0883

# New and Changed Information

The following table provides an overview of the significant changes up to the current release. The table does not provide an exhaustive list of all changes or the new features up to this release.

*Table 1. New Features and Changed Behavior in the Cisco Nexus Dashboard Insights*

<b>Feature</b>	<b>Description</b>	<b>Release</b>	<b>Where Documented</b>
There were no major changes from the previous release.	-	6.4.1	-

This document is available from your Cisco Nexus Dashboard Insights GUI as well as online at [www.cisco.com](http://www.cisco.com). For the latest version of this document, visit [Cisco Nexus Dashboard Insights Documentation](#).

# Flows

## Flows

Flows provides deep insights at a flow level giving details such as average latency and packet drop indicator. It also raises anomalies when the latency of the flows increase or when packets get dropped because of congestion or forwarding errors.

Each flow has a packet counter representing the number of packets entering the ASIC for that flow over a period of time. This period of time is called aggregation interval. There are several points where flow statistics for a given flow can be aggregated. Aggregation can happen in the ASIC, switch software, and server software.

The Flows section of Nexus Dashboard Insights displays the telemetry information collected from various devices in the site that were added to the site.

For details on Flow Telemetry support for Cisco Nexus series switches and line cards, see the **Compatibility Information** section in the Nexus Dashboard Insights [Release Notes](#).

## Flows Guidelines and Limitations

- Nexus Dashboard Insights captures the maximum anomaly score for a particular flow, for the entire cycle of the user specified time range.
- For unknown IP addresses, the traffic from spine nodes will be dropped and flow records are not generated in Flow Telemetry.
- The packet count represents the number of packets entering the site for a particular flow that does not match the source and destination IP address.
- A maximum of 63 VRFs are supported on flow telemetry nodes.
- Flows is not supported for Endpoint Security Groups.
- Bridge domain subnet needs to be programmed for bridged flows to get reported from spine switch.
- For flows, if the time range you have selected is greater than 6 hours, the data may not get displayed. Select a time range that is less than or equal to 6 hours.
- When the scale limit for anomalies is reached, some of the unhealthy flows may not be displayed as anomalies in the Flow Record Details page. A system issue is raised when this condition happens. Navigate to **Admin > System Settings > System Issues** to view the system issue.
- Multicast is not supported for Flow Telemetry.
- When traffic flows through sub-interfaces, in the **Flow Record Details** page, sub-interface is displayed only in the ingress direction in the Flow Path area. In the egress direction the parent interface is displayed.

## Limitations for Flows on Cisco Nexus EX switches

For details on Flow Telemetry hardware support, see the Compatibility Information section in the [Nexus Dashboard Insights Release Notes](#).

- Output port information for outgoing traffic from N9K-C93180YC-EX, N9K-C93108TC-EX, N9K-C93180LC-EX, and N9K-X9732C-EX line cards will not be displayed.
- The burst information for N9K-C93180YC-EX, N9K-C93108TC-EX, N9K-C93180LC-EX, and N9K-X9732C-EX line cards will not be displayed.
- The EPG names will reflect after few minutes of flow capture and after enabling Flows. This information is fetched from the software and not from the EX ASIC.
- For L3Out external EPGs; EPG names, Buffer drop anomaly, Forwarding drop anomaly, and QoS policing drop anomaly are not supported.
- Cisco Nexus 9300-EX platform switches do not support VRF based filtering. They support only bridge domain or subnet filtering of flow telemetry rules. Nexus Dashboard Insights gets the flows from the subnet if the subnet is across multiple VRFs.
- Tier-1 leaf switches do not export flow telemetry data from remote leaf switches to sub-leaf switches.
- Interface-level flow telemetry is not supported.

### Limitations for Flows on Cisco Nexus FX switches.

- The spine switches do not export shared service flow records (VRFA to VRFB and vice-versa). Due to this limitation Nexus Dashboard Insights flow path summary will be incomplete.
- Nexus Dashboard Insights supports all IP sizes, but shows it different from actual IP size. For example, for 1000 bytes of IP packet size:
  - For IPv4 inter-leaf node traffic (with spine node), Nexus Dashboard Insights shows Ingress IP size of 1050 bytes and Egress IP size of 1108 bytes. For IPv4 intra-leaf traffic Nexus Dashboard Insights shows both Ingress and Egress IP size of 1050 bytes.
  - For IPv6 inter-leaf node traffic (with spine node), Nexus Dashboard Insights shows Ingress IP size of 1070 bytes and Egress IP size of 1128 bytes. For IPv4 intra-leaf traffic Nexus Dashboard Insights shows both Ingress and Egress IP size of 1070 bytes.
- Flow telemetry and flow telemetry events will not export **drop bit** if there is an egress ACL drop in the switch.
- Locally switched traffic in the same node, with shared services will not have information on the destination VRF or Tenant and EPG.
  - This is valid for both EPGs and ExtEPGs.
  - Shared services also encompasses the case of EPGs in the same VRF but different tenants.

## Extending Flows to Cisco ACI Tier-3 Topologies in Nexus Dashboard Insights

Flows implements 3-tier topology where a second tier of leaf nodes are connected to first tier of leaf nodes. In the 3-tier topology when flow packet traverses from one host to the other using multiple tiers, before they reach the destination host, the packet becomes an iVLAN packet when it traverses through a tier-1 leaf node.

## Guidelines and Limitations

- The Cisco APIC Release 4.2(4o) does not support a leaf node exporting flow telemetry in case of iVXLAN packet, resulting in an incomplete flow path and inadequate information to stitch together all the flows.

## View Flows

The Flows page displays telemetry information collected from various devices in an online site. The Flows records let the user visualize the flows per site. For a particular site, you can view flows by Anomaly Score, Packet Drop Indicator, and Average Latency.

The flows engine also runs machine-learning algorithms on the behavior of the flows to raise anomalies in the behavior, such as average latency and packet drop indicator. The graph represents the anomalies in the behavior over a period of time.

Flow telemetry and analytics gives in-depth visibility of the data plane. Flows collects the flow records streamed from the nodes and converts to understandable EPG-based flow records. Top nodes by flow anomalies displays the nodes in the network with the most anomalies.




To view flow details, you must first enable flows. See [Getting Started](#).

1. Navigate to **Manage > Sites**.
2. Select **Online Sites** from the drop-down list.
3. Click a site name to view the site details.
4. Navigate to **Connectivity > Flows**.
5. Select a time range.
6. In the Site Flows by area select an option from the drop-down list to view flows by Anomaly Score, Packet Drop Indicator, and Average Latency. The graph displays a time series plot for flows properties recorded in the entire site. The flows recorded for Top Sources and Top Destinations are also displayed.

**Anomaly Score**—The score is based on the number of detected anomalies logged in the database.

**Packet Drop Indicator**—The flow records are analyzed for drops. The primary method of detecting drops is based on the drop bit received from the switch (flow records).

**Latency**—The time taken by a packet to traverse from source to destination in the site. A prerequisite for site latency measurement is that all the nodes shall be synchronized with uniform time.

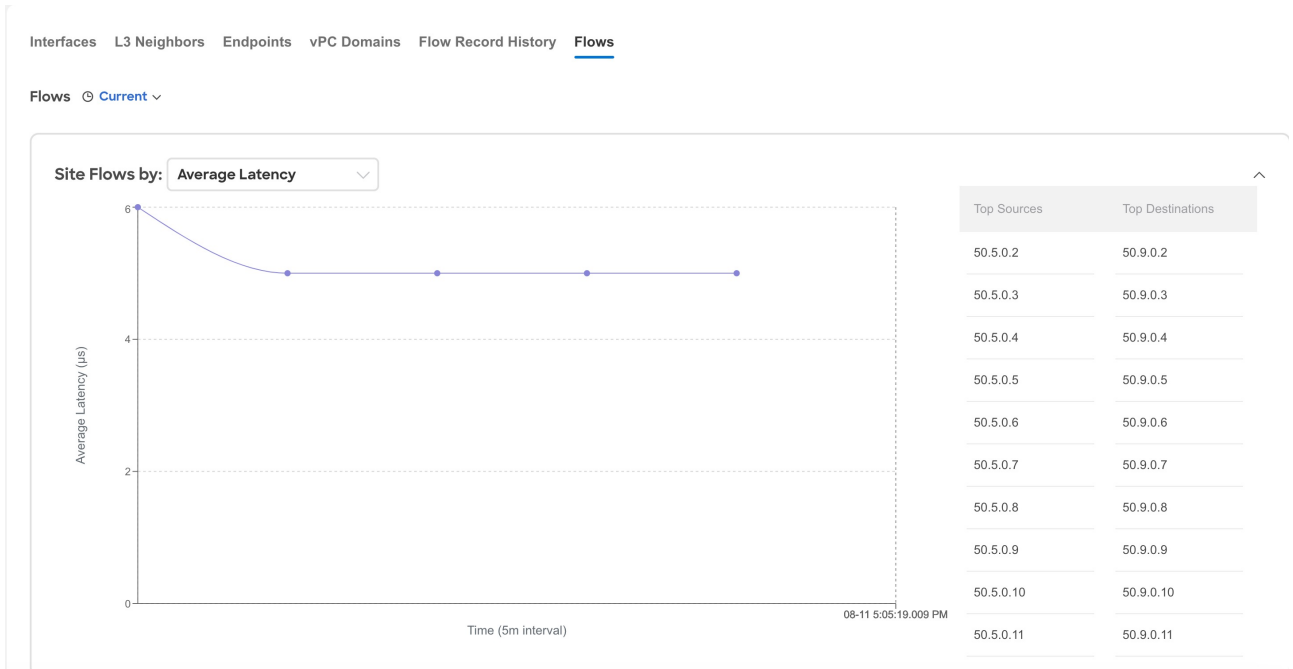

7. The Flows table displays information such as anomaly score, flow record time, nodes, flow type, protocol, latency, packet drop indicator.

Flows

Filter

Anomaly Score	Record Time	Nodes	Flow Type	Protocol	Latency	Packet Drop Indicator	Flow Move Indicator	
Major	Aug 11 2023 04:45:58.695 PM	ifav201-leaf8 DC-IFAV201	IPv4	TCP	0	1	0	
Major	Aug 11 2023 04:46:05.890 PM	ifav201-leaf8 DC-IFAV201	IPv4	TCP	0	1	0	
Major	Aug 11 2023 04:46:04.791 PM	ifav201-leaf8 DC-IFAV201	IPv4	TCP	0	1	0	
Major	Aug 11 2023 04:46:09.795 PM	ifav201-leaf8 DC-IFAV201	IPv4	TCP	0	1	0	
Major	Aug 11 2023 04:46:05.893 PM	ifav201-leaf8 DC-IFAV201	IPv4	TCP	0	1	0	
Major	Aug 11 2023 04:46:03.793 PM	ifav201-leaf8 DC-IFAV201	IPv4	TCP	0	1	0	
Major	Aug 11 2023 04:46:04.795 PM	ifav201-leaf8 DC-IFAV201	IPv4	TCP	0	1	0	
Major	Aug 11 2023 04:45:59.789 PM	ifav201-leaf8 DC-IFAV201	IPv4	TCP	0	1	0	
Major	Aug 11 2023 04:46:56.790 PM	ifav201-leaf8 DC-IFAV201	IPv4	TCP	0	1	0	
Major	Aug 11 2023 04:46:56.608 PM	ifav201-leaf8 DC-IFAV201	IPv4	TCP	0	1	0	

8. Use the search bar to filter the flows. The Flows table displays the filtered flows. Click the column heading to sort the flows in the table.

9. Click **Record Time** to view the flow record details. The details include record time, flow type, aggregated flow information, ingress and egress information, flow path, anomalies, and trends for average latency, traffic, packet drop indicator, bursts.

## L4-L7 Traffic Path Visibility

Starting with Nexus Dashboard Insights release 6.1.1, you now have expanded visibility in the Flow Path to L4-L7 external devices such as firewalls. Nexus Dashboard Insights tracks the end-to-end flow across the service chain in real-time and helps locate data plane issues across the device silos.



In the current release, a non-NAT environment across all third-party vendors is supported.

For L4-L7 traffic path visibility, your flow telemetry must be enabled and the appropriate rules must be configured. See [Getting Started](#). Based on your rules, if the flow is passing through Policy Based Redirects (for example, a firewall), it will display that information in the flow path.

To view traffic path visibility in the GUI,

1. Navigate to **Manage > Sites**.
2. Select **Online Sites** from the drop-down list.
3. Click a site name to view the site details.
4. Navigate to **Connectivity > Flows**.
5. Select a time range.
6. In the flows table, click Record Time to view the flow record details.

In the **Path** area, a graphical flow path will display the end-to-end information, from source to destination, and it will also identify the firewall in the path if a firewall is present. The graph also captures the end-to-end flow path network latency that is occurring. In the graph, if there are any anomalies, a red dot is displayed next to the symbol for the leaf switch or the spine switch.

7. Click **Anomalies** in the **Flow Details** page to view further details related to the anomaly.



In the current release firewalls are not supported for anomalies.

## Guidelines and Limitations for L4-L7 Traffic Path Visibility

- This feature is currently recommended only if Policy Based Redirect can be configured using the Service Graph for ACI.
- In the current release, firewalls are not supported for anomalies.
- In the current release, the latency information that is being displayed is the network latency, and it does not capture the latency that is occurring in the firewall.
- In the current release, NAT is not supported.
- This feature is currently supported if you use the following switches:
  - Cisco Nexus 9300-FX Platform Switches
  - Cisco Nexus 9300-FX2 Platform Switches
  - Cisco Nexus 9300-GX Platform Switches.
- Policy Based Redirect destinations on L3Out are not supported because such configurations use an internal VRF because of which only a partial flow path would be available.
- In the ACI fabric, when the L4-L7 traffic is forwarding in Layer 2 (Bridged Mode), the flow analytics support is limited. Ingress and egress nodes detection will not be accurate, and path summary will not be available.
- Without a service graph for L4-L7, if the client > service node is VRF\_A and the service node > server is VRF\_B, the paths will be recorded as separate flows as there is no common or single contract to stitch the flows.
- Load Balancers are not supported.

# Flow Telemetry Events

Flow telemetry events are enabled implicitly when flow telemetry is enabled. The flow telemetry enables triggering events when a configured rule is met, where packets are exported to the collector for analysis.

Flow telemetry events enhance and complement current flows in Nexus Dashboard Insights. They enrich anomaly generation for flow telemetry and flow telemetry events.

It monitors security, performance, and troubleshooting. This is achieved using the periodic flow table event records exported every second.

The data export to Nexus Dashboard Insights is done directly from the hardware without control plane needing to handle the data. Statistics are assembled as a packet with a configurable MTU size and a defined header. These packets are sent as in-band traffic from Cisco ACI fabric. Headers are configured by software, and packets streamed are UDP packets.

When flow telemetry is available for a triggered flow telemetry event, then you can navigate to flow details page for aggregated information. These events are based on the following drop events:

- **Buffer Drop**—When the switch receives a frame and there are no buffer credits available for either ingress or egress interface, the frame is dropped with buffer. This typically hints at a congestion in the network. The link that is showing the fault could be full or the link containing the destination may be congested. In this case a buffer drop is reported in flow telemetry events.
- **Forward Drop**—The packets that are dropped on the LookUp block (LU) of the Cisco ASIC. In a LU block a packet forwarding decision is made based on the packet header information. If the packet is dropped, forward drop is counted. There may be a variety of reasons when forward drop is counted.
- **Policy Drop**—When a packet enters the fabric, the switch looks at the source and destination EPG to check for a contract that allows this communication. If the source and destination are in different EPG's, and there is no contract that allows this packet type between them, the switch drops the packet and labels it as SECURITY\_GROUP\_DENY. This increments the forward drop counter. In this case a policy drop is reported in flow telemetry events. A policy drop occurs because of missing contracts to allow the communication.
- **Policing Drop**—When packets are dropped due to policer configured at the EPG level or on the ingress interface, then a policing drop anomaly is reported in flow telemetry events.
- **IDS Drop**—The header errors we detected in parser for IDS such as header **cksum** error, IP length mismatch, **CFG\_ft\_ids\_drop\_mask**, **zero DMAC** and so on for both inner and outer headers if applicable. The IDS error codes are detected and translated, which are reported as IDS drop anomalies in flow telemetry events.
- **RTO Inside**—When a TCP retransmission happens for a flow due to a drop inside the fabric, an RTO inside anomaly is raised. This anomaly is aggregated across flows based on destination IP and egress VRF.
- **RTO Outside**—When a flow experiences TCP retransmission, but there is no drop inside the fabric for that flow, then an RTO outside anomaly is raised. This anomaly is aggregated across flows based on destination IP and egress VRF.

## Flow Telemetry Events Vs Flow Telemetry

- The flow telemetry event packets are exported only when configured events occur, where as flow telemetry packets are streamed continuously.
- The flow telemetry events are captured for all traffic, where as flow telemetry is captured for filtered traffic.
- The total number of collectors between flow telemetry and flow telemetry events is 256.

## Guidelines and Limitations for Flow Telemetry Events

- The flow telemetry events do not report policing drop anomalies in Nexus Dashboard Insights, when the egress data plane policer is configured on front-panel ports and there is traffic drop.
- To export flow telemetry events on FX platform switches, you must configure flow telemetry filters.

# Multi-Site Traffic Path

## Multi-Site Traffic Path Trace and Fault Correlation



This is a **Beta** feature. We recommend that you use features marked as **Beta** in your test environments but not in production deployments.

To monitor flows, you can stitch together flows from across two different sites into one single view. This enables you to have end-to-end views for the paths and end-to-end details for the particular flow and the latency information for that flow.

### Use cases for Multi-Site Traffic Path Trace and Fault Correlation:

- You can correlate flows across sites and display flow details with stitched paths.
- You can monitor flows across sites and generate inter-site anomalies that are trigger based.
- You can monitor flows across sites and provide the end-to-end latency.

## Configure Multi-Site Traffic Path Trace and Fault Correlation

In the **Explore** area, you can view the flow path between two ports, their IP addresses, and their VRFs.

1. In **Flows** table, click Record Time to view the flow record details.
2. In the **Flow Path** area, in the flow path, click the **Multi-Site Flow - View in Flow Explore** tab to go to the **Explore** page.

In the **Explore Flows** page, the flow information filters in the Search field auto-populate, and you can see in which sites the flows exist. The **View** query area displays the information with the source IP address, source port information and the destination IP address, destination port information. **Explore** finds and returns all the sites where this flow was discovered for the specified VRF.

Next, select the appropriate source and destination sites to view their aggregated information, path summary, and anomalies. You must specify which site you want as your source and which site you want as your destination. Cisco Nexus Dashboard Insights will stitch the information based on your input. You can only choose one source and one destination at a time to stitch together this information. Based upon your selection of source and destination sites, Cisco Nexus Dashboard Insights returns the names of the sites that it finds.

In the **Flow Path Summary** area, details for the two sites are displayed in the **Explore** page as a graphical flow path that displays the end-to-end information, from source to destination. You can see the first site with the endpoint and a set of nodes and it is connected to the second site with the second set of nodes followed by the endpoint. It will also identify the firewall in the path if a firewall is present. The graph also captures the end-to-end flow path network latency.

Specific details for the source and the destination sites are displayed in each of the flows tables. In the **Anomalies** table, choose **Grouped** to view the grouped anomalies for your selections flows.



If you enter different flow details in the Search field in the **Explore** page, you can view in which sites those flow exists. Alternatively, in the **Explore** page, you can directly begin your search by entering details in the Search field for details about flows and the Flow Path across more than one site.

# Copyright

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

The documentation set for this product strives to use bias-free language. For the purposes of this documentation set, bias-free is defined as language that does not imply discrimination based on age, disability, gender, racial identity, ethnic identity, sexual orientation, socioeconomic status, and intersectionality. Exceptions may be present in the documentation due to language that is hardcoded in the user interfaces of the product software, language used based on RFP documentation, or language that is used by a referenced third-party product.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <http://www.cisco.com/go/trademarks>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

© 2017–2024 Cisco Systems, Inc. All rights reserved.