

# ASA 55xx-XアプライアンスでのFirepower Threat Defenseのインストールとアップグレード

## 内容

[概要](#)

[前提条件](#)

[要件](#)

[使用するコンポーネント](#)

[背景説明](#)

[設定](#)

[ネットワーク図](#)

[FTD ソフトウェアのダウンロード](#)

[作業2:ASA5508-X ROMMONのアップグレード](#)

[作業3:ASA55xx-XへのFTDブートイメージのインストール](#)

[作業4:ASA55xx-XへのFTDシステムイメージのインストール](#)

[作業5:FTDをFMCに登録する](#)

[作業6:FTDのアップグレード](#)

[タスク7:LINAエンジンのCLIモードからの接続と切断](#)

[作業8:既存のFTDインストールの再イメージ化](#)

[関連情報](#)

## 概要

このドキュメントでは、ASA55xx-XアプライアンスでのFirepower Threat Defense(FTD)のインストール、アップグレード、および登録手順について説明します。

## 前提条件

### 要件

このドキュメントに特有の要件はありません。

### 使用するコンポーネント

このドキュメントの情報は、次のソフトウェアとハードウェアのバージョンに基づいています。

- ASA5508-X
- ASA5512-X
- 6.0.1 (ビルド 1213) を実行している FireSIGHT Management Center 構成 ( FMC )

このドキュメントの情報は、特定のラボ環境にあるデバイスに基づいて作成されました。このドキュメントで使用するすべてのデバイスは、初期 ( デフォルト ) 設定の状態から起動しています

。本稼働中のネットワークでは、各コマンドによって起こる可能性がある影響を十分確認してください。

## 背景説明

FTDは、次のプラットフォームにインストールできる統合ソフトウェアイメージです。


- ASA5506-X, ASA5506W-X, ASA5506H-X, ASA5508-X, ASA5516-X
- ASA5512-X, ASA5515-X, ASA5525-X, ASA5545-X, ASA5555-X
- FPR4100, FPR9300
- VMware ( ESXi )
- Amazon Web Services ( AWS )
- KVM
- ISR ルータ モジュール

このドキュメントの目標は以下について説明することです。

- ASA5508-X と ASA5512-X プラットフォームへの FTD バージョン 6.0.0 のインストール
- FTD をバージョン 6.0.0 を 6.0.1 へアップグレードする手順
- Firepower Management Center ( FMC ) の登録と基本的なライセンス

## 設定

### ネットワーク図

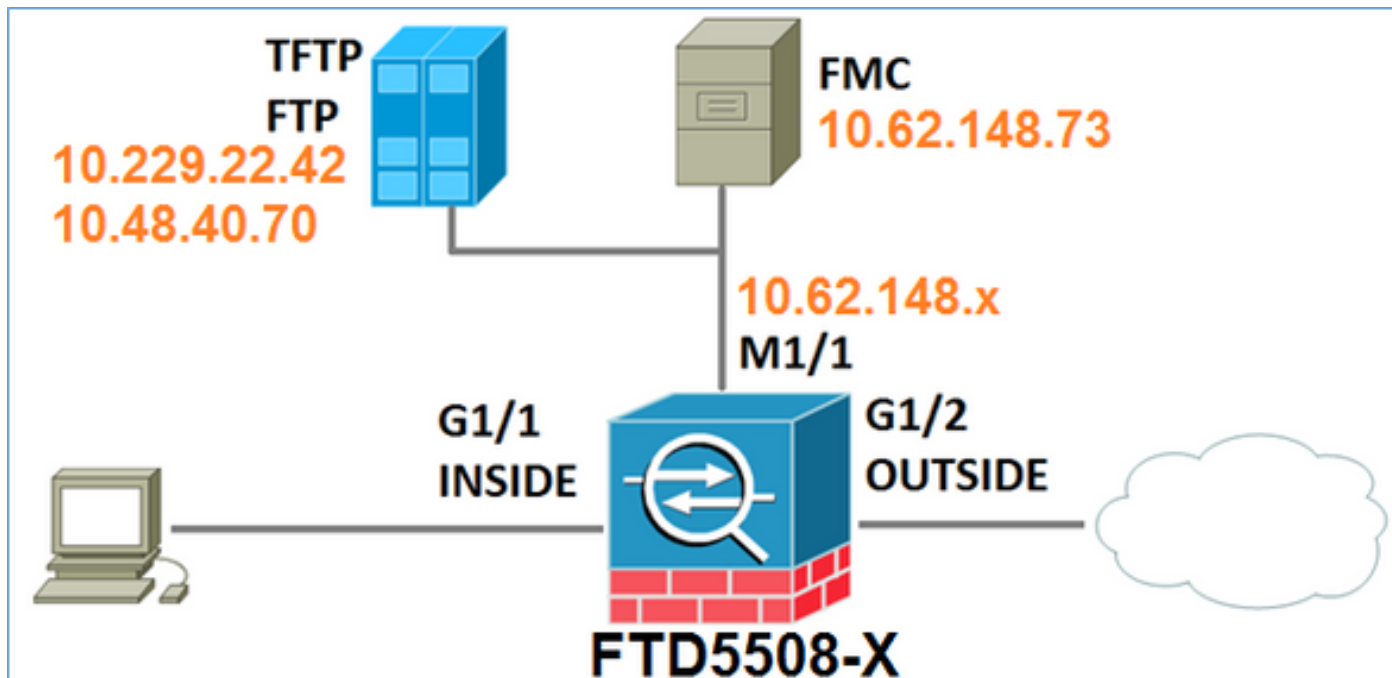

### FTD ソフトウェアのダウンロード

[Next-Generation Firewalls (NGFW)] > [ASA with FirePOWER Services] > [ASA 5508-X with FirePOWER Services]に移動し、[Firepower Threat Defense Software:

Download Software Download Cart (0 items) | Feedback Help

[Downloads Home](#) > [Products](#) > [Security](#) > [Firewalls](#) > [Next-Generation Firewalls \(NGFW\)](#) > [ASA with FirePOWER Services](#) > [ASA 5508-X with FirePOWER Services](#)

Select a Software Type:

- ASA Rommon Software
- Adaptive Security Appliance (ASA) Device Manager
- Adaptive Security Appliance (ASA) Software
- Adaptive Security Appliance REST API Plugin
- FirePOWER Services Software for ASA
- Firepower Threat Defense Software

ASA5512-Xソフトウェアについても同様です。

## 作業1：前提条件の確認

FTDをインストールする前に、前提条件を確認します。

ソリューション：

FTDのインストールでは、次の2つのイメージを使用します。

1. OS イメージ ( AKA ブート イメージ ) : ASA5506-X, ASA5506H-X, ASA5506W-X, ASA5508-X, ASA5516-X の Firepower Threat Defense では、\*.lfbff ファイルです。Saleen (ASA5512-X, ASA5515-X, ASA5525-X, ASA5545-X, ASA5555-X) の Firepower Threat Defense では、\*.cdisk ファイルです。
2. システムイメージ：これは.pkgファイルです。

FTDのインストールに進む前に、次のことを確認してください。

- ASAフラッシュには、少なくとも3.1 GBの空き領域 ( 3 GBバイト+ブートイメージのサイズ ) が必要です
- ブート イメージは TFTP サーバにアップロードされます。
- システム イメージは HTTP または FTP サーバにアップロードされます。
- ASA5506/08/16 では、ROMMON は少なくともバージョン 1.1.8 である必要があります。

空き領域を確認します。

```
FTD5508X# show flash | i free
7859437568 bytes total (4273819648 bytes free)
```

次のイメージを確認します。

ファイル名	説明
ftd-boot-9.6.1.0.lfbff	5506/5508/5516 用の v6.0.1 Firepower Threat Defense ブート イメージ。 これは 5506/5508/5516 でのクリーンインストールのためのブート イメージです。
ftd-boot-9.6.1.0.cdisk	ASA 5512/5515/5525/5545/5555 用の v6.0.1 Firepower Threat Defense ブート イメージ。 これは 5512/5515/5525/5545/5555 でのクリーンインストールのためのブート イメージです。
ftd-6.0.0-1005.pkg	サポートされている次の ASA 用の v6.0.0 Firepower Threat

Defense : 5506/5508/5512/5515/5516/5525/5545/5555。  
これはクリーン インストールのためのシステム イメージ  
です。

## 作業2:ASA5508-X ROMMONのアップグレード

前提条件で説明したように、ASA5506-X、ASA5508-X、およびASA5516-XデバイスはROMMON v1.1.8に存在する必要があります。そうでない場合は、asa5500-firmware-18.SPA Cisco ASAダウンロードページ)。

タスク要件 :

ASA5508 ROMMONを1.1.1から1.1.8にアップグレードします。

ソリューション :

この手順は「[ASA ROMMON アップグレードガイド](#)」で説明しています。

ステップ1 : 既存のROMMONバージョンを確認します。

```
FTD5508X# show module
Mod  Card Type                               Model                               Serial No.
-----
  1  ASA 5508-X with FirePOWER services, 8GE, AC, ASA5508           JAD192100SZ
sfr  FirePOWER Services Software Module   ASA5508                             JAD192100SZ

Mod  MAC Address Range                       Hw Version   Fw Version   Sw Version
-----
  1  188b.9d1e.ca7c to 188b.9d1e.ca84   1.0          1.1.1        9.5(2)
sfr  188b.9d1e.ca7b to 188b.9d1e.ca7b   N/A          N/A          5.4.1-211
```

ステップ2:ROMMONファームウェアをASAのフラッシュにダウンロードします。

```
FTD5508X# copy ftp://10.48.40.70/ANG/mzafeiro/asa5500-firmware-1108.SPA disk0:asa5500-firmware-1108.SPA
Address or name of remote host [10.48.40.70]?

Source filename [ANG/mzafeiro/asa5500-firmware-1108.SPA]?

Destination filename [asa5500-firmware-1108.SPA]?

Accessing ftp://10.48.40.70/ANG/mzafeiro/asa5500-firmware-1108.SPA...!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!! Done!
Computed Hash   SHA2: d824bdeecce1308fc64427367fa559e9
              eefe8f182491652ee4c05e6e751f7a4f
              5cdea28540cf60acde3ab9b65ff55a9f
              4e0cfb84b9e2317a856580576612f4af

Embedded Hash  SHA2: d824bdeecce1308fc64427367fa559e9
              eefe8f182491652ee4c05e6e751f7a4f
              5cdea28540cf60acde3ab9b65ff55a9f
              4e0cfb84b9e2317a856580576612f4af

Digital signature successfully validated
Writing file disk0:/asa5500-firmware-1108.SPA...
```

!!!!!!!!!!

9241408 bytes copied in 18.890 secs (513411 bytes/sec)

### ステップ3:ASA ROMMONイメージをアップグレードします。

FTD5508X# **upgrade rommon disk0:asa5500-firmware-1108.SPA**  
**Verifying file integrity of disk0:/asa5500-firmware-1108.SPA**

Computed Hash   SHA2: d824bdeecee1308fc64427367fa559e9  
                  eefe8f182491652ee4c05e6e751f7a4f  
                  5cdea28540cf60acde3ab9b65ff55a9f  
                  4e0cfb84b9e2317a856580576612f4af

Embedded Hash   SHA2: d824bdeecee1308fc64427367fa559e9  
                  eefe8f182491652ee4c05e6e751f7a4f  
                  5cdea28540cf60acde3ab9b65ff55a9f  
                  4e0cfb84b9e2317a856580576612f4af

#### **Digital signature successfully validated**

File Name                   : disk0:/asa5500-firmware-1108.SPA  
Image type                  : Release  
  Signer Information  
    Common Name             : abraxas  
    Organization Unit       : NCS\_Kenton\_ASA  
    Organization Name       : CiscoSystems  
Certificate Serial Number   : 55831CF6  
Hash Algorithm              : SHA2 512  
Signature Algorithm         : 2048-bit RSA  
Key Version                 : A

#### **Verification successful.**

System config has been modified. Save? [Y]es/[N]o: **Y**  
Cryptochecksum: cb47de8a cad3b773 7fc07212 3e76ef4f

2804 bytes copied in 0.260 secs

**Proceed with reload? [confirm]**

\*\*\*

\*\*\* --- START GRACEFUL SHUTDOWN ---

\*\*\*

\*\*\* Message to all terminals:

\*\*\*

#### **\*\*\* Performing upgrade on rom-monitor.**

Shutting down License Controller

Shutting down File system

\*\*\*

\*\*\* --- SHUTDOWN NOW ---

\*\*\*

\*\*\* Message to all terminals:

\*\*\*

#### **\*\*\* Performing upgrade on rom-monitor.**

Process shutdown finished

Rebooting.....

INIT: Sending processes the TERM signal

Deconfiguring network interfaces... done.

Sending all processes the TERM signal...

Sending all processes the KILL signal...

Deactivating swap...

Unmounting local filesystems...

Rebooting...

Rom image verified correctly

Cisco Systems ROMMON, Version 1.1.01, RELEASE SOFTWARE  
Copyright (c) 1994-2014 by Cisco Systems, Inc.  
Compiled Mon 10/20/2014 15:59:12.05 by builder

Current image running: Boot ROM0  
Last reset cause: PowerCycleRequest  
DIMM Slot 0 : Present  
DIMM Slot 1 : Present  
**INFO: Rommon upgrade state: ROMMON\_UPG\_START (1)**  
INFO: Reset code: 0x00002000

**Firmware upgrade step 1... Looking for file 'disk0:asa5500-firmware-1108.SPA' Located 'asa5500-firmware-1108.SPA' @ cluster 856765.**

#####

Image base 0x77014018, size 9241408

**LFBFF signature verified.**

Objtype: lfbff\_object\_rommon (0x800000 bytes @ 0x77014238)

Objtype: lfbff\_object\_fpga (0xd0100 bytes @ 0x77814258)

INFO: FPGA version in upgrade image: 0x0202

INFO: FPGA version currently active: 0x0202

INFO: The FPGA image is up-to-date.

**INFO: Rommon version currently active: 1.1.01. INFO: Rommon version in upgrade image: 1.1.08.**

Active ROMMON: Preferred 0, selected 0, booted 0

Switching SPI access to standby rommon 1.

**Please DO NOT reboot the unit, updating ROMMON..... INFO: Duplicating machine state..... Reloading now as step 1 of the rommon upgrade process... Toggling power on system board... Rom image verified correctly**

Cisco Systems ROMMON, Version 1.1.01, RELEASE SOFTWARE  
Copyright (c) 1994-2014 by Cisco Systems, Inc.  
Compiled Mon 10/20/2014 15:59:12.05 by builder

Current image running: Boot ROM0  
Last reset cause: RP-Reset  
DIMM Slot 0 : Present  
DIMM Slot 1 : Present  
INFO: Rommon upgrade state: ROMMON\_UPG\_START (1)  
INFO: Reset code: 0x00000008  
Active ROMMON: Preferred 0, selected 0, booted 0

**Firmware upgrade step 2...**

Detected current rommon upgrade is available, continue rommon upgrade process

Rommon upgrade reset 0 in progress

Reloading now as step 2 of the rommon upgrade process...

Rom image verified correctly

**Cisco Systems ROMMON, Version 1.1.8, RELEASE SOFTWARE**  
Copyright (c) 1994-2015 by Cisco Systems, Inc.  
Compiled Thu 06/18/2015 12:15:56.43 by builders

Current image running: \*Upgrade in progress\* Boot ROM1  
Last reset cause: BootRomUpgrade  
DIMM Slot 0 : Present  
DIMM Slot 1 : Present  
INFO: Rommon upgrade state: ROMMON\_UPG\_START (1)

INFO: Reset code: 0x00000010  
PROM B: stopping boot timer  
Active ROMMON: Preferred 0, selected 0, booted 1  
INFO: Rommon upgrade state: ROMMON\_UPG\_TEST

!!  
!! Please manually or auto boot ASAOS now to complete firmware upgrade !!  
!!

Platform ASA5508 with 8192 Mbytes of main memory  
MAC Address: 18:8b:9d:1e:ca:7c

Use BREAK or ESC to interrupt boot.  
Use SPACE to begin boot immediately.

Located '.boot\_string' @ cluster 859024.

#  
Attempt autoboot: "boot disk0:/asa952-lfbff-k8.SPA"  
Located 'asa952-lfbff-k8.SPA' @ cluster 818273.

#####  
#####  
#####  
#####  
#####  
#####  
#####  
#####  
#####  
#####  
#####

LFBFF signature verified.  
INIT: version 2.88 booting  
Starting udev  
Configuring network interfaces... done.  
Populating dev cache  
dosfsck 2.11, 12 Mar 2005, FAT32, LFN  
There are differences between boot sector and its backup.  
Differences: (offset:original/backup)  
65:01/00  
Not automatically fixing this.  
Starting check/repair pass.  
/cisco\_config  
"." is missing. Can't fix this yet.  
/cisco\_config  
".." is missing. Can't fix this yet.  
Starting verification pass.  
/cisco\_config  
"." is missing. Can't fix this yet.  
/cisco\_config  
".." is missing. Can't fix this yet.  
/dev/sdb1: 182 files, 849380/1918808 clusters  
dosfsck(/dev/sdb1) returned 0  
IO Memory Nodes: 1  
IO Memory Per Node: 499122176 bytes

Global Reserve Memory Per Node: 314572800 bytes Nodes=1

Processor memory 3807834603  
LCMB: got 499122176 bytes on numa-id=0, phys=0x1b8000000, virt=0x2aaaaae00000  
LCMB: HEAP-CACHE POOL got 314572800 bytes on numa-id=0, virt=0x2aaac8a00000

Compiled on Sat 28-Nov-15 00:16 PST by builders

Total NICs found: 13

```
i354 rev03 Gigabit Ethernet @ irq255 dev 20 index 08 MAC: 188b.9d1e.ca7c
ivshmem rev03 Backplane Data Interface @ index 09 MAC: 0000.0001.0002
en_vtun rev00 Backplane Control Interface @ index 10 MAC: 0000.0001.0001
en_vtun rev00 Backplane Int-Mgmt Interface @ index 11 MAC: 0000.0001.0003
en_vtun rev00 Backplane Ext-Mgmt Interface @ index 12 MAC: 0000.0000.0000
```

**Rom-monitor was successfully upgraded.**

...

次を確認します：

**show module**コマンドを使用して、ROMMONソフトウェアのバージョンを確認できます。

```
FTD5508X> enable
Password:
FTD5508X# show module
```

Mod	Card Type	Model	Serial No.
1	ASA 5508-X with FirePOWER services, 8GE, AC,	ASA5508	JAD192100SZ
sfr	FirePOWER Services Software Module	ASA5508	JAD192100SZ

Mod	MAC Address Range	Hw Version	Fw Version	Sw Version
1	188b.9d1e.ca7c to 188b.9d1e.ca84	1.0	<b>1.1.8</b>	9.5(2)
sfr	188b.9d1e.ca7b to 188b.9d1e.ca7b	N/A	N/A	5.4.1-211

### 作業3:ASA55xx-XへのFTDブートイメージのインストール

タスク要件：

FTD ブート イメージ ftd-boot-9.6.1.0.lfbff を ASA5508-X にインストールします。

ソリューション：

それには複数の方法があります。最初の方法を以下に示します。

方法1. ROMMONから

ステップ1:ASAをリロードし、ROMMONモードに入ります。

```
FTD5508X# reload
Proceed with reload? [confirm]
FTD5508X#
```

```
***
*** --- START GRACEFUL SHUTDOWN ---
Shutting down isakmp
Shutting down webvpn
Shutting down sw-module
Shutting down License Controller
Shutting down File system
```

\*\*\*







ステップ1:ASA execモード ( ROMMONなし ) から、FTDブートイメージをASAフラッシュにコピーします。

```
ciscoasa# copy ftp://10.48.40.70/ANG/mzafeiro/ftd-boot-9.6.1.0.lfbff flash
```

ステップ2 : ディスクからASAイメージを削除します。

```
ciscoasa# delete flash:asa*
```

ASAイメージを削除した後のフラッシュの内容 :

```
ciscoasa# show flash
```

```
--#-- --length-- -----date/time----- path
131 33 May 20 2016 09:27:28 .boot_string
11 4096 Mar 03 2016 11:48:34 log
154 16767 May 20 2016 09:23:48 log/asa-appagent.log
155 465 Mar 03 2016 11:54:58 log/asa-ssp_ntp.log
21 4096 Jun 10 2015 06:45:42 crypto_archive
22 4096 Jun 10 2015 06:46:00 coredumpinfo
23 59 Jun 10 2015 06:46:00 coredumpinfo/coredump.cfg
134 25627616 Dec 01 2015 04:01:58 asdm-752.bin
135 52563 Feb 09 2016 02:49:58 system.cfg
136 25028660 Feb 09 2016 02:50:28 asdm-751-112.bin
137 38409858 Feb 09 2016 02:51:14 anyconnect-win-3.1.10010-k9.pkg
138 25629676 Feb 09 2016 04:38:10 asdm-752-153.bin
```

```
151 100308208 May 20 2016 09:39:57 ftd-boot-9.6.1.0.lfbff <--
```

ステップ3:ASAをリロードします。FTDブートイメージからブートします。

```
Located 'ftd-boot-9.6.1.0.lfbff' @ cluster 45093.
```

```
#####
```

```
..
```

```
LFBFF signature verified.
```

```
INIT: version 2.88 booting
```

```
..
```

```
 Cisco FTD Boot 6.0.0 (9.6.1.)
```

```
 Type ? for list of commands
```

```
firepower-boot>
```

## 作業4:ASA55xx-XへのFTDシステムイメージのインストール

ASA5508-XにFTDシステムイメージをインストールします。

### 解決方法

```
firepower-boot> setup
```

```
Welcome to Cisco FTD Setup
```

```
[hit Ctrl-C to abort]
```

```
Default values are inside []
```

```
Enter a hostname [firepower]: FTD5508
```

```
Do you want to configure IPv4 address on management interface?(y/n) [Y]:
```

```
Do you want to enable DHCP for IPv4 address assignment on management interface?(y/n) [Y]: N
```

```
Enter an IPv4 address: 10.62.148.29
```

```
Enter the netmask: 255.255.255.128
```

```
Enter the gateway: 10.62.148.1
```

Do you want to enable DHCP for IPv4 address assignment on management interface?(y/n) [N]: Enter an IPv4 address [10.62.148.29]: Enter the netmask [255.255.255.128]: Enter the gateway [10.62.148.1]: Do you want to configure static IPv6 address on management interface?(y/n) [N]: Stateless autoconfiguration will be enabled for IPv6 addresses. Enter the primary DNS server IP address: **173.38.200.100**

Do you want to configure Secondary DNS Server? (y/n) [n]: **y**  
Enter the secondary DNS server IP address: **144.254.71.184**

Do you want to configure Local Domain Name? (y/n) [n]:

Do you want to configure Search domains? (y/n) [n]:

Do you want to enable the NTP service? [Y]:

Enter the NTP servers separated by commas [203.0.113.126]: **171.68.38.65**

Please review the final configuration:

Hostname: FTD5508

Management Interface Configuration

IPv4 Configuration: static  
IP Address: 10.62.148.29  
Netmask: 255.255.255.128  
Gateway: 10.62.148.1

IPv6 Configuration: Stateless autoconfiguration

DNS Configuration:  
DNS Server: 173.38.200.100  
144.254.71.184

NTP configuration:  
171.68.38.65

CAUTION:

You have selected IPv6 stateless autoconfiguration, which assigns a global address based on network prefix and a device identifier. Although this address is unlikely to change, if it does change, the system will stop functioning correctly.

We suggest you use static addressing instead.

**Apply the changes?(y,n) [Y]:**

Configuration saved successfully!

Applying...

Done.

Press ENTER to continue...

firepower-boot>

FTP サーバとの接続を確認します。

```
firepower-boot> ping 10.229.22.42
PING 10.229.22.42 (10.229.22.42) 56(84) bytes of data.
64 bytes from 10.229.22.42: icmp_seq=1 ttl=124 time=1.30 ms
64 bytes from 10.229.22.42: icmp_seq=2 ttl=124 time=1.32 ms
64 bytes from 10.229.22.42: icmp_seq=3 ttl=124 time=1.45 ms
^C
--- 10.229.22.42 ping statistics ---
3 packets transmitted, 3 received, 0% packet loss, time 2002ms
rtt min/avg/max/mdev = 1.302/1.360/1.458/0.075 ms
```

システム パッケージをインストールします。

firepower-boot> **system install ftp://10.229.22.42/ftd-6.0.0-1005.pkg**

```
##### WARNING #####
# The content of disk0: will be erased during installation! #
#####
```

Do you want to continue? [y/N] **y**

Erasing disk0 ...

Verifying

Enter credentials to authenticate with ftp server

Username: **ftp**

Password:

**Verifying Downloading Extracting**

**<-- Here give it some time (~10 min)**

Package Detail

Description:	Cisco ASA-NGFW 6.0.0-1005 System Install
Requires reboot:	Yes

**Do you want to continue with upgrade? [y]:** **<-- Press Enter**

Warning: Please do not interrupt the process or turn off the system.

Doing so might leave system in unusable state.

Starting upgrade process ...

**Populating new system image** **<-- Here give it some time (~5 min)**

**Reboot is required to complete the upgrade. Press 'Enter' to reboot the system. <-- Press Enter**

Broadcast message from root@firepowStopping OpenBSD Secure Shell server: sshdstopped  
/usr/sbin/sshd (pid 1963)

.  
Stopping Advanced Configuration and Power Interface daemon: stopped /usr/sbin/acpid (pid 1967)  
acpid: exiting

acpid.

Stopping system message bus: dbus.

Stopping ntpd: stopped process in pidfile '/var/run/ntp.pid' (pid 2055)  
done

Stopping crond: OK

Deconfiguring network interfaces... done.

Sending all processes the TERM signal...

Sending all processes the KILL signal...

Deactivating swap...

Unmounting local filesystems...

Rebooting... ÿ

Rom image verified correctly

Cisco Systems ROMMON, Version 1.1.8, RELEASE SOFTWARE

Copyright (c) 1994-2015 by Cisco Systems, Inc.

Compiled Thu 06/18/2015 12:15:56.43 by builders

Current image running: Boot ROM1

Last reset cause: PowerCycleRequest

DIMM Slot 0 : Present

DIMM Slot 1 : Present

Platform ASA5508 with 8192 Mbytes of main memory

MAC Address: 18:8b:9d:1e:ca:7c

Use BREAK or ESC to interrupt boot.

Use SPACE to begin boot immediately.

Located '.boot\_string' @ cluster 186016.

#

Attempt autoboot: "boot disk0:os.img"  
Located 'os.img' @ cluster 160001.

```
#####  
LFBFF signature verified.  
INIT: version 2.88 booting  
Starting udev  
Configuring network interfaces... done.  
Populating dev cache  
Detected PID ASA5508.  
Found device serial number JAD192100SZ.  
Found USB flash drive /dev/sdb  
Found hard drive(s): /dev/sda  
fsck from util-linux 2.23.2  
dosfsck 2.11, 12 Mar 2005, FAT32, LFN  
/dev/sdb1: 7 files, 26064/1919063 clusters
```

```
=====  
Use ESC to interrupt boot and launch boot CLI.  
Use SPACE to launch Cisco FTD immediately.  
Cisco FTD launch in 20 seconds ...
```

```
Running on kenton  
Mounting disk partitions ...  
Initializing Threat Defense ... [ OK ]  
Starting system log daemon... [ OK ]  
Flushing all current IPv4 rules and user defined chains: ...success  
Clearing all current IPv4 rules and user defined chains: ...success  
Applying iptables firewall rules:  
Flushing chain `PREROUTING'  
Flushing chain `INPUT'  
Flushing chain `FORWARD'  
Flushing chain `OUTPUT'  
Flushing chain `POSTROUTING'  
Flushing chain `INPUT'  
Flushing chain `FORWARD'  
Flushing chain `OUTPUT'  
Applying rules succeeded  
Flushing all current IPv6 rules and user defined chains: ...success  
Clearing all current IPv6 rules and user defined chains: ...success  
Applying ip6tables firewall rules:  
Flushing chain `PREROUTING'  
Flushing chain `INPUT'  
Flushing chain `FORWARD'  
Flushing chain `OUTPUT'  
Flushing chain `POSTROUTING'  
Flushing chain `INPUT'  
Flushing chain `FORWARD'  
Flushing chain `OUTPUT'  
Applying rules succeeded  
Starting nscd...  
mkdir: created directory '/var/run/nscd' [ OK ]  
Starting , please wait...grep: /ngfw/etc/motd: No such file or directory  
...complete.  
Firstboot detected, executing scripts  
Executing S01reset_failopen_if [ OK ]  
Executing S04fix-httpd.sh [ OK ]  
Executing S05set-mgmt-port [ OK ]  
Executing S06addusers [ OK ]  
Executing S07uuid-init [ OK ]  
Executing S09configure_mysql [ OK ]
```

\*\*\*\*\* Attention \*\*\*\*\*

Initializing the configuration database. Depending on available system resources (CPU, memory, and disk), this may take 30 minutes or more to complete.

\*\*\*\*\* Attention \*\*\*\*\*

```
Executing S10database [ OK ]
Executing S12install_infodb [ OK ]
Executing S15set-locale.sh [ OK ]
Executing S16update-sensor.pl [ OK ]
Executing S19cert-tun-init [ OK ]
Executing S20cert-init [ OK ]
Executing S21disable_estreamer [ OK ]
Executing S25create_default_des.pl [ OK ]
Executing S30init_lights_out_mgmt.pl [ OK ]
Executing S40install_default_filters.pl [ OK ]
Executing S42install_default_dashboards.pl [ OK ]
Executing S43install_default_report_templates.pl [ OK ]
Executing S44install_default_app_filters.pl [ OK ]
Executing S45install_default_realms.pl [ OK ]
Executing S47install_default_sandbox_EO.pl [ OK ]
Executing S50install-remediation-modules [ OK ]
Executing S51install_health_policy.pl [ OK ]
Executing S52install_system_policy.pl [ OK ]
Executing S53change_reconciliation_baseline.pl [ OK ]
Executing S70update_sensor_objects.sh [ OK ]
Executing S85patch_history-init [ OK ]
Executing S90banner-init [ OK ]
Executing S95copy-crontab [ OK ]
Executing S96grow_var.sh [ OK ]
```

\*\*\*\*\* Attention \*\*\*\*\*

Initializing the system's localization settings. Depending on available system resources (CPU, memory, and disk), this may take 10 minutes or more to complete.

\*\*\*\*\* Attention \*\*\*\*\*

```
Executing S96localize-templates [ OK ]
Executing S96ovf-data.pl [ OK ]
Executing S97compress-client-resources [ OK ]
Executing S97create_platinum_forms.pl [ OK ]
Executing S97install_cloud_support.pl [ OK ]
Executing S97install_geolocation.pl [ OK ]
Executing S97install_ssl_inspection.pl [ OK ]
Executing S97update_modprobe.pl [ OK ]
Executing S98check-db-integrity.sh [ OK ]
Executing S98htaccess-init [ OK ]
Executing S99correct_ipmi.pl [ OK ]
Executing S99start-system [ OK ]
Executing S99z_db_restore [ OK ]
Firstboot scripts finished.
Configuring NTP... [ OK ]
Model reconfigure detected, executing scripts
Pinging mysql
Found mysql is running
Executing 45update-sensor.pl [ OK ]
Executing 55recalculate_arc.pl [ OK ]
Starting xinetd:
Mon Mar 14 18:28:11 UTC 2016
Starting MySQL...
Pinging mysql
Pinging mysql, try 1
Found mysql is running
```

```

Running initializeObjects...
Stopping MySQL...
Killing mysqld with pid 10993
Wait for mysqld to exit\c
done
Mon Mar 14 18:28:21 UTC 2016
Starting sfid... [ OK ]
Starting Cisco ASA5508-X Threat Defense, please wait...No PM running!
...started.
INIT: Starting system message bus: dbus.
Starting OpenBSD Secure Shell server: sshd
generating ssh RSA key...
generating ssh ECDSA key...
generating ssh DSA key...
done.
Starting Advanced Configuration and Power Interface daemon: acpid.
Starting crond: OK
Mar 14 18:28:26 ciscoasa SF-IMS[11490]: [11490] init script:system [INFO] pmmon Setting affinity
to 5-7...
pid 11486's current affinity list: 0-7
pid 11486's new affinity list: 5-7
Mar 14 18:28:26 ciscoasa SF-IMS[11492]: [11492] init script:system [INFO] pmmon The Process
Manager is not running...
Mar 14 18:28:26 ciscoasa SF-IMS[11493]: [11493] init script:system [INFO] pmmon Starting the
Process Manager...
Mar 14 18:28:26 ciscoasa SF-IMS[11494]: [11494] pm:pm [INFO] Using model number 75K

Cisco ASA5508-X Threat Defense v6.0.0 (build 1005)
ciscoasa login:
Compiled on Sat 07-Nov-15 16:13 PST by builders

Total NICs found: 13
i354 rev03 Gigabit Ethernet @ irq255 dev 20 index 08 MAC: 188b.9d1e.ca7c
ivshmem rev03 Backplane Data Interface @ index 09 MAC: 0000.0001.0002
en_vtun rev00 Backplane Control Interface @ index 10 MAC: 0000.0001.0001
en_vtun rev00 Backplane Int-Mgmt Interface @ index 11 MAC: 0000.0001.0003
en_vtun rev00 Backplane Ext-Mgmt Interface @ index 12 MAC: 0000.0000.0000

INFO: Unable to read firewall mode from flash
Writing default firewall mode (single) to flash

INFO: Unable to read cluster interface-mode from flash
Writing default mode "None" to flash
Verify the activation-key, it might take a while...
Failed to retrieve permanent activation key.
Running Permanent Activation Key: 0x00000000 0x00000000 0x00000000 0x00000000 0x00000000
The Running Activation Key is not valid, using default settings:

Licensed features for this platform:
Maximum Physical Interfaces : Unlimited perpetual
Maximum VLANs : 50 perpetual
Inside Hosts : Unlimited perpetual
Failover : Active/Active perpetual
Encryption-DES : Enabled perpetual
Encryption-3DES-AES : Disabled perpetual
Security Contexts : 2 perpetual
GTP/GPRS : Disabled perpetual
AnyConnect Premium Peers : 4 perpetual
AnyConnect Essentials : Disabled perpetual
Other VPN Peers : 100 perpetual
Total VPN Peers : 100 perpetual
Shared License : Disabled perpetual
AnyConnect for Mobile : Disabled perpetual
AnyConnect for Cisco VPN Phone : Disabled perpetual

```



Advanced Endpoint Assessment : Disabled perpetual  
Total UC Proxy Sessions : 320 perpetual  
Botnet Traffic Filter : Disabled perpetual  
Cluster : Disabled perpetual  
VPN Load Balancing : Enabled perpetual

Encryption hardware device : Cisco ASA Crypto on-board accelerator (revision 0x1)

Cisco Adaptive Security Appliance Software Version 99.1(3)194

\*\*\*\*\* Warning \*\*\*\*\*

This product contains cryptographic features and is subject to United States and local country laws governing, import, export, transfer, and use. Delivery of Cisco cryptographic products does not imply third-party authority to import, export, distribute, or use encryption. Importers, exporters, distributors and users are responsible for compliance with U.S. and local country laws. By using this product you agree to comply with applicable laws and regulations. If you are unable to comply with U.S. and local laws, return the enclosed items immediately.

A summary of U.S. laws governing Cisco cryptographic products may be found at:  
<http://www.cisco.com/wwl/export/crypto/tool/stqrg.html>

If you require further assistance please contact us by sending email to [export@cisco.com](mailto:export@cisco.com).

\*\*\*\*\* Warning \*\*\*\*\*

... output omitted ...

Reading from flash...

!  
Cryptochecksum (changed): 6129864f 6298b553 75f279ea e547792b

INFO: Power-On Self-Test in process.

.....

INFO: Power-On Self-Test complete.

INFO: Starting HW-DRBG health test...

INFO: HW-DRBG health test passed.

INFO: Starting SW-DRBG health test...

INFO: SW-DRBG health test passed.

Cisco ASA5508-X Threat Defense v6.0.0 (build 1005)

firepower login: **admin**

Password: <-- **Admin123**

**You must accept the EULA to continue.**

**Press**

... EULA is displayed - output is omitted

END USER LICENSE AGREEMENT

**Please enter 'YES' or press to AGREE to the EULA:**

System initialization in progress. Please stand by.  
You must change the password for 'admin' to continue.  
Enter new password:  
Confirm new password:  
You must configure the network to continue.

You must configure at least one of IPv4 or IPv6.

```
Do you want to configure IPv4? (y/n) [y]: Do you want to configure IPv6? (y/n) [n]:
Configure IPv4 via DHCP or manually? (dhcp/manual) [manual]:
Enter an IPv4 address for the management interface [192.168.45.45]: 10.62.148.29
Enter an IPv4 netmask for the management interface [255.255.255.0]: 255.255.255.128
Enter the IPv4 default gateway for the management interface []: 10.62.148.1
Enter a fully qualified hostname for this system [firepower]: FTD5508
Enter a comma-separated list of DNS servers or 'none' []: 173.38.200.100,144.254.71.184
Enter a comma-separated list of search domains or 'none' []:
If your networking information has changed, you will need to reconnect.
For HTTP Proxy configuration, run 'configure network http-proxy'
```

```
Configure firewall mode? (routed/transparent) [routed]:
Configuring firewall mode ...
```

```
Update policy deployment information
- add device configuration
```

You can register the sensor to a Firepower Management Center and use the Firepower Management Center to manage it. Note that registering the sensor to a Firepower Management Center disables on-sensor Firepower Services management capabilities.

When registering the sensor to a Firepower Management Center, a unique alphanumeric registration key is always required. In most cases, to register a sensor to a Firepower Management Center, you must provide the hostname or the IP address along with the registration key.

```
'configure manager add [hostname | ip address ] [registration key ]'
```

However, if the sensor and the Firepower Management Center are separated by a NAT device, you must enter a unique NAT ID, along with the unique registration key.

```
'configure manager add DONTRESOLVE [registration key ] [ NAT ID ]'
```

Later, using the web interface on the Firepower Management Center, you must use the same registration key and, if necessary, the same NAT ID when you add this sensor to the Firepower Management Center.

>

**ヒント** : noconfirmオプションを使用してイメージをインストールできます。この場合、インストール中にプロンプトは表示されません。

```
firepower-boot>system install noconfirm ftp://10.229.22.42/ftd-6.0.0-1005.pkg
```

FTD 6.1.x以降では、管理モード ( ローカルとリモート ) の入力を求められます。

```
For HTTP Proxy configuration, run 'configure network http-proxy'
```

```
Manage the device locally? (yes/no) [yes]: no
Configure firewall mode? (routed/transparent) [routed]:
```

ローカルモード = ASA55xx-X デバイスにのみ適用されます。FTDは、Firepower Device Manager(FDM)から管理します。

リモートモード = FMCからFTDを管理します

## 確認

```
> show version
-----[ FTD5508 ]-----
Model                : Cisco ASA5508-X Threat Defense (75) Version 6.0.0 (Build 1005)
UUID                 : 8c3f4b7e-ea11-11e5-94f1-f3a55afb51a3
Rules update version : 2015-10-01-001-vrt
VDB version          : 252
-----
```

>

ASA5512/15/25/45/55でのシステムイメージのインストールは、上記と同じです。

## 作業5:FTDをFMCに登録する

FMCサーバへのFTDの登録 次の設定を使用します。

ホスト	10.62.148.29
表示名	FTD5508
登録キー	cisco
グループなし	
アクセスコントロール ポリシー	FTD5508
アクセスコントロール ポリシー の基本ポリシー	なし
アクセスコントロール ポリシーのデフォルト アクション	すべてのトラフィックをブロックします

## 解決方法


ステップ 1 : FTD で FMC サーバを指定します。

```
> configure manager add 10.62.148.73 cisco
Manager successfully configured.
Please make note of reg_key as this will be required while adding Device in FMC.
```



```
> show managers
Host                : 10.62.148.73
Registration Key    : ****
Registration        : pending
RPC Status         :
Type                : Manager
Host                : 10.62.148.73
Registration        : Pending
```

>

ステップ 2 : FTD を追加する前に、スマート ライセンス サーバに FMC を登録する必要があります。スマート ライセンスなしに FTD デバイスを追加しようとすると、次のエラーが表示されま

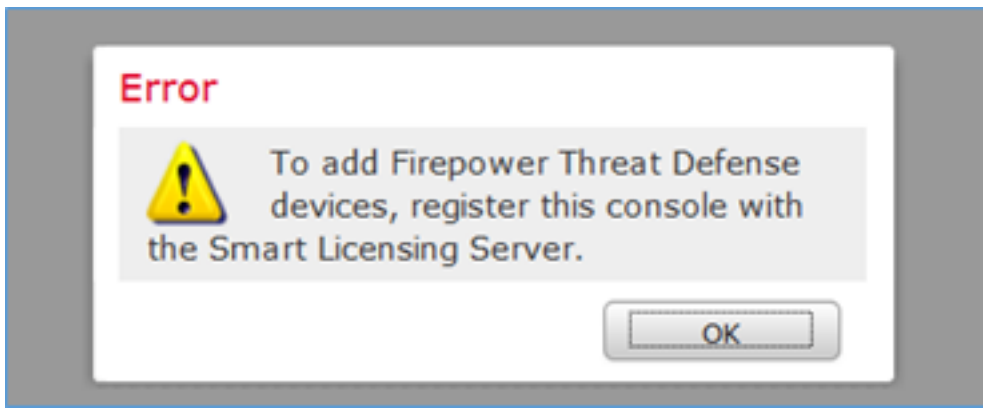

評価モードを選択できます。これにより、強力な暗号化 (VPNなど) を必要とする機能を使用せずに、90日間使用できます。

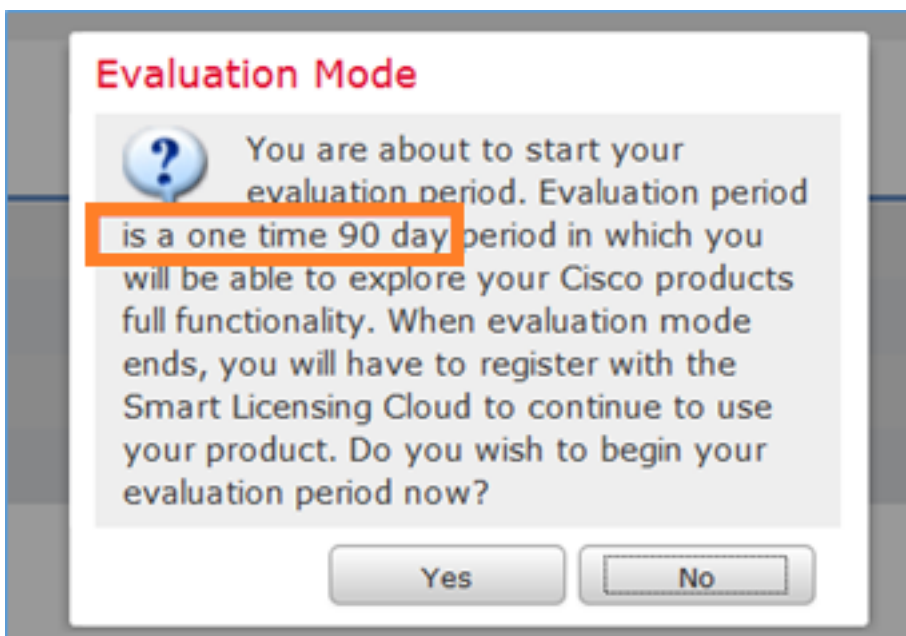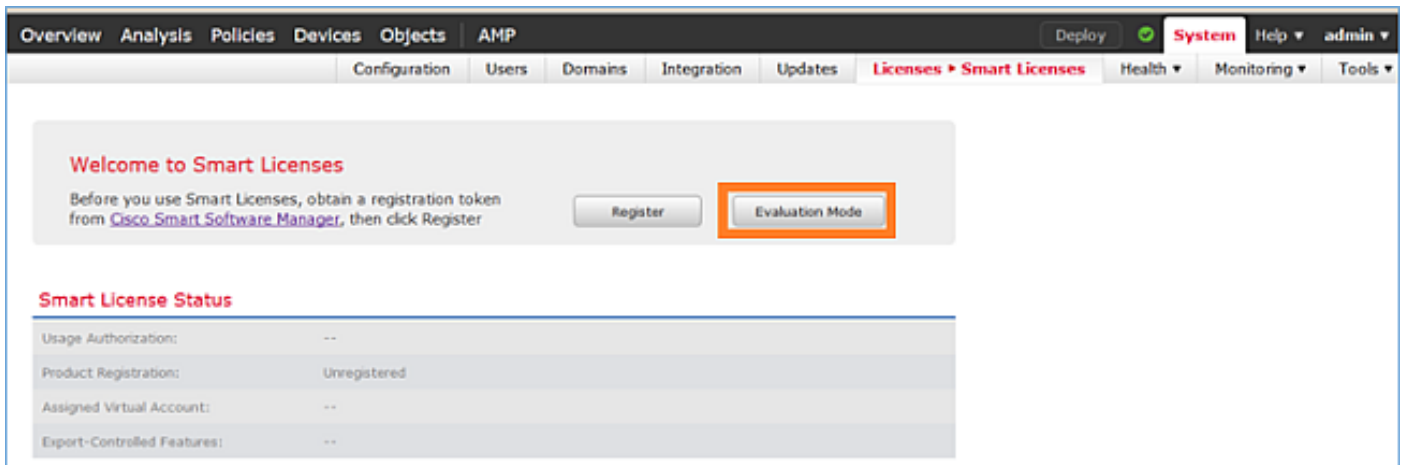

Overview Analysis Policies Devices Objects AMP Deploy System Help admin

Configuration Users Domains Integration Updates Licenses Smart Licenses Health Monitoring Tools

**Welcome to Smart Licenses**

Before you use Smart Licenses, obtain a registration token from [Cisco Smart Software Manager](#), then click Register Register

**Smart License Status** [Cisco Smart Software Manager](#)

Usage Authorization: N/A

Product Registration: ✔ Evaluation Period (Expires in 89 days)

Assigned Virtual Account: Evaluation Mode

Export-Controlled Features: Enabled

**Smart Licenses** Filter Devices... Edit Licenses

License Type/Device Name	License Status	Device Type	Domain	Group
Base (0)				
Malware (0)				
Threat (0)				
URL Filtering (0)				

ステップ3:FMCで、最初にFTDで使用するアクセスコントロールポリシーを作成します。  
 [Policies] > [Access Control]に移動し、[New Policy]を選択します。

Overview Analysis **Policies**

Access Control Network Discovery

**Access Control**

Deploy ✔ System Help admin

Object Management Intrusion Network Analysis Policy DNS Import/Export

**New Policy**

**New Policy** ? x

Name:


Description:

Select Base Policy:

Default Action:  Block all traffic  Intrusion Prevention  Network Discovery

Targeted Devices

FTD デバイスを追加します。

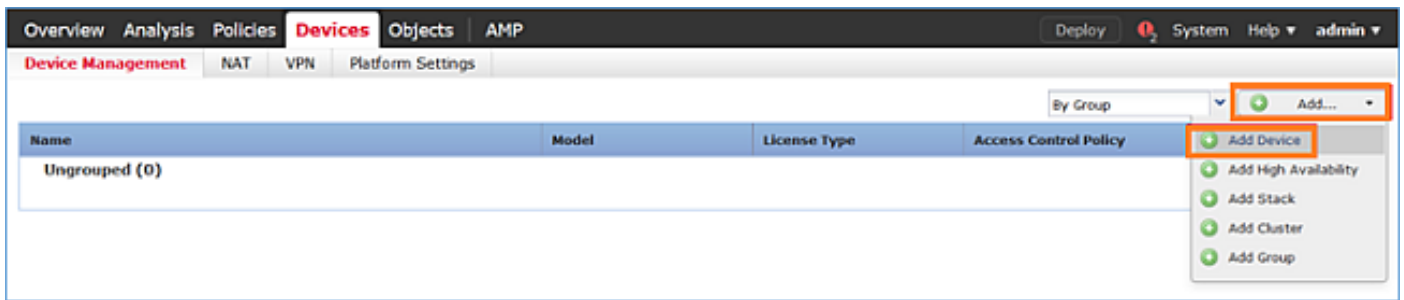

### Add Device

Host: 10.62.148.29

Display Name: FTD5508

Registration Key: cisco **1**

Group: None

Access Control Policy: FTD5508

**Smart Licensing**

Malware:

Threat:


URL Filtering:  **2**

**Advanced**

**3** **Register** Cancel

On version 5.4 devices or earlier, the licensing options will need to be specified from [licensing page](#).

FTD 追加の最後にポリシーが展開されます。

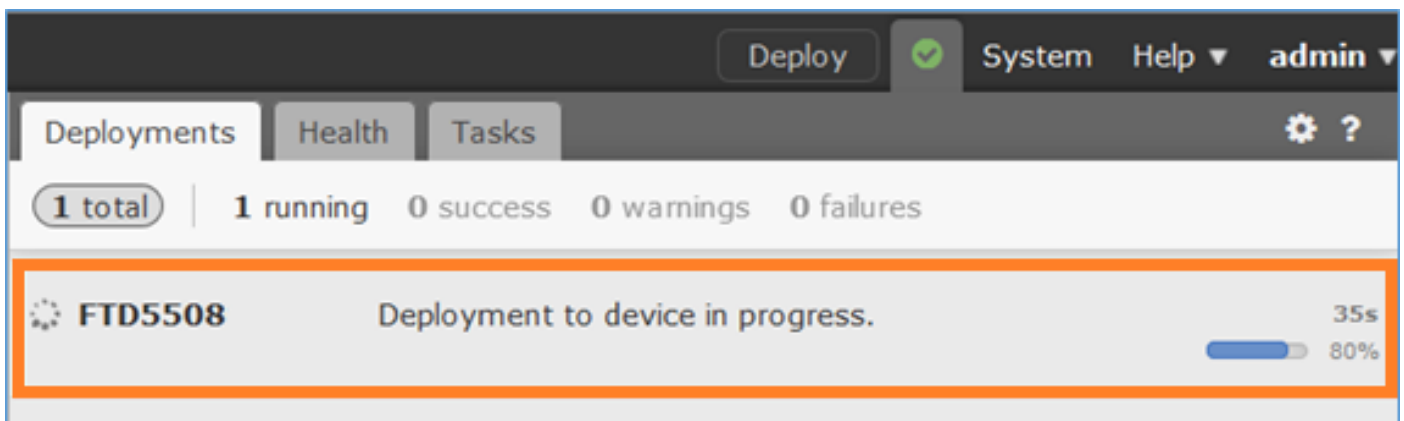

FTDデバイスを追加する際にバックグラウンドで何が起きているかを確認するには、FMCとFTDの両方でピグテルを有効にします。

FMC :

```
admin@fs4k:~$ sudo pigtail
```

```
*****  
*****  
** Displaying logs: ACTQ HTTP DCSM VMSS MOJO NGFW NGUI VMSB TCAT DEPL MSGS USMS  
*****  
*****
```

FTD :

```
> pigtail
```

```
*****  
** Displaying logs: HTTP ACTQ DCSM VMSS MOJO NGUI NGFW TCAT VMSB DEPL USMS MSGS  
*****
```

注：FTD管理インターフェイスのステータスがdownの場合は、confregの値が0x1であることを確認します。


## 作業6:FTDのアップグレード


このタスクで、FTD を 6.0.0 から 6.0.1 にアップグレードします。

	バージョン	ファイル名
最初の FTD イメージ	バージョン 6.0.0 (ビルド 1005)	ftd-6.0.0-1005.pkg
ターゲット FTD イメージ	バージョン 6.0.1 (ビルド 1213)	Cisco_FTD_Upgrade-6.0.1-1213.sh



## 解決方法

ステップ1:FTDイメージをFMCにアップロードします。

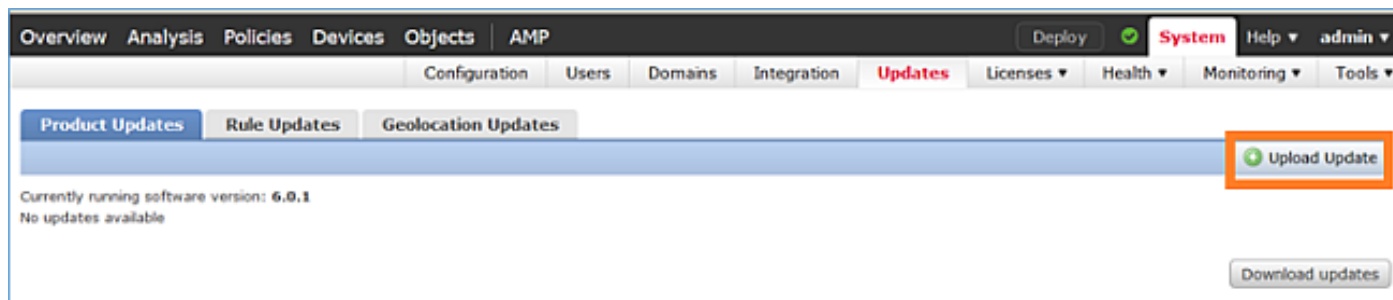

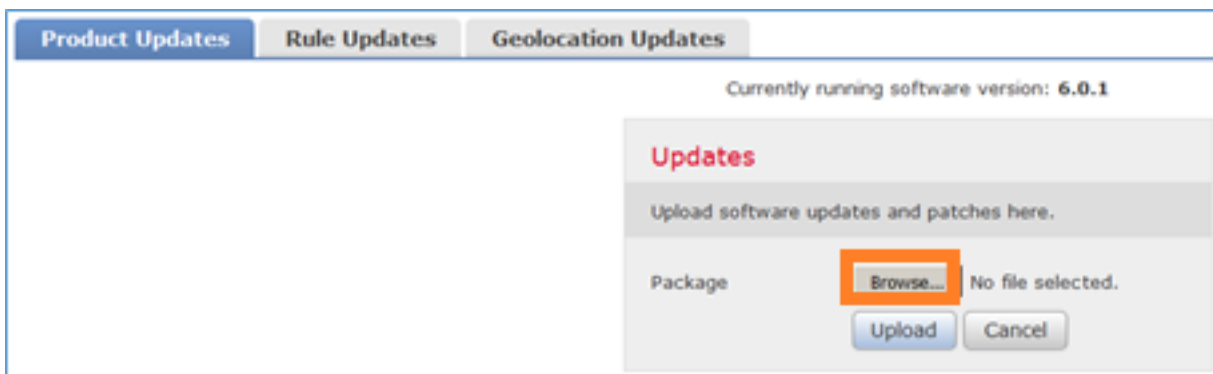


ステップ2:FTDイメージをインストールします。

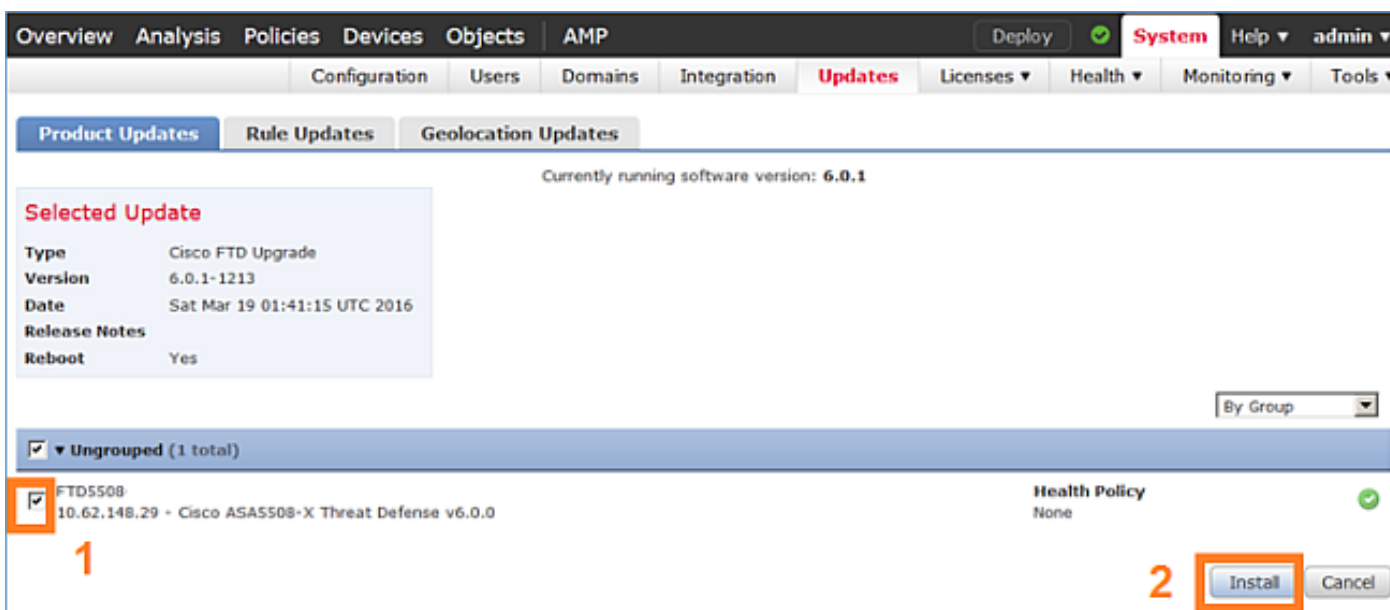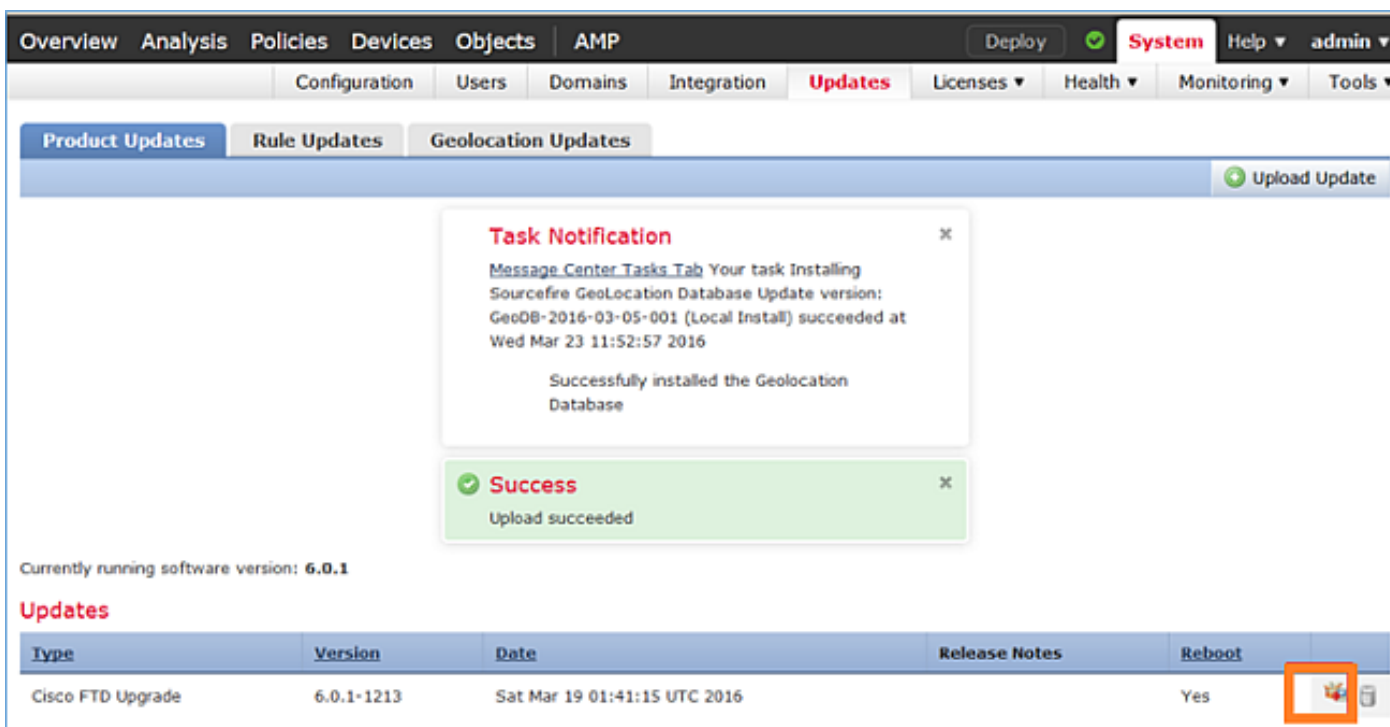


FTDのリロードに関する警告が表示されます。




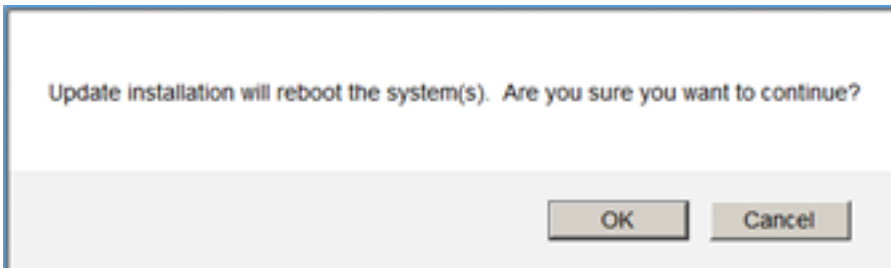

この場合では、アップグレードは約 35 分かかりました。次に示すように、ポリシーを再適用する必要があります。

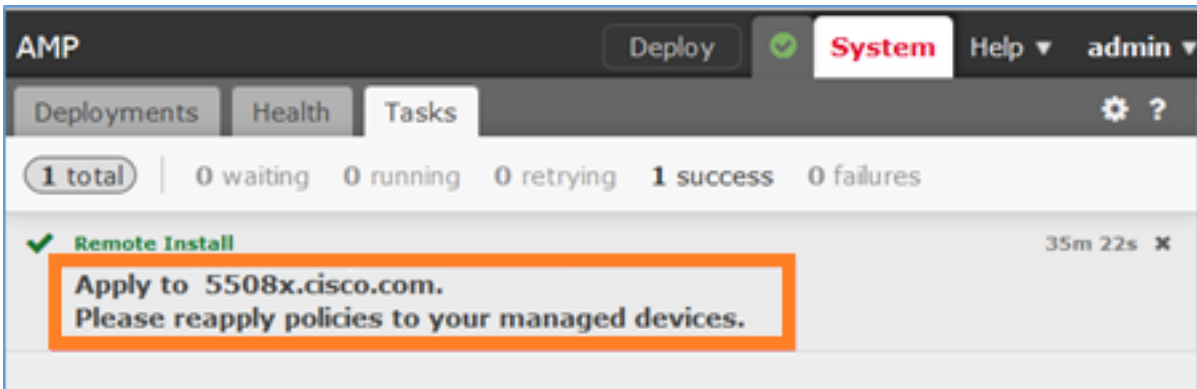

ポリシーを展開します。

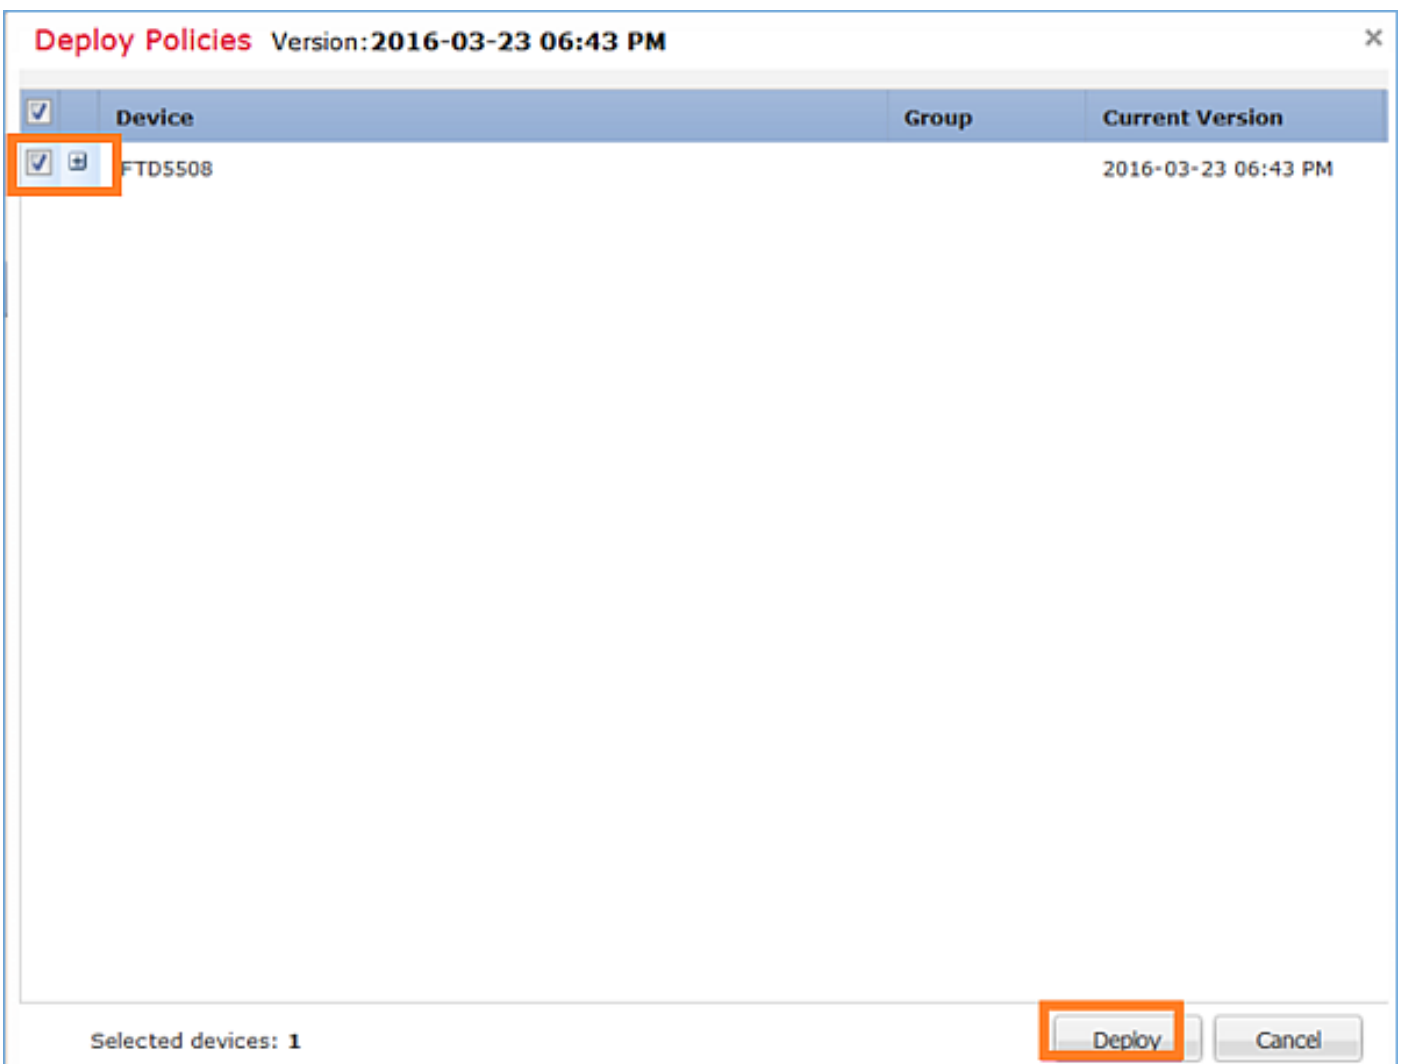

確認

## FTD のアップグレード後

```
> show version
```

```
-----[ FTD5508 ]-----  
Model : Cisco ASA5508-X Threat Defense (75) Version 6.0.1 (Build 1213)  
UUID : 53b44806-f0f4-11e5-88cc-c72c24d24877  
Rules update version : 2016-03-04-001-vrt  
VDB version : 259  
-----
```

```
>
```

## タスク7:LINAエンジンのCLIモードからの接続と切断

LINA CLIモードに切り替え、切断します。

### 解決方法

FTD の CLISH モードから次のコマンドを入力します。

```
> system support diagnostic-cli
```

```
Attaching to ASA console ... Press 'Ctrl+a then d' to detach.  
Type help or '?' for a list of available commands.
```

```
firepower>
```

```
firepower> enable
```

```
Password: <-- by default empty (null)
```

```
firepower#
```

上記のメッセージで説明したように、FTD LINAコンソールから切断 ( 切断 ) するには、Ctrl + aと入力し、dを押します。

```
firepower# <- 'Ctrl+a then d' Console connection detached.
```

```
admin@FTD5508:~$
```

## 作業8 : 既存のFTDインストールの再イメージ化

### 要件

既存の FTD イメージを再適用し、バージョン 6.1.0-330 をインストールします。

### 解決方法

このタスクはコード 6.0.1.x を実行している FTD アプライアンスがあり、何らかの理由でイメージの再適用が必要となったと仮定しています ( 修復不能なデータベース破損、ソフトウェア アップグレードが不能な致命的な欠陥など )。

## 手順の概要

1. 互換性チェック。
2. FMCからFTDを登録解除します。
3. FTD アプライアンスをリロードし、BootCLI を起動します。
4. セットアップウィザードを実行します。
5. FTDシステムイメージをインストールします。
6. FTDをFMCに登録します。

## 手順の詳細

ステップ1:Firepowerリリースノートを確認し、使用するFTDイメージがFMCと互換性があることを確認します。そうでなければ、先に FMC をアップグレードします。

ステップ2:FMCからFTDを登録解除 ( 削除 ) します。FTD にイメージを再適用すると、その UUID が変更されて再登録ができなくなるのに最初から追加される必要があるため、この登録削除の手順が必要です。

ステップ3:FTDアプライアンスをリロードし、BootCLIを入力します。既存の FTD イメージはすでにインストール済みなので、FTD ブート イメージのインストールは省略できます。

```
> reboot
```

```
This command will reboot the system. Continue?  
Please enter 'YES' or 'NO': YES
```

```
Broadcast messageStopping Cisco ASA5506-X Threat Defense.....ok  
Shutting down sfisd... [ OK ]  
Clearing static routes  
Unconfiguring default route [ OK ]  
Unconfiguring address on br1 [ OK ]  
Unconfiguring IPv6 [ OK ]  
Downing interface [ OK ]  
Stopping nscd... [ OK ]  
Stopping system log daemon... [ OK ]  
Stopping Threat Defense ...  
cp: cannot stat '/etc/ssh': No such file or directory  
Stopping system message bus: dbus.  
rmdir: failed to remove directory '/etc': Directory not empty [ OK ]  
Un-mounting disk partitions ...  
...
```

Device root is still in use.  
mdadm: Cannot get exclusive access to /dev/md0:Perhaps a running process, mounted filesystem or active volume group?  
Stopping OpenBSD Secure Shell server: sshdstopped /usr/sbin/sshd (pid 4209)  
.  
Stopping Advanced Configuration and Power Interface daemon: stopped /usr/sbin/acpid (pid 4213)  
acpid: exiting  
  
acpid.  
Stopping system message bus: dbus.  
Deconfiguring network interfaces... ifdown: interface br1 not configured  
done.  
Sending all processes the TERM signal...  
Sending all processes the KILL signal...  
Deactivating swap...  
Unmounting local filesystems...  
Rebooting... y  
Rom image verified correctly

Cisco Systems ROMMON, Version 1.1.8, RELEASE SOFTWARE  
Copyright (c) 1994-2015 by Cisco Systems, Inc.  
Compiled Thu 06/18/2015 12:15:56.43 by builders

Current image running: Boot ROM0  
Last reset cause: PowerCycleRequest  
DIMM Slot 0 : Present

Platform ASA5506 with 4096 Mbytes of main memory  
MAC Address: 84:3d:c6:1a:cf:39

Use BREAK or ESC to interrupt boot.  
Use SPACE to begin boot immediately.

Located '.boot\_string' @ cluster 260275.

#  
Attempt autoboot: "boot disk0:"  
Located 'os.img' @ cluster 235457.

#####  
#####  
#####  
#####  
#####  
#####  
#####  
#####  
#####  
#####  
#####  
#####  
#####  
#####  
#####  
#####

LFBBFF signature verified.  
INIT: version 2.88 booting  
Starting udev  
Configuring network interfaces... done.  
Populating dev cache  
Detected PID ASA5506.  
Found device serial number JAD2034008E.  
Found USB flash drive /dev/sdb  
Found hard drive(s): /dev/sda  
fsck from util-linux 2.23.2

```
dosfsck 2.11, 12 Mar 2005, FAT32, LFN
/dev/sdb1: 42 files, 24805/1798467 clusters
```

```
=====
Use ESC to interrupt boot and launch boot CLI.
Use SPACE to launch Cisco FTD immediately.
Cisco FTD launch in 23 seconds ...          < Press ESC to enter BootCLI
Launching boot CLI ...
Configuring network interface using DHCP
Bringing up network interface.
Depending on your network, this might take a couple of minutes when using DHCP...
ifup: interface lo already configured
Using IPv6 address: fe80::863d:c6ff:fela:cf38
IPv4 address not assigned. Run 'setup' before installation.
INIT: Starting system message bus: dbus.
Starting OpenBSD Secure Shell server: sshd
    generating ssh RSA key...
    generating ssh ECDSA key...
    generating ssh DSA key...
done.
Starting Advanced Configuration and Power Interface daemon: acpid.
acpid: starting up

acpid: 1 rule loaded

acpid: waiting for events: event logging is off

Starting ntpd: done
Starting syslog-ng:[2017-01-14T11:20:33.699619] Connection failed; fd='15',
server='AF_INET(127.128.254.1:514)', local='AF_INET(0.0.0.0:0)', error='Network is unreachable
(101)'
[2017-01-14T11:20:33.699704] Initiating connection failed, reconnecting; time_reopen='60'
.
Starting crond: OK

Cisco FTD Boot 6.0.0 (9.6.2.)
Type ? for list of commands
firepower-boot>
```

ステップ4：セットアップウィザードを実行し、基本的なネットワークパラメータを設定します。

```
firepower-boot>setup

Welcome to Cisco FTD Setup
[hit Ctrl-C to abort]
Default values are inside []

Enter a hostname [firepower]: FTD5506
Do you want to configure IPv4 address on management interface?(y/n) [Y]: Y
Do you want to enable DHCP for IPv4 address assignment on management interface?(y/n) [Y]: n
Enter an IPv4 address: 10.48.66.83
Enter the netmask: 255.255.255.128
Enter the gateway: 10.48.66.1
Do you want to configure static IPv6 address on management interface?(y/n) [N]: N
```

```
Stateless autoconfiguration will be enabled for IPv6 addresses.
Enter the primary DNS server IP address: 192.168.0.1
Do you want to configure Secondary DNS Server? (y/n) [n]: n
Do you want to configure Local Domain Name? (y/n) [n]: n
Do you want to configure Search domains? (y/n) [n]: n
Do you want to enable the NTP service? [Y]: n
Please review the final configuration:
Hostname:          FTD5506
Management Interface Configuration
```

```
IPv4 Configuration:    static
    IP Address:        10.48.66.83
    Netmask:           255.255.255.128
    Gateway:           10.48.66.1
```

```
IPv6 Configuration:    Stateless autoconfiguration
```

```
DNS Configuration:
    DNS Server:        192.168.0.1
```

```
NTP configuration:     Disabled
```

CAUTION:

You have selected IPv6 stateless autoconfiguration, which assigns a global address based on network prefix and a device identifier. Although this address is unlikely to change, if it does change, the system will stop functioning correctly. We suggest you use static addressing instead.

```
Apply the changes?(y,n) [Y]:      Y
Configuration saved successfully!
Applying...
Restarting network services...
Done.
Press ENTER to continue...
firepower-boot>
```

## ステップ 5 : FTD システムイメージが置かれているサーバ ( FTP、HTTP など ) との接続を確認し、インストールを開始します。

```
firepower-boot>ping 10.48.40.70
PING 10.48.40.70 (10.48.40.70) 56(84) bytes of data.
64 bytes from 10.48.40.70: icmp_seq=1 ttl=64 time=555 ms
64 bytes from 10.48.40.70: icmp_seq=2 ttl=64 time=0.465 ms
64 bytes from 10.48.40.70: icmp_seq=3 ttl=64 time=0.511 ms
--- 10.48.40.70 ping statistics ---
3 packets transmitted, 3 received, 0% packet loss, time 2000ms
rtt min/avg/max/mdev = 0.465/185.466/555.424/261.599 ms

firepower-boot > system install noconfirm ftp://anonymous:cisco@10.48.40.70/ftd-6. 1.0-330.pkg

##### WARNING #####
# The content of disk0: will be erased during installation! #
#####

Do you want to continue? [y/N] y
Erasing disk0 ...
Verifying
Downloading
```

Extracting

Package Detail

Description: Cisco ASA-FTD 6.1.0-330 System Install  
Requires reboot: Yes

Warning: Please do not interrupt the process or turn off the system.  
Doing so might leave system in unusable state.

Starting upgrade process ...

Populating new system image

... output omitted ...

Firstboot detected, executing scripts

Executing S01reset_failopen_if	[ OK ]
Executing S01virtual-machine-reconfigure	[ OK ]
Executing S02aws-pull-cfg	[ OK ]
Executing S02configure_onbox	[ OK ]
Executing S04fix-httpd.sh	[ OK ]
Executing S05set-mgmt-port	[ OK ]
Executing S06addusers	[ OK ]
Executing S07uuid-init	[ OK ]
Executing S08configure_mysql	[ OK ]

\*\*\*\*\* Attention \*\*\*\*\*

Initializing the configuration database. Depending on available system resources (CPU, memory, and disk), this may take 30 minutes or more to complete.

\*\*\*\*\* Attention \*\*\*\*\*

Executing S09database-init	[ OK ]
Executing S11database-populate	[ OK ]
Executing S12install_infodb	[ OK ]
Executing S15set-locale.sh	[ OK ]
Executing S16update-sensor.pl	[ OK ]
Executing S19cert-tun-init	[ OK ]
Executing S20cert-init	[ OK ]
Executing S21disable_estreamer	[ OK ]
Executing S25create_default_des.pl	[ OK ]
Executing S30init_lights_out_mgmt.pl	[ OK ]
Executing S40install_default_filters.pl	[ OK ]
Executing S42install_default_dashboards.pl	[ OK ]
Executing S43install_default_report_templates.pl	[ OK ]
Executing S44install_default_app_filters.pl	[ OK ]
Executing S45install_default_realms.pl	[ OK ]
Executing S47install_default_sandbox_EO.pl	[ OK ]
Executing S50install-remediation-modules	[ OK ]
Executing S51install_health_policy.pl	[ OK ]
Executing S52install_system_policy.pl	[ OK ]
Executing S53change_reconciliation_baseline.pl	[ OK ]
Executing S70remove_casuser.pl	[ OK ]
Executing S70update_sensor_objects.sh	[ OK ]
Executing S85patch_history-init	[ OK ]
Executing S90banner-init	[ OK ]
Executing S95copy-crontab	[ OK ]
Executing S96grow_var.sh	[ OK ]
Executing S96install_vmware_tools.pl	[ OK ]

\*\*\*\*\* Attention \*\*\*\*\*

Initializing the system's localization settings. Depending on available system resources (CPU, memory, and disk), this may take 10 minutes or more to complete.

\*\*\*\*\* Attention \*\*\*\*\*

```
Executing S96localize-templates [ OK ]
Executing S96ovf-data.pl [ OK ]
Executing S97compress-client-resources [ OK ]
Executing S97create_platinum_forms.pl [ OK ]
Executing S97install_cas [ OK ]
Executing S97install_cloud_support.pl [ OK ]
Executing S97install_geolocation.pl [ OK ]
Executing S97install_ssl_inspection.pl [ OK ]
Executing S97update_modprobe.pl [ OK ]
Executing S98check-db-integrity.sh [ OK ]
Executing S98htaccess-init [ OK ]
Executing S98is-sru-finished.sh [ OK ]
Executing S99correct_ipmi.pl [ OK ]
Executing S99start-system [ OK ]
Executing S99z_db_restore [ OK ]
Executing S99_z_cc-integrity.sh [ OK ]
```

Firstboot scripts finished.

```
Configuring NTP... [ OK ]
```

fatattr: can't open '/mnt/disk0/.private2': No such file or directory

fatattr: can't open '/mnt/disk0/.ngfw': No such file or directory

Model reconfigure detected, executing scripts

Pinging mysql

Found mysql is running

```
Executing 45update-sensor.pl [ OK ]
```

```
Executing 55recalculate_arc.pl [ OK ]
```

Starting xinetd:

Sat Jan 14 12:07:35 UTC 2017

Starting MySQL...

Pinging mysql

Pinging mysql, try 1

Pinging mysql, try 2

Found mysql is running

Running initializeObjects...

Stopping MySQL...

Killing mysqld with pid 22354

Wait for mysqld to exit\c

done

Sat Jan 14 12:07:57 UTC 2017

```
Starting sfid... [ OK ]
```

Starting Cisco ASA5506-X Threat Defense, please wait...No PM running!

...started.

... output omitted ...

firepower login: **admin**

Password: < **Admin123**

You must accept the EULA to continue.

Press <ENTER> to display the EULA:

END USER LICENSE AGREEMENT

...

Please enter 'YES' or press <ENTER> to AGREE to the EULA:

System initialization in progress. Please stand by.

You must change the password for 'admin' to continue.

Enter new password:

Confirm new password:

You must configure the network to continue.

You must configure at least one of IPv4 or IPv6.

Do you want to configure IPv4? (y/n) [y]:

Do you want to configure IPv6? (y/n) [n]:

Configure IPv4 via DHCP or manually? (dhcp/manual) [manual]:

Enter an IPv4 address for the management interface [192.168.45.45]: **10.48.66.83**



```
Enter an IPv4 netmask for the management interface [255.255.255.0]: 255.255.255.128
Enter the IPv4 default gateway for the management interface [192.168.45.1]: 10.48.66.1
Enter a fully qualified hostname for this system [firepower]: FTD5506
Enter a comma-separated list of DNS servers or 'none' []: 192.168.0.1
Enter a comma-separated list of search domains or 'none' []:
If your networking information has changed, you will need to reconnect.
For HTTP Proxy configuration, run 'configure network http-proxy'
```

```
Manage the device locally? (yes/no) [yes]: no
Configure firewall mode? (routed/transparent) [routed]:
Configuring firewall mode ...
```

```
Update policy deployment information
- add device configuration
- add network discovery
- add system policy
```

You can register the sensor to a Firepower Management Center and use the Firepower Management Center to manage it. Note that registering the sensor to a Firepower Management Center disables on-sensor Firepower Services management capabilities.

When registering the sensor to a Firepower Management Center, a unique alphanumeric registration key is always required. In most cases, to register a sensor to a Firepower Management Center, you must provide the hostname or the IP address along with the registration key.

```
'configure manager add [hostname | ip address ] [registration key ]'
```

However, if the sensor and the Firepower Management Center are separated by a NAT device, you must enter a unique NAT ID, along with the unique registration key.

```
'configure manager add DONTRESOLVE [registration key ] [ NAT ID ]'
```

Later, using the web interface on the Firepower Management Center, you must use the same registration key and, if necessary, the same NAT ID when you add this sensor to the Firepower Management Center.

## ステップ6:FTDをFMCに登録する

```
> configure manager add 10.62.148.50 cisco
```

```
Manager successfully configured.
```

```
Please make note of reg_key as this will be required while adding Device in FMC.
```

```
> show managers
```

```
Host                : 10.62.148.50
Registration Key     : ****
Registration         : pending
RPC Status           :
```

FMCで、[Devices] > [Device Management]に移動し、FTDデバイスを追加します。

FMCへFTDを追加した後、以下の処理が必要となります。

- インターフェイスやルーティングなど、デバイスの再設定
- VPN や QoS などのポリシーの再設定
- アクセス コントロール ポリシー、NAT、プラットフォーム設定など、以前適用済みのポリシーや設定の再適用

## 関連情報

- [インストールおよびアップグレード ガイド](#)
- [Cisco ASA または Firepower Threat Defense デバイスのイメージの再適用](#)
- [テクニカル サポートとドキュメント – Cisco Systems](#)